

Tecno Spark 10 Pro

Tecno Mobile Spark 10 Pro Smartphone User Manual

Model: Spark 10 Pro (K17)

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Tecno Mobile Spark 10 Pro Smartphone. Please read this guide thoroughly before operating your device to ensure optimal performance and longevity. Keep this manual for future reference.



Image 1.1: Front and back view of the Tecno Spark 10 Pro Smartphone. The device features a large display on the front and a camera module with three lenses and a flash on the back.

2. WHAT'S IN THE BOX

Upon unboxing your Tecno Spark 10 Pro, please verify that all the following items are included:

- Tecno Spark 10 Pro Smartphone
- Protective case
- Headphones

- Charging brick (power adapter)
- USB-C cable



Image 2.1: The Tecno Spark 10 Pro box contents, including the smartphone, protective case, charging brick, and USB-C cable.

3. INITIAL SETUP

3.1. Inserting SIM and SD Cards

Your Tecno Spark 10 Pro supports Dual SIM functionality and expandable storage via microSDXC. Locate the SIM tray on the side of the device.

1. Use the provided SIM ejector tool to open the SIM tray.
2. Carefully place your Nano-SIM cards and/or microSD card into the designated slots. Ensure the gold contacts face downwards.
3. Gently push the tray back into the slot until it is flush with the device body.



Image 3.1: Side view of the Tecno Spark 10 Pro, highlighting the location of the SIM card tray and volume/power buttons.

3.2. Powering On/Off

- **To Power On:** Press and hold the Power button (located on the side) until the Tecno logo appears.
- **To Power Off:** Press and hold the Power button until the power options menu appears. Select 'Power off'.
- **To Restart:** Press and hold the Power button until the power options menu appears. Select 'Restart'.

3.3. Initial Configuration

Upon first power-on, follow the on-screen instructions to set up your device. This includes selecting your language, connecting to Wi-Fi, setting up your Google account, and configuring security features like the fingerprint sensor.

3.4. Charging the Device

Connect the USB-C cable to the charging port at the bottom of your phone and the other end to the charging brick. Plug the charging brick into a power outlet. The device supports 18W wired charging.



Image 3.2: Bottom view of the Tecno Spark 10 Pro, showing the USB-C charging port, 3.5mm audio jack, and speaker grille.

4. OPERATING YOUR SMARTPHONE

4.1. Touchscreen Navigation

The Tecno Spark 10 Pro features a 6.8-inch IPS LCD display with a 90Hz refresh rate. Navigate the interface using standard touch gestures:

- **Tap:** Select an item or open an app.
- **Swipe:** Scroll through lists or switch between home screens.
- **Pinch:** Zoom in or out on photos and web pages.
- **Long Press:** Access contextual menus or move app icons.



Image 4.1: Front view of the Tecno Spark 10 Pro, showcasing its large 6.8-inch display with a punch-hole front camera.

4.2. Calls and Messaging

- **Making Calls:** Open the Phone app, enter the number, and tap the call icon.
- **Sending Messages:** Open the Messages app, tap 'Start chat', enter the recipient and your message.

4.3. Camera Functions

The device is equipped with a 50 MP main camera and a 32 MP front camera.

1. Open the Camera app.
2. Select your desired mode (Photo, Video, Portrait, etc.).
3. Tap the shutter button to capture an image or start/stop recording.



Image 4.2: Back view of the Tecno Spark 10 Pro, highlighting the 50MP dual camera system with LED flash.

4.4. Connectivity

Your Spark 10 Pro supports various connectivity options:

- **Wi-Fi:** Connect to wireless networks for internet access.
- **Bluetooth 5.0:** Pair with wireless headphones, speakers, and other devices.
- **GPS:** For location services and navigation.
- **NFC:** For contactless payments and quick pairing with compatible devices.

- **4G LTE:** Mobile data connectivity.

4.5. Security Features

The device includes a side-mounted fingerprint sensor for secure unlocking and authentication.

5. MAINTENANCE

5.1. Battery Care

The Tecno Spark 10 Pro is equipped with a 5000 mAh Li-Po battery. To maximize battery life:

- Avoid extreme temperatures.
- Do not let the battery drain completely regularly.
- Use the original charging accessories.

5.2. Cleaning Your Device

Use a soft, lint-free cloth to clean the screen and body of your phone. Avoid using harsh chemicals or abrasive materials.

5.3. Software Updates

Regularly check for and install software updates to ensure your device has the latest features, security patches, and performance improvements. Go to **Settings > System > System update**

5.4. Storage Management

With 128 GB of internal storage, you have ample space for apps and media. You can expand this further using a microSDXC card. Regularly clear unnecessary files and uninstall unused apps to maintain optimal performance.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your Tecno Spark 10 Pro.

Problem	Possible Solution
Device does not turn on	Ensure the battery is charged. Connect to the charger for at least 15 minutes, then try powering on again.
Screen is unresponsive	Restart the device by holding the power button for about 10 seconds. If the issue persists, perform a factory reset (data will be lost).
Cannot connect to Wi-Fi	Ensure Wi-Fi is enabled. Restart your router and the phone. Forget the network and reconnect.
Camera not working	Restart the phone. Clear the cache and data of the Camera app (Settings > Apps > Camera > Storage).
Battery drains quickly	Reduce screen brightness, close unused apps, disable unnecessary background processes, and check battery usage in settings to identify power-hungry apps.

7. TECHNICAL SPECIFICATIONS

Key technical specifications for the Tecno Spark 10 Pro:

Feature	Specification
Operating System	Android 13.0, HIOS 12.6
Processor	MediaTek Helio G88 Octa-Core (2 GHz)
RAM	8 GB
Internal Storage	128 GB (expandable via microSDXC)
Display	6.8-inch IPS LCD, 2460 x 1080 pixels, 90 Hz refresh rate
Rear Camera	50 MP (wide) + 0.08 MP (depth) with Dual LED flash
Front Camera	32 MP (wide) with Dual LED flash
Battery	5000 mAh Li-Po, 18W wired charging
Connectivity	4G LTE, Wi-Fi, Bluetooth 5.0, GPS, NFC, USB Type-C 2.0, 3.5mm audio jack
Sensors	Side-mounted fingerprint, accelerometer, proximity, compass
Dimensions	16.84 x 7.62 x 0.84 cm
Weight	208 g
Model Number	KI7

 
8. WARRANTY AND SUPPORT

Your Tecno Spark 10 Pro is covered by a limited warranty. Please refer to the warranty card included in your product packaging for detailed terms and conditions. For technical support, service, or further inquiries, please visit the official Tecno Mobile website or contact their customer service.

Online Resources: For additional support, FAQs, and software downloads, please visit the official Tecno Mobile support page.



Related Documents - Spark 10 Pro

<p>TECNO SPARK 10 Pro User Manual</p>	<p>TECNO SPARK 10 Pro User Manual</p> <p>User manual for the TECNO SPARK 10 Pro smartphone, detailing its features, specifications, and safety information.</p>
<p>TECNO</p> <p>TECNO SPARK 20C User Manual</p>	<p>TECNO SPARK 20C User Manual - Setup, Features, and FCC Information</p> <p>Official user manual for the TECNO SPARK 20C smartphone. Learn about its features, SIM/SD card installation, charging, FCC compliance, and SAR information.</p>
<p>TECNO</p> <p>TECNO SPARK 30C 5G User Manual</p>	<p>TECNO SPARK 30C 5G User Manual: Setup, Features, and FCC Information</p> <p>Comprehensive user manual for the TECNO SPARK 30C 5G smartphone, covering setup, SIM/SD card installation, charging, and FCC compliance information. Learn about your device's features and specifications.</p>
<p>SPARK 10C User Manual</p>	<p>TECNO SPARK 10C User Manual</p> <p>Comprehensive user manual for the TECNO SPARK 10C smartphone, detailing its features, SIM/SD card installation, charging procedures, and important FCC compliance information.</p>
<p>Know your phone</p>  <p>1. Front camera 2. Volume key 3. Microphone 4. Headset jack</p>	<p>TECNO KG5ks User Manual: Setup, Charging, and FCC Compliance</p> <p>Comprehensive guide for the TECNO KG5ks smartphone, covering initial setup, SIM/SD card installation, charging, and important FCC compliance information including SAR guidelines.</p>

<p>TECNO</p> <p>TECNO SPARK Go 1S User Manual</p>	<p>TECNO SPARK Go 1S User Manual - Setup, Features, and Safety Information</p> <p>Comprehensive user manual for the TECNO SPARK Go 1S smartphone, covering setup, component identification, charging, SIM/SD card installation, and FCC/SAR compliance information.</p>
---	---