

[Manuals.plus](#) /

> [iwoly](#) /

> iwoly C150 Cordless Vacuum Cleaner Instruction Manual

woly woly C150

woly C150 Cordless Vacuum Cleaner Instruction Manual

Model: C150

INTRODUCTION

Thank you for choosing the woly C150 Cordless Vacuum Cleaner. This lightweight, powerful, and versatile vacuum is designed for efficient home cleaning, offering strong suction, a detachable battery, and multi-purpose functionality. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance and longevity of your device.

WHAT'S IN THE BOX

Carefully unpack all components and check against the list below:

- Main Machine & Battery part
- AC Adapter
- LED Motorized Floor Head
- HEPA Filter
- Stainless Steel Filter
- Wall Mount Bracket
- 2-in-1 Nozzle
- Crevice Nozzle
- Extension Tube



- | | |
|-------------------------------|----------------------|
| ① Main Machine & Battery part | ② AC Adapter |
| ③ LED Motorized Floor Head | ④ HEPA Filter |
| ⑤ Stainless Steel Filter | ⑥ Wall Mount Bracket |
| ⑦ 2in1 Nozzle | ⑧ Crevice Nozzle |
| ⑨ Extension Tube | |

Figure 1: All included components of the iwoly C150.

If any parts are missing or damaged, please contact customer support.

SETUP

1. Assembly

1. Attach the extension tube to the main machine until it clicks securely into place.
2. Connect the LED Motorized Floor Head to the other end of the extension tube, ensuring it clicks.
3. For handheld use, attach the 2-in-1 nozzle or crevice nozzle directly to the main machine.

2. Charging the Battery

The iwoly C150 features a detachable 2200mAh Lithium-Ion battery. Ensure the battery is fully charged before first use.

- **Option 1 (On-Vacuum Charging):** Connect the power adapter directly to the charging port on the main machine.

- **Option 2 (Off-Vacuum Charging):** Remove the battery from the main machine and connect the power adapter to the battery pack.

A full charge takes approximately 4 hours. LED indicators on the main body will show the remaining battery power. The wall mount bracket can be used to conveniently store and charge the vacuum.

Neatly Store and Charge



Figure 2: Charging options for the iwoly C150.

OPERATING INSTRUCTIONS

1. Power On/Off and Suction Modes

The vacuum features two buttons on the battery pack for operation:

- Press the power button to turn the vacuum on or off.
- Use the mode button to switch between the 3 suction modes: Eco, Normal, and High.

2. Multi-purpose Cleaning

The iwoly C150 can be easily converted between a stick vacuum and a handheld vacuum to suit various cleaning

needs.

- **Stick Vacuum:** Ideal for hard floors, hardwood, tile, marble, and low-pile carpets. The motorized LED floor head illuminates dust and debris for thorough cleaning.
- **Handheld Vacuum:** Detach the main unit and attach the 2-in-1 nozzle or crevice nozzle for targeted cleaning of stairs, corners, car seats, upholstery, curtains, and high-up areas.

Meet All Your Cleaning Needs



Figure 3: Versatile cleaning with stick and handheld configurations.

High Quality Removable Battery and Three Different Modes



Deep Cleaning of Hard Floors and Carpets



Figure 4: Deep cleaning performance on different floor types.

MAINTENANCE

Regular maintenance ensures your iwoly C150 operates at peak efficiency.

1. Emptying the Dust Cup

The dust cup has a 500ml capacity. Empty it regularly, especially when full, to maintain optimal suction power.

1. Locate the release button on the dust cup.
2. Press the button to detach the dust cup from the main machine.
3. Empty the contents into a waste bin.
4. Reattach the dust cup securely until it clicks.

2. Cleaning Filters

The 4-stage sealed cyclone filtration system includes a HEPA filter, stainless steel filter, and sponge filter. Regular cleaning is crucial to prevent weak suction and blockages.

1. Remove the filters from the dust cup.
2. Tap off any loose dust and debris.
3. Rinse the HEPA filter, stainless steel filter, and sponge filter under running water.
4. Allow all filters to air dry completely for at least 24 hours before reassembling. Do not use the vacuum with wet filters.

Upgraded High Efficiency Filtration System Captures dust and provides clean air



Figure 5: High-efficiency filtration system and cleaning process.

TROUBLESHOOTING

Refer to the table below for common issues and their solutions:

Problem	Possible Cause	Solution
No Power	Battery not charged	Charge the battery fully (approx. 4 hours).

Problem	Possible Cause	Solution
Weak Suction	Clogged filter	Clean HEPA, stainless steel, and sponge filters. Ensure they are dry before reassembly.
Weak Suction	Full dust cup	Empty the dust cup.
Weak Suction	Blockage in tube/head	Check extension tube and floor head for any obstructions.
Short Runtime	Battery not fully charged	Ensure battery is fully charged before use.
Short Runtime	Using High Mode continuously	High mode consumes more battery. Use Eco or Normal mode for longer runtime.

SPECIFICATIONS

Brand	iwoly
Model Name	iwoly C150 Cordless Vacuum Cleaner
Power	150 Watts
Suction Power	18000 Pa
Battery	2200mAh Lithium-Ion (Detachable)
Runtime	Up to 35 minutes (Eco mode)
Charging Time	4 Hours
Dust Cup Capacity	500 Milliliters
Filter Type	HEPA filter, Stainless steel filter, Sponge filter
Noise Level	75 dB
Form Factor	Stick, Handheld
Color	Red
Product Dimensions	10.63"L x 5.51"W x 47"H
Item Weight	5.06 pounds

WARRANTY & SUPPORT

For warranty information, technical support, or service inquiries regarding your iwoly C150 Cordless Vacuum Cleaner, please refer to the contact details provided with your original purchase documentation or visit the official iwoly website. Please retain your proof of purchase for any warranty claims.

