

## Dirt Devil BD30100V

# Dirt Devil Grab and Go+ 8V Cordless Handheld Vacuum Cleaner Instruction Manual

Model: BD30100V

## 1. IMPORTANT SAFETY INSTRUCTIONS

---

When using an electrical appliance, basic precautions should always be followed, including the following:

- Read all instructions before using this appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material, such as chlorine bleach, ammonia, or drain cleaner.
- Do not use without dust cup and filter in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not charge the unit outdoors.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

- Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C (265°F) may cause explosion.
- Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- Do not modify or attempt to repair the appliance or the battery pack (as applicable) except as indicated in the instructions for use and care.

## 2. PRODUCT OVERVIEW

---


The Dirt Devil Grab and Go+ 8V Cordless Handheld Vacuum Cleaner is designed for quick and convenient cleaning tasks. Its lightweight and compact design makes it suitable for various surfaces.

### Included Components:

- Dirt Devil Grab and Go+ Handheld Vacuum
- Charging Stand
- 2-in-1 Dusting Brush and Crevice Tool



**Figure 2.1:** The Dirt Devil Grab and Go+ handheld vacuum resting in its charging stand, showcasing its compact design and integrated tool storage.

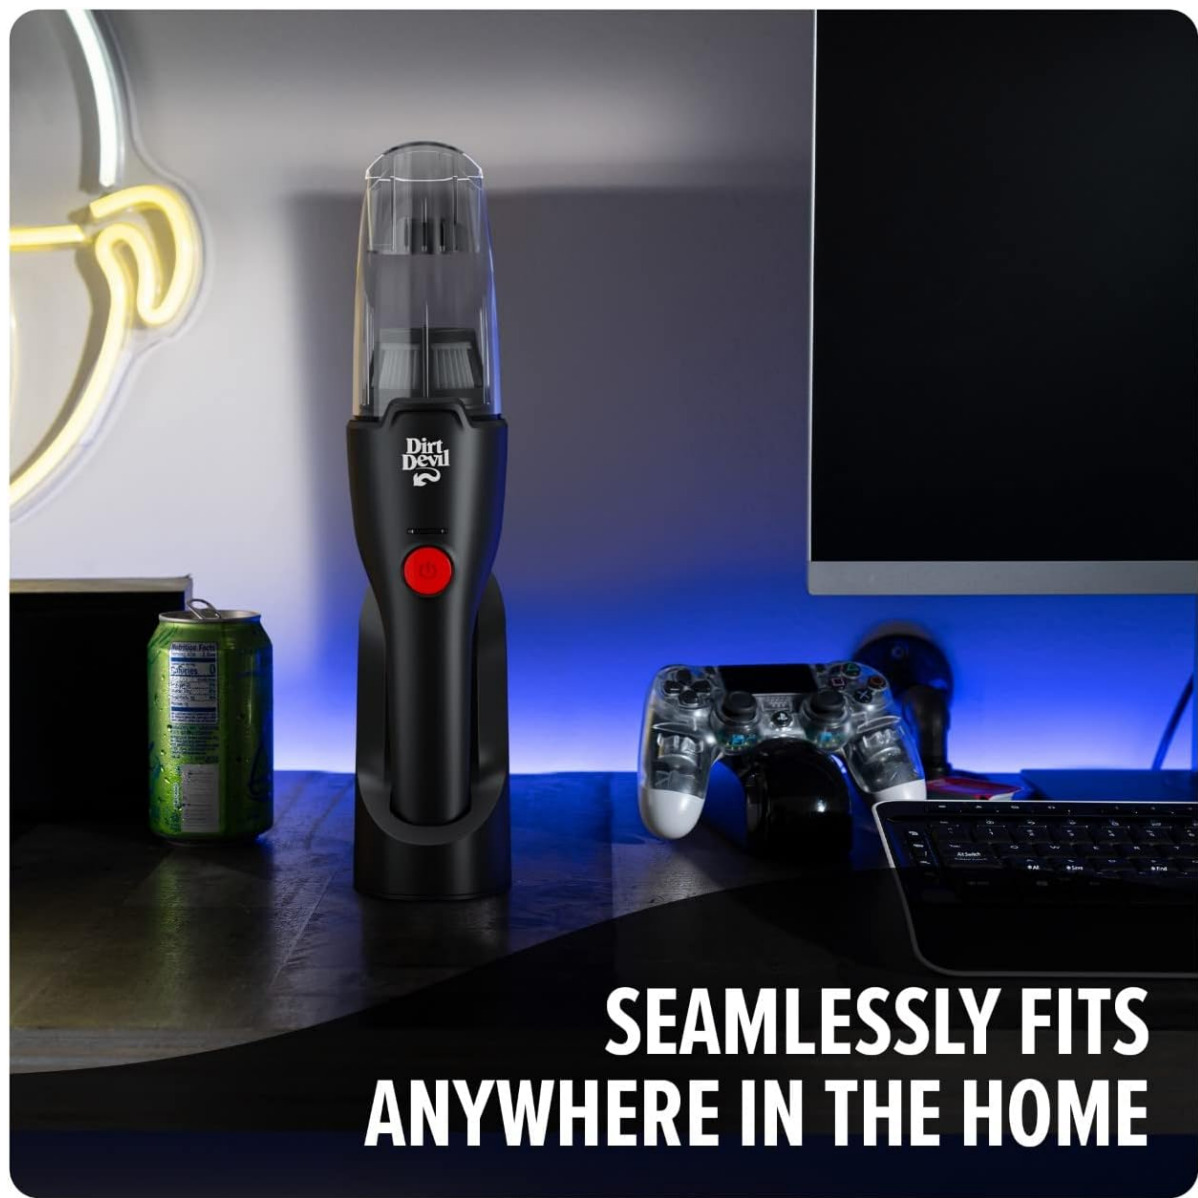

**Figure 2.2:** The vacuum on its charging stand, demonstrating how it seamlessly fits into various home environments, such as a desk or countertop.

## 3. SETUP

---

### 3.1 Initial Charging

1. Unpack the handheld vacuum and charging stand from the packaging.
2. Place the charging stand on a flat, stable surface or mount it to a wall (mounting hardware not included).
3. Insert the vacuum into the charging stand. Ensure it is seated correctly for charging.
4. Plug the charging stand's power adapter into a standard electrical outlet.
5. Allow the vacuum to charge for approximately 4-6 hours before first use. The indicator light will show charging status.

# CHARGE & STORE IN ONE PLACE



**Figure 3.1:** Correctly placing the handheld vacuum onto its charging stand to ensure proper charging and storage.

## 3.2 Attaching the 2-in-1 Tool

The included 2-in-1 dusting brush and crevice tool can be stored directly on the charging stand for convenience. To attach it to the vacuum:

- Align the accessory tool with the vacuum's nozzle opening.
- Push firmly until it clicks into place. Ensure it is securely attached to prevent it from detaching during use.
- To switch between the dusting brush and crevice tool, slide the brush attachment forward or backward as needed.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Powering On/Off

- To turn the vacuum on, press the power button located on the handle.
- To turn the vacuum off, press the power button again.

### 4.2 General Cleaning

The Grab and Go+ is ideal for quick clean-ups on various surfaces. Its powerful 8V suction effectively picks up dust, crumbs, and small debris.

**QUICK, POWERFUL  
SUCTION**



**Figure 4.1:** Demonstrating the vacuum's use for cleaning crumbs and debris from upholstery, such as a couch.





**Figure 4.2:** The handheld vacuum effectively cleaning spilled powder from a kitchen countertop, highlighting its utility for quick kitchen clean-ups.

### 4.3 Using the 2-in-1 Dusting Brush and Crevice Tool

This versatile tool allows you to adapt the vacuum for different cleaning needs:

- **Crevice Tool:** Extend the narrow end to reach tight spaces, corners, and between cushions.
- **Dusting Brush:** Slide the brush attachment over the crevice tool to gently clean delicate surfaces, blinds, and remove dust from furniture.



Figure 4.3: Utilizing the crevice tool attachment to effectively clean dust and debris from a narrow window sill.

## 5. MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

### 5.1 Emptying the Dust Cup

1. Ensure the vacuum is turned off.
2. Locate the dust cup release button or latch, typically near the nozzle.
3. Press the release and carefully detach the dust cup from the main unit.
4. Hold the dust cup over a trash receptacle and empty its contents.
5. Reattach the dust cup securely until it clicks into place.

It is recommended to empty the dust cup after each use or when debris reaches the MAX fill line to maintain suction power.

### 5.2 Cleaning the Filter

The vacuum uses a foam filter. A clean filter is crucial for effective suction.

1. With the dust cup removed, carefully pull out the foam filter.
2. Tap the filter gently over a trash can to remove loose dirt and dust.



- 3. For a more thorough cleaning, rinse the foam filter under cool running water. Do not use soap or detergents.
- 4. Allow the filter to air dry completely for at least 24 hours before reinserting it into the dust cup. Do not use the vacuum with a wet filter.
- 5. Once dry, place the filter back into the dust cup and reattach the dust cup to the vacuum.

**Note:** Replacement filters may be required periodically. Refer to the manufacturer’s website or authorized retailers for compatible replacement parts.

5.3 Storage

Store the vacuum on its charging stand when not in use to ensure it is always ready for operation. Keep the vacuum and its accessories in a cool, dry place.

6. TROUBLESHOOTING

If you encounter issues with your Dirt Devil Grab and Go+ vacuum, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged.	Place the vacuum on the charging stand and ensure it is plugged in. Allow sufficient time for charging.
Reduced suction power.	Dust cup is full.	Empty the dust cup.
Reduced suction power.	Filter is dirty or clogged.	Clean or replace the foam filter as described in the Maintenance section. Ensure the filter is completely dry before reinserting.
Reduced suction power.	Nozzle or hose is blocked.	Turn off the vacuum and remove any obstructions from the nozzle or accessory tool.
Vacuum does not charge.	Charging stand not properly connected.	Ensure the charging stand is securely plugged into a working outlet and the vacuum is correctly seated on the stand.
Accessory tool detaches during use.	Tool not securely attached.	Ensure the 2-in-1 tool is pushed firmly onto the nozzle until it clicks into place.

7. SPECIFICATIONS

Feature	Detail
Brand	Dirt Devil
Model Name	Grab & Go+ 8V Hand Vacuum
Model Number	BD30100V
Special Feature	Lightweight, Portable
Filter Type	Foam
Included Components	Charging Stand, Crevice Tool, Dusting Brush
Cordless	Yes
Capacity	0.1 Liters
Wattage	75 watts




Feature	Detail
Recommended Uses	Home
Form Factor	Handheld
Color	Black
Product Dimensions	13"L x 7.75"W x 3.63"H
Battery Type	Lithium-Ion
Battery Life	Approximately 10 minutes
Item Weight	1.1 pounds
UPC	046034904402

## 8. WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please visit the official Dirt Devil website or contact their customer service department. Keep your purchase receipt as proof of purchase for warranty claims.

**Online Support:** [www.dirtdevil.com/support](http://www.dirtdevil.com/support) (Example link, actual link may vary)

### Related Documents - BD30100V

	<p><a href="#">Dirt Devil Grab &amp; Go Hand Vacuum User Manual - Safety, Operation, and Maintenance</a></p> <p>Detailed user manual for the Dirt Devil Grab &amp; Go Hand Vacuum. Includes essential safety warnings, operating instructions, assembly guide, charging procedures, maintenance tips, and warranty information for optimal product use and longevity.</p>
	<p><a href="#">Dirt Devil Handheld Steamer User Manual - Instructions and Warranty</a></p> <p>Comprehensive user manual for the Dirt Devil Handheld Steamer, including assembly, usage instructions, safety warnings, cleaning tips, and warranty information.</p>
	<p><a href="#">Dirt Devil FLIPOUT Lithium Cordless Hand Vac User Manual</a></p> <p>User manual for the Dirt Devil FLIPOUT Lithium Cordless Hand Vac, providing instructions on setup, use, maintenance, troubleshooting, and warranty information.</p>



### [Dirt Devil Scorpion Hand Vac User Manual](#)

Comprehensive user manual for the Dirt Devil Scorpion Hand Vac, covering setup, usage, maintenance, troubleshooting, and warranty information. Includes safety instructions and replacement parts details.



### [Dirt Devil Scorpion Hand Vac Instruction Manual](#)

Instruction manual for the Dirt Devil Scorpion Hand Vac, covering safety, operation, features, maintenance, troubleshooting, and warranty information.



### [Dirt Devil Versa Cordless 3-in-1 Stick Vacuum User Manual](#)

User manual for the Dirt Devil Versa Cordless 3-in-1 Stick Vacuum, covering assembly, operation, maintenance, troubleshooting, and warranty information. Includes safety warnings and instructions.