

[Manuals.plus](#) /

> [Emerson](#) /

> Emerson 1.2 Cu. Ft. 1000W Inverter Microwave Oven MWI1212SS User Manual

## Emerson MWI1212SS

# Emerson 1.2 Cu. Ft. 1000W Inverter Microwave Oven

MODEL: MWI1212SS

[Safety Information](#)

[Setup](#)

[Operation](#)

[Maintenance  
& Support](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty](#)

## Introduction

Thank you for purchasing the Emerson 1.2 Cu. Ft. 1000W Inverter Microwave Oven, model MWI1212SS. This manual provides essential information for the safe and efficient use of your new appliance. Please read it thoroughly before operation and retain it for future reference.



Figure 1: Emerson 1.2 Cu. Ft. 1000W Inverter Microwave Oven, Stainless Steel.

## Important Safety Information

Always follow basic safety precautions when using electrical appliances to reduce the risk of burns, electric shock, fire, injury to persons, or exposure to excessive microwave energy.

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure proper ventilation around the microwave.

## Setup and Installation

Your Emerson microwave oven is designed for countertop installation. Follow these steps for proper setup:

1. **Unpacking:** Carefully remove all packaging materials and accessories. Inspect the oven for any damage such as dents or a broken door. Do not install if the oven is damaged.
2. **Placement:** Place the microwave on a flat, stable surface that can support its weight. Ensure there is adequate space for ventilation around the unit. The dimensions are approximately 20.4 inches (W) x 15.7 inches (D) x 12.8 inches (H).
3. **Turntable Installation:** Place the roller ring in the center of the oven cavity. Position the glass turntable securely on top of the roller ring. Ensure it rotates freely.
4. **Power Connection:** Plug the microwave into a grounded electrical outlet.



Figure 2: Product dimensions for proper placement.



Figure 3: Microwave oven placed on a kitchen countertop.

## Operating Instructions

This microwave oven features 1000W power, 10 power levels, and 8 pre-programmed settings for convenient cooking. The inverter technology ensures consistent power for even cooking results.

### Control Panel Overview



Figure 4: Close-up of the microwave oven control panel.

## Basic Microwave Cooking

1. Place food in a microwave-safe container on the glass turntable.
2. Close the oven door.
3. Enter desired cooking time using the number pads. The digital timer supports up to 99 minutes and 99 seconds.
4. Press the 'Start/+30SEC' button to begin cooking.
5. To adjust power level, press the 'Power' button and then select a number from 1-10 (10 being 100% power).

## Pre-Programmed Settings

The microwave includes 8 pre-programmed settings for common food items:

- Popcorn
- Reheat
- Beverage
- Pizza
- Potato
- Frozen Vegetable
- Meat
- Soup



Figure 5: Visual representation of the 8 pre-programmed auto cook menu options.

## Child Safety Lock

The microwave is equipped with a child safety lock feature. Refer to the videos below for instructions on how to activate, deactivate, and open the door when the lock is engaged.

*Video 1: Instructions on how to deactivate or reactivate the child resistant door feature.*

*Video 2: Guide on how to open the child resistant microwave oven door after cooking is completed or during cooking.*

## General Operation Overview

*Video 3: An overview of the Emerson 1.2 Cu. Ft. Stainless Steel Microwave Oven in operation.*

## Care and Maintenance

Regular cleaning and proper maintenance will ensure the longevity and optimal performance of your microwave oven.

- **Interior Cleaning:** Clean the oven cavity after each use with a damp cloth and mild detergent. For stubborn stains, boil a cup of water with lemon slices inside the microwave for a few minutes to loosen residue, then wipe clean.
- **Exterior Cleaning:** Wipe the exterior surfaces, including the stainless steel front and black cabinet, with a soft, damp cloth. Avoid abrasive cleaners.
- **Turntable and Roller Ring:** The removable glass turntable and roller ring can be washed with warm soapy water or in the dishwasher. Ensure they are completely dry before placing them back in the oven.
- **Door Seals:** Keep the door seals clean to ensure a proper seal during operation.

## Troubleshooting

If you encounter any issues with your microwave oven, please refer to the following common problems and solutions:

- **Oven not starting:** Ensure the microwave is plugged in correctly and the door is securely closed. Check your household fuse/circuit breaker.
- **Food not heating:** Verify that the cooking time and power level are set correctly. Ensure the door is closed properly.
- **Unusual noise during operation:** Check if the turntable and roller ring are correctly positioned and free from obstructions.
- **Display not working:** Unplug the microwave for a few minutes, then plug it back in to reset the system.

For problems not listed here or if issues persist, please contact Emerson customer support.

## Specifications

<b>Brand</b>	Emerson
<b>Model Number</b>	MWI1212SS
<b>Capacity</b>	1.2 Cubic Feet
<b>Wattage</b>	1000 Watts
<b>Power Levels</b>	10
<b>Pre-Programmed Settings</b>	8 (Popcorn, Reheat, Beverage, Pizza, Potato, Frozen Vegetable, Meat, Soup)
<b>Dimensions (D x W x H)</b>	15.7"D x 20.4"W x 12.8"H
<b>Material</b>	Stainless Steel
<b>Special Features</b>	Child Safety Lock, Defrost, Shortcut Keys, Timer, Turntable, Inverter Technology
<b>Included Components</b>	Removable Glass Turntable, Roller Ring

## Warranty and Support

---

This Emerson microwave oven comes with a 90-day warranty from the date of purchase. Please retain your proof of purchase for warranty claims.

For technical assistance, warranty service, or to order replacement parts, please contact Emerson customer support through their official website or the contact information provided in your product packaging.