

manuals.plus /

- › [Casio](#) /
- › [Casio Illuminator W-201-1BV Digital Watch Instruction Manual](#)

Casio W-201-1BV

Casio Illuminator W-201-1BV Digital Watch Instruction Manual

Model: W-201-1BV

PRODUCT OVERVIEW

This manual provides detailed instructions for the Casio Illuminator W-201-1BV digital watch. Please read this manual carefully to ensure proper use and to fully utilize all features of your watch.

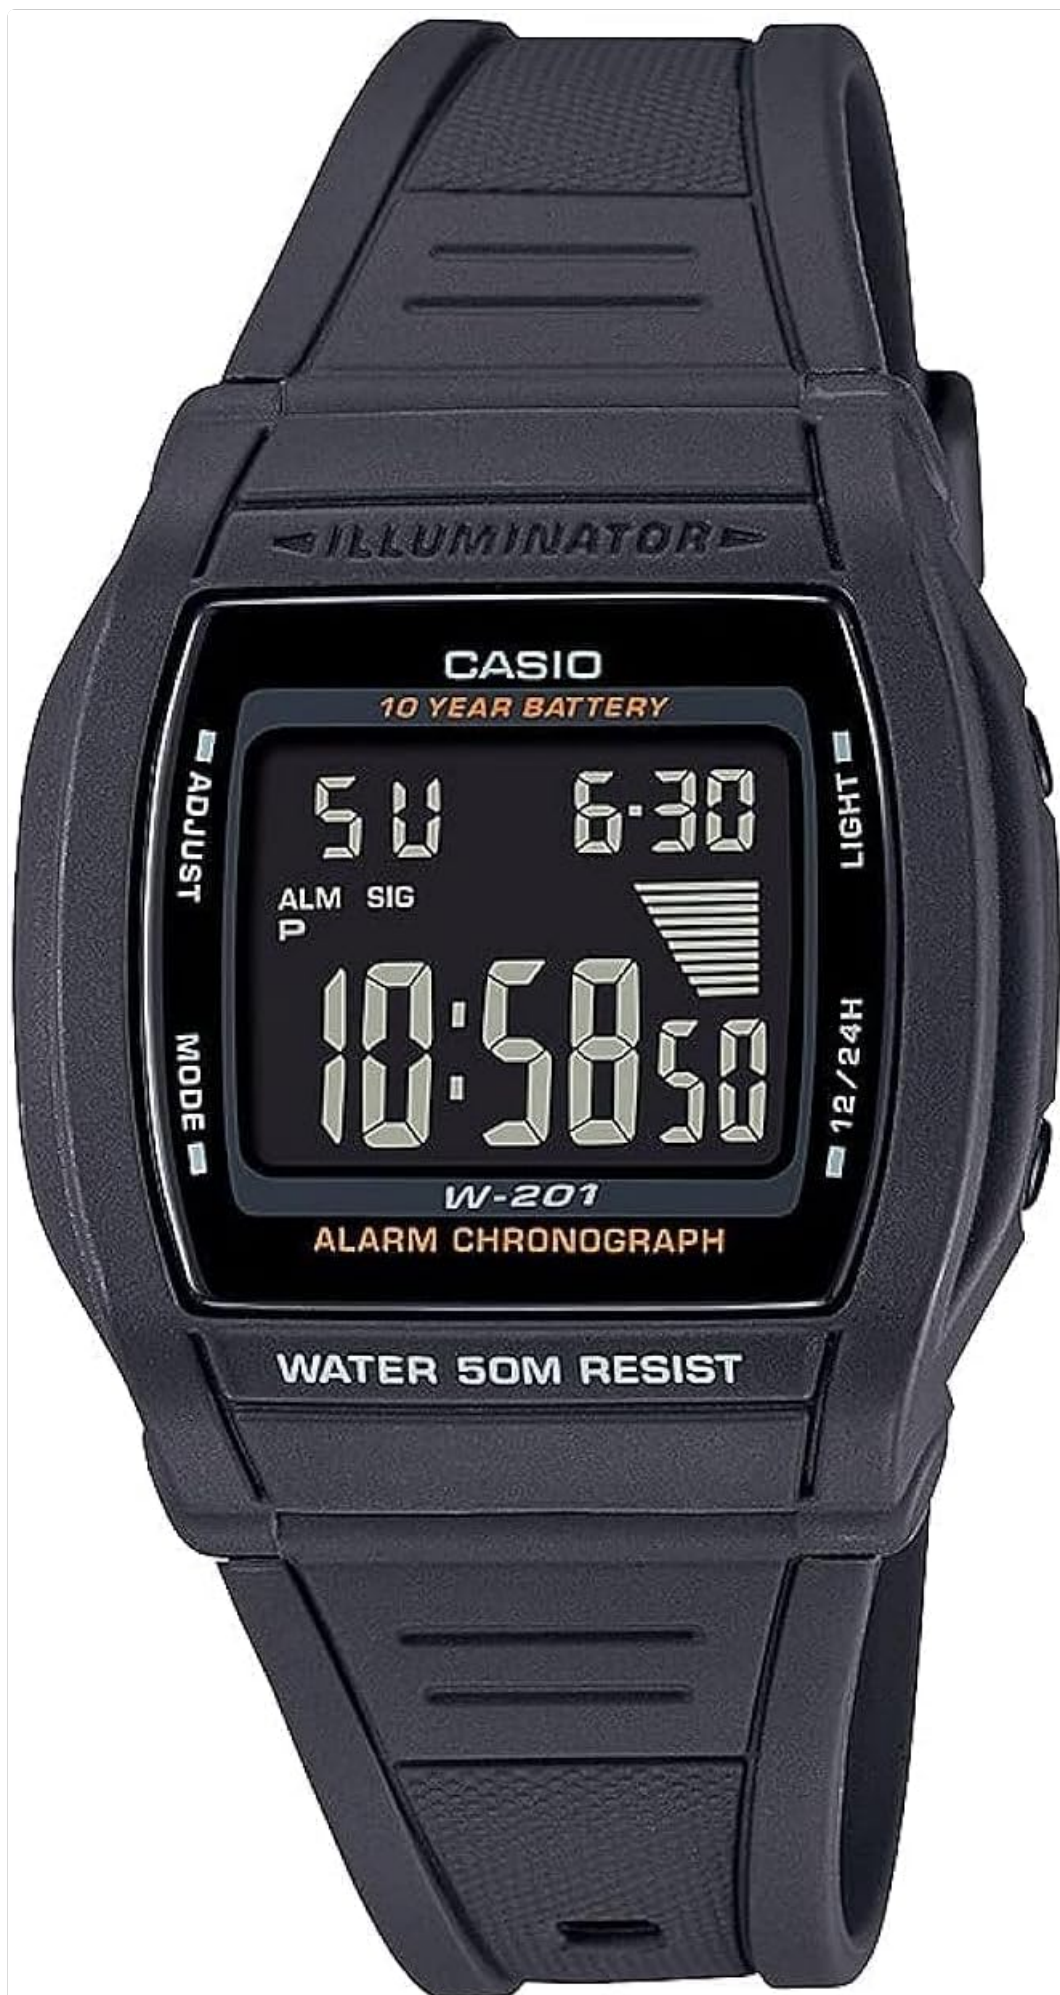


Image: Front view of the Casio Illuminator W-201-1BV digital watch. The display shows the time as 10:58:50, the date as 6-30, and indicates "ALM SIG P" for alarm and hourly signal. Buttons are labeled "ADJUST", "MODE" on the left, and

"LIGHT", "12/24H" on the right. The watch face also displays "CASIO", "10 YEAR BATTERY", "W-201", "ALARM CHRONOGRAPH", and "WATER 50M RESIST".

Button Functions

Your watch features four buttons, each with specific functions depending on the current mode.

- **ADJUST (Top Left):** Used to enter and exit setting modes, and to confirm selections.
- **MODE (Bottom Left):** Cycles through the watch's various modes (Timekeeping, Stopwatch, Alarm).
- **LIGHT (Top Right):** Activates the LED backlight for illumination.
- **12/24H (Bottom Right):** Used to change values during settings, and to switch between 12-hour and 24-hour time formats in Timekeeping Mode.

Setup and Initial Configuration

Setting the Time and Date

1. In Timekeeping Mode, press and hold the **ADJUST** button until the seconds begin to flash, indicating the setting screen.
2. Press the **MODE** button to cycle through the settings: Seconds → Hour → Minutes → Year → Month → Day.
3. Use the **12/24H** button to increase the flashing value. Hold it down to change values rapidly.
4. Once all settings are correct, press the **ADJUST** button to exit the setting mode.

12-Hour / 24-Hour Format

In Timekeeping Mode, press the **12/24H** button to toggle between 12-hour and 24-hour time formats. The 12-hour format will display a "P" indicator for PM times.

Operating Modes

Timekeeping Mode

This is the default mode, displaying the current time (hours, minutes, seconds), day of the week, and date.

Stopwatch Mode

The stopwatch measures elapsed time with 1/100-second accuracy, up to 23 hours, 59 minutes, 59.99 seconds.

1. From Timekeeping Mode, press the **MODE** button once to enter Stopwatch Mode. The display will show "00'00"00".
2. Press the **12/24H** button to start the stopwatch.
3. Press the **12/24H** button again to stop the stopwatch.
4. To reset the stopwatch to zero, press the **ADJUST** button while the stopwatch is stopped.
5. To return to Timekeeping Mode, press the **MODE** button.

Alarm Mode

The watch features a daily alarm and an hourly time signal.

1. From Timekeeping Mode, press the **MODE** button twice to enter Alarm Mode. The display will show

the alarm time.

2. To set the alarm time, press and hold the **ADJUST** button until the hour digits flash.
3. Press the **MODE** button to select between hour and minute settings.
4. Use the **12/24H** button to change the flashing value.
5. Press the **ADJUST** button to exit alarm setting mode.
6. To turn the daily alarm ON/OFF, press the **12/24H** button in Alarm Mode (without holding **ADJUST**). An alarm indicator ("ALM") will appear when the alarm is active.
7. To turn the hourly time signal ON/OFF, press the **ADJUST** button in Alarm Mode (without holding **ADJUST**). An hourly signal indicator ("SIG") will appear when active.

Illuminator (LED Backlight)

Press the **LIGHT** button to illuminate the display. The LED backlight includes an afterglow feature, keeping the display lit for a few seconds after the button is released.

MAINTENANCE

Water Resistance

The watch is water resistant to 50 meters (5 ATM). This means it is suitable for everyday use and can withstand splashes, rain, and brief immersion in water. It is **not** recommended for swimming, diving, or prolonged water exposure. Do not operate buttons while the watch is wet or submerged.

Battery Replacement

The watch is powered by a CR2016 lithium metal battery, designed for approximately 10 years of operation. When the display becomes dim or functions become erratic, the battery may need replacement. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and water resistance.

Cleaning

Wipe the watch with a soft, dry cloth. For stubborn dirt, use a soft cloth dampened with water and a mild soap, then wipe dry. Avoid using chemical cleaners or solvents.

TROUBLESHOOTING

- **Display is blank or dim:** The battery may be low or depleted. Refer to the "Battery Replacement" section.
- **Buttons are unresponsive:** Ensure the watch is not in a frozen state. Try pressing all buttons firmly. If issues persist, a battery replacement might be necessary.
- **Time is inaccurate:** Re-set the time according to the "Setting the Time and Date" instructions. If inaccuracy persists, the watch may require service.
- **Water inside the watch:** Immediately cease use and seek professional service. Water intrusion can cause permanent damage.

For further assistance, please contact Casio customer support.

SPECIFICATIONS

Feature	Detail
---------	--------

Model Number	W-201-1BVCR
Battery Type	CR2016 Lithium Metal (included)
Battery Life	Approximately 10 years
Water Resistance	50 meters (5 ATM)
Display Type	Digital with LED Backlight (Illuminator) and Afterglow
Functions	Daily Alarm, Hourly Time Signal, 1/100-Second Stopwatch (Measuring Capacity: 23:59'59.99")
Case Material	Resin
Band Material	Resin
Approximate Dimensions (Package)	4.25 x 3.5 x 3 inches
Approximate Weight (Package)	4.8 ounces

WARRANTY AND SUPPORT

Manufacturer's Warranty



This Casio product is covered by a manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.





Customer Support

For technical assistance, service, or inquiries regarding your Casio Illuminator W-201-1BV watch, please visit the official Casio website or contact their customer service department.

[Casio Official Support Website](#)

Related Documents - W-201-1BV

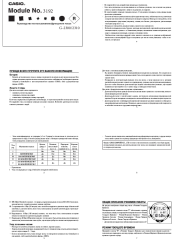	<p>Casio LAW-21 Модуль 2789: Руководство пользователя и характеристики</p> <p>Полное руководство пользователя для часов Casio LAW-21 (Модуль 2789). Содержит инструкции по эксплуатации, уходу, описания режимов работы (текущее время, мировое время, таймер, секундомер, будильник) и технические характеристики.</p>
	<p>Casio Watch Instruction Manual: Modules 2879, 2889, 3091</p> <p>Comprehensive guide to Casio watch modules 2879, 2889, and 3091. Learn about water resistance ratings (ISO 2281), button operations, time setting, alarms, stopwatch, and battery replacement.</p>

	<p>Casio G-2300/2310 Module 3192 User Manual</p> <p>This manual provides detailed instructions for operating the Casio G-2300/2310 watch, module 3192. It covers setting time and date, world time, alarms, stopwatch, countdown timer, water resistance, battery care, power saving, and technical specifications.</p>
	<p>CASIO G-SHOCK G-7900, GLX-6900 Watch User Manual (Module 3194)</p> <p>Comprehensive user manual for the CASIO G-SHOCK G-7900 and GLX-6900 watches (Module 3194), detailing features, operations, water resistance, care, world time, alarms, stopwatch, timer, backlight, and technical specifications.</p>
	<p>CASIO WS-100 Digital Watch User Manual - Module 2069</p> <p>Comprehensive user manual for the CASIO WS-100 digital watch (Module 2069), covering features like stopwatch, alarm, water resistance, and care instructions. Learn how to set time, date, and use all functions.</p>
	<p>Casio DBC-30/30G/300A/300GA Watch User Manual (Module 1253)</p> <p>User manual for Casio DBC-30, DBC-30G, DBC-300A, and DBC-300GA watches (Module 1253). Details features like timekeeping, phonebook, calculator, alarms, stopwatch, water resistance, and watch care.</p>