

[Manuals.plus](#) /

› [Artis](#) /

› Artis MS304 Wireless Bluetooth Party Speaker User Manual

Artis MS304

Artis MS304 Wireless Bluetooth Party Speaker User Manual

Model: MS304 | Brand: Artis

PRODUCT OVERVIEW

The Artis MS304 is a versatile 40W wireless Bluetooth party speaker designed for powerful audio output and multiple connectivity options. It features a built-in FM radio, USB and TF card inputs, an Aux-in port, and comes with a wireless microphone for karaoke or announcements. Its robust design and RGB glow lights make it ideal for parties and gatherings, while its portable nature allows for both indoor and outdoor use.



Image: The Artis MS304 party speaker shown with its included wireless microphone and remote control, highlighting its main components.

WHAT'S INCLUDED

Please check the package contents carefully. If any items are missing or damaged, contact customer support.

- 1 x Artis MS304 Party Speaker
- 1 x Charging Cable
- 1 x Remote Control
- 1 x Wireless Microphone
- 1 x User Manual (this document)

SETUP GUIDE

1. Initial Charging

Before first use, fully charge the speaker. Connect the provided charging cable to the speaker's charging port and a suitable power source. The charging indicator light will show the charging status. A full charge typically takes 2-3 hours and provides 2-3 hours of playback time.

2. Powering On/Off

Locate the power switch on the speaker's control panel. Flip the switch to the "ON" position to power on the speaker. You will hear an audible prompt. To power off, flip the switch to the "OFF" position.

3. Connecting the Wireless Microphone

The wireless microphone is pre-paired with the speaker. Simply turn on the microphone and it should automatically connect. Adjust the microphone volume and echo effects using the dedicated controls on the speaker's back panel.



Image: The wireless microphone and remote control included with the Artis MS304 speaker.

OPERATING INSTRUCTIONS

The Artis MS304 offers multiple connectivity options. Use the "Mode" button on the speaker or remote control to switch between modes.

1. Bluetooth Mode

Upon powering on, the speaker will automatically enter Bluetooth pairing mode, indicated by a flashing LED. On your device (smartphone, tablet, etc.), enable Bluetooth and search for "ARTIS MS304". Select it to pair. Once connected, you will hear a confirmation sound. The Bluetooth range is approximately 10 meters.



Image: An illustration highlighting the Bluetooth connectivity feature of the Artis MS304 speaker.

2. FM Radio Mode

Press the "Mode" button to switch to FM radio mode. Press and hold the "Play/Pause" button to auto-scan and save available FM stations. Use the "Previous" and "Next" buttons to navigate between saved stations.



Image: The back panel of the Artis MS304 speaker, showing the various input ports including the FM radio icon.

3. USB/TF Card Mode

Insert a USB flash drive or a TF (microSD) card into the respective slot on the speaker's control panel. The speaker will automatically switch to USB or TF card mode and begin playing audio files. Ensure your audio files are in a compatible format (e.g., MP3).



Image: The control panel on the back of the Artis MS304, indicating the USB and TF card input slots.

4. AUX Input Mode

Connect an external audio device (e.g., MP3 player, computer) to the speaker's AUX-in port using a 3.5mm audio cable (not included). The speaker will automatically switch to AUX mode. Control playback from your connected device.



Image: The rear control panel of the Artis MS304 speaker, showing the AUX input port.

5. TWS (True Wireless Stereo) Function

The TWS function allows you to pair two Artis MS304 speakers together for a true stereo sound experience, doubling the output to 80W. To activate TWS:

1. Ensure both MS304 speakers are powered on and not connected to any Bluetooth device.
2. On one speaker, press and hold the TWS button (if available) or the Mode button until you hear a pairing prompt.
3. The two speakers will automatically search and pair with each other. Once paired, you will hear a confirmation sound.
4. Now, connect your Bluetooth device to one of the paired speakers. Audio will play through both speakers in stereo.



Image: Two Artis MS304 speakers depicted together, illustrating the True Wireless Stereo (TWS) function for an enhanced 80W audio experience.

6. Using the Remote Control

The included slim remote control provides convenient access to various functions, including power, mode selection, volume control, track navigation, and EQ settings.



Image: A close-up of the slim remote control provided with the Artis MS304 speaker.

7. Adjusting Volume and Echo

Use the dedicated rotary knobs on the speaker's back panel to adjust the master volume, microphone volume, and microphone echo effect. These controls allow for fine-tuning your audio experience, especially during karaoke sessions.



Image: The rear control panel of the Artis MS304 speaker, showing the knobs for volume, mic volume, and echo adjustment.

8. RGB Glow Lights

The Artis MS304 features dynamic RGB glow lights that enhance the party atmosphere. These lights can be controlled via the remote or a dedicated button on the speaker, allowing you to turn them on/off or change patterns.



Image: The Artis MS304 speaker illuminated with its vibrant RGB glow lights, creating a party ambiance.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use, to maintain battery health.
- **Water Exposure:** This speaker is not waterproof. Avoid exposing it to water or excessive moisture.

TROUBLESHOOTING

If you encounter issues with your Artis MS304 speaker, please refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery or no power.	Charge the speaker fully. Ensure the power switch is in the "ON" position.
No sound from speaker.	Volume too low, incorrect mode, or device not connected.	Increase speaker volume. Check if the correct input mode (Bluetooth, USB, AUX, FM) is selected. Re-pair Bluetooth device or check cable connection.
Bluetooth connection unstable.	Device too far, interference, or pairing issue.	Ensure device is within 10m range. Avoid obstacles. Forget "ARTIS MS304" on your device and re-pair.
Microphone not working.	Microphone off, low battery, or volume too low.	Ensure microphone is powered on. Check microphone battery. Increase microphone volume on the speaker.
TWS pairing failed.	Speakers already connected to another device or not in pairing mode.	Ensure both speakers are disconnected from other Bluetooth devices. Follow TWS pairing steps carefully.

SPECIFICATIONS

Feature	Detail
Model Name	MS304
Output Power	40 Watts RMS
Subwoofer Size	8 Inches x 2
Connectivity Technology	Bluetooth 5.0, USB, TF Card, AUX, FM Radio
Bluetooth Range	Up to 10 meters
Battery Type	Lithium Ion
Battery Capacity	1800 mAh (Rechargeable)
Playback Time	2-3 Hours
Charging Time	Approx. 2-3 Hours
Dimensions (LxWxH)	22 x 16 x 53 cm
Item Weight	4 Kilograms
Material	Metal, Plastic
Included Components	Speaker, Charging Cable, Remote Control, Wireless Mic, User Manual

WARRANTY AND SUPPORT

The Artis MS304 speaker comes with a **1 Year Warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use.

For warranty claims, technical support, or any inquiries, please contact Artis customer care:

- **Customer Care Numbers:** 1800 123 8195 / 1800 120 8195
- **Email:** inquiry@artis.in
- **Manufacturer/Importer:** Kunhar Peripherals Pvt. Ltd.

Please retain your purchase receipt as proof of purchase for warranty services.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question