

BELLA 90154

Bella Pro Series 6qt Digital Air Fryer User Manual

Model: 90154 | Brand: BELLA

1. INTRODUCTION

The Bella Pro Series 6-quart Digital Air Fryer offers a healthy alternative to traditional deep frying, utilizing High Performance Circular Heat Technology to circulate hot air for fast, crispy, and evenly cooked food. This appliance is designed for convenience and efficiency, featuring intuitive digital touchscreen controls and a generous 6-quart capacity suitable for preparing up to 5 lbs of food.

2. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always place the air fryer on a stable, heat-resistant surface.
- Do not immerse the cord, plug, or main unit in water or other liquids.
- Supervise children closely when the appliance is in use.
- Do not block any ventilation openings.
- Unplug from outlet when not in use and before cleaning.
- Allow to cool completely before handling or cleaning parts.
- Do not operate any appliance with a damaged cord or plug.
- Use only manufacturer-recommended accessories.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

3. PRODUCT OVERVIEW

The Bella Pro Series Digital Air Fryer is designed for ease of use and efficient cooking. Below are its key components and features:

- **Digital Air Fryer:** Features a digital temperature control for precise cooking.
- **Stainless Steel Construction:** Made from durable stainless steel for long-lasting use.
- **6 Quart Capacity:** Large capacity allows frying of up to 5 lbs of food at once, ideal for serving 6-8 people.
- **Non-Stick Coating:** The fryer basket and crisping tray have a non-stick coating for easy food release and cleaning.
- **High Performance Circular Heat Technology:** Circulates heat for fast, crispy, and evenly cooked food.
- **1500W of Power:** Powerful heating system with stainless steel provides faster heat-up and cool-down times.
- **6 Preset Cooking Programs:** Includes Air Fry, Roast, Broil, Bake, Reheat, and French Fries.
- **Intuitive Digital Touchscreen:** Easily control and adjust temperature (170-400°F) and time.

- **Automatic Shutoff:** The 60-minute automatic shutoff timer ensures stress-free cooking with an audible tone for added safety.

Product Images



Front view of the Bella Pro Series 6qt Digital Air Fryer.



Angled view showcasing the sleek design and digital display.



Air fryer basket pulled out, showing food being cooked.



Product dimensions: 11.02"D x 15.27"W x 12.83"H.

4. SETUP

1. **Unpacking:** Carefully remove all packaging materials and promotional labels from the air fryer.

2. **Initial Cleaning:** Before first use, wash the removable non-stick basket and crisping tray with warm, soapy water. Wipe the exterior of the main unit with a damp cloth. Ensure all parts are completely dry before assembly.
3. **Placement:** Place the air fryer on a stable, level, heat-resistant surface, away from walls or other appliances to allow for proper air circulation. Ensure there is at least 6 inches of space on all sides.
4. **Assembly:** Insert the crisping tray into the air fryer basket, then slide the assembled basket firmly into the main unit until it clicks into place.

5. OPERATING INSTRUCTIONS

The Bella Pro Series Digital Air Fryer features an intuitive touchscreen for easy operation.

Basic Operation:

1. **Power On:** Plug the air fryer into a grounded electrical outlet. The digital display will illuminate.
2. **Select Function:** Press the "Menu" button to cycle through the 6 preset cooking programs: Air Fry, Roast, Broil, Bake, Reheat, and French Fries.
3. **Adjust Time & Temperature:** Use the "+" and "-" buttons next to "Time" and "Temp" to adjust the cooking duration (up to 60 minutes) and temperature (170-400°F) as needed for your recipe.
4. **Start Cooking:** Once settings are selected, press the "Start/Pause" button to begin cooking. The fan will activate, and the cooking process will start.
5. **Pause/Resume:** You can pause cooking at any time by pulling out the basket or pressing the "Start/Pause" button. To resume, simply reinsert the basket or press "Start/Pause" again.
6. **Automatic Shutoff:** The air fryer will automatically shut off and emit an audible tone when the set cooking time is complete.

Cooking Tips:

- For best results, preheat the air fryer for 3-5 minutes before adding food.
- Shake the basket or flip food halfway through cooking for even crisping, especially for smaller items like fries or chicken wings.
- Do not overfill the basket; cook in batches if necessary to ensure proper air circulation.
- A light coating of oil can enhance crispiness for some foods.

Official Product Videos:

No official seller videos are available for this product at this time.

6. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your air fryer. Always unplug the appliance and allow it to cool completely before cleaning.

- **Removable Parts:** The non-stick basket and crisping tray are dishwasher safe for convenient cleaning. For stubborn residue, soak in warm, soapy water before washing.
- **Exterior:** Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the stainless steel finish.
- **Interior:** Wipe the interior of the appliance with a damp cloth. If necessary, use a mild, non-abrasive cleaning solution.
- **Heating Element:** Gently clean the heating element with a soft brush to remove any food residue.
- **Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.

7. TROUBLESHOOTING

If you encounter issues with your Bella Pro Series Digital Air Fryer, refer to the common problems and solutions below:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet issue; basket not fully inserted.	Ensure plug is securely in outlet; check circuit breaker; push basket firmly until it clicks.
Food is not crispy.	Basket is overcrowded; temperature too low; insufficient cooking time.	Cook in smaller batches; increase temperature; extend cooking time; shake basket more frequently.
White smoke coming from appliance.	Grease from previous use; high-fat food.	Clean basket and tray thoroughly; drain excess oil from food.
Appliance smells like plastic.	New appliance odor.	This is normal for first few uses. Ensure good ventilation.

8. SPECIFICATIONS

Specification	Detail
Product Name	6-qt. Digital Air Fryer with Stainless Finish
Brand	Bella Pro Series
Model Number	90154
Color	Black Stainless Steel
Capacity	6 Quarts (5 lbs food capacity)
Power	1500 Watts
Voltage	110 Volts
Control Type	Digital, Touchscreen, Preset
Temperature Range	170-400°F
Timer	Up to 60 minutes with auto shutoff
Material	Stainless Steel, BPA-Free
Dishwasher Safe Parts	Yes (Removable basket and crisping tray)
Product Dimensions	11.02"D x 15.27"W x 12.83"H
Item Weight	6.6 pounds (3 Kilograms)
UPC	829486901546

9. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the documentation included with your purchase or contact BELLA customer service. Protection plans may be available for extended coverage.

For further assistance, please visit the official BELLA website or contact their customer support line.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question