

BILLCONCH A1-Black

BILLCONCH Biometric Gun Safe Model A1-Black Instruction Manual

Secure Storage for Pistols and Valuables

1. SAFETY INFORMATION

This BILLCONCH Biometric Gun Safe is designed to provide secure storage for firearms and valuables. Proper use and adherence to safety guidelines are crucial to prevent unauthorized access and accidents.

- Always store firearms unloaded and separate from ammunition.
- Keep the safe locked at all times when not in use.
- Store the safe keys in a secure location, away from the safe and out of reach of children and unauthorized individuals.
- Do not share your PIN code or allow unauthorized individuals to register their fingerprints.
- Ensure the safe is mounted or placed in a stable location to prevent tipping or removal.
- This safe is not water resistant. Avoid exposure to water or high humidity.

2. PRODUCT OVERVIEW

The BILLCONCH Biometric Gun Safe Model A1-Black offers three secure methods of access: fingerprint recognition, digital PIN code, and traditional key unlock. Constructed from durable carbon steel, it provides a robust solution for securing pistols and other valuables. The interior features soft foam padding to protect contents and an internal LED light for visibility in low-light conditions. The safe is portable and includes a rechargeable battery with a USB charging option.



Image: The BILLCONCH Biometric Gun Safe with its lid open, revealing two pistols, ammunition, and cash securely stored inside. The biometric keypad is visible on the front.

2.1 Key Features

- **3-Way Unlock System:** Fingerprint, Digital PIN, and Key.
- **High-Resolution Biometric Scanner:** Provides quick access (within 0.1 seconds) and supports multiple fingerprints.
- **Durable Construction:** Made from hard carbon steel with a metal paint coating.
- **Internal LED Light:** Illuminates the interior for clear visibility.
- **Soft Foam Padding:** Protects stored items from scratches and damage.
- **USB Rechargeable Battery:** Convenient power source with low battery reminder.
- **Portable Design:** Suitable for various locations including nightstands, drawers, and vehicles.

2.2 Package Contents

Verify that all items are present in the package:

- BILLCONCH Biometric Gun Safe

- Emergency Keys (2)
- USB Charging Cable
- Mounting Hardware (screws)
- Small Screwdriver (for battery compartment)
- Instruction Manual



Image: A collection of accessories for the BILLCONCH gun safe, including two keys, a USB charging cable, and a small screwdriver.

3. SETUP

3.1 Initial Power-Up and Charging

1. Locate the battery compartment, typically inside the safe or on the underside. Use the provided screwdriver if necessary to open it.
2. Insert the included Lithium Ion battery.
3. Connect the USB charging cable to the safe's USB port and a power source (e.g., wall adapter, computer USB port). The charging indicator light will be red.
4. Charge the safe until the indicator light turns green, indicating a full charge.

3.2 Setting Fingerprints

The safe can store multiple fingerprints for quick access.

1. Open the safe using the emergency key.
2. Locate the 'SET FINGERPRINT' button inside the safe (refer to the image below for location). Press this button.
3. Place the finger you wish to register on the fingerprint scanner. The safe will prompt you to lift and place your finger repeatedly (typically 6-8 times) from different angles until registration is complete.
4. A successful registration will be indicated by a specific sound or light pattern.
5. Repeat the process for any additional fingers or users you wish to register.



Image: Internal control panel of the safe, showing buttons for 'SET PIN', 'SET FINGERPRINT', and 'ERAS'.

3.3 Setting PIN Code

1. Open the safe using the emergency key or an enrolled fingerprint.
2. Locate the 'SET PIN' button inside the safe. Press this button.
3. Enter your desired PIN code (typically 4-8 digits) on the keypad, then press 'OK'.
4. Re-enter the same PIN code and press 'OK' to confirm.
5. A successful registration will be indicated by a specific sound or light pattern.

3.4 Enabling/Disabling Sound

The safe may have an option to operate in silent mode. Consult your specific model's detailed instructions for how to toggle sound alerts.

4. OPERATING INSTRUCTIONS

4.1 Unlocking with Fingerprint

1. Place an enrolled finger firmly and completely on the fingerprint scanner.
2. The safe will unlock rapidly (within 0.1 seconds) if the fingerprint is recognized.



Fingerprint Unlock



Keyboard Unlock



Key Unlock



Image: The BILLCONCH gun safe with a glowing fingerprint icon over the scanner, indicating fingerprint unlock.

4.2 Unlocking with PIN Code

1. Enter your registered PIN code on the keypad.
2. Press the 'OK' button.
3. The safe will unlock if the PIN code is correct.

High Resolution Fingerprint Scanner

Provides quicker access to your handgun



Place finger 6-times repeatedly



Learnable Fingerprint



FAR and FRRare Less than 1 / 10000



Lifetime is more more than 1,000,000 times



Within 0.1 Seconds




Image: The BILLCONCH gun safe with the keypad illuminated, indicating PIN code entry.

4.3 Unlocking with Key


The emergency key provides a reliable backup access method.

1. Insert the emergency key into the keyhole on the safe.
2. Turn the key to unlock the safe.

 Considerate Details

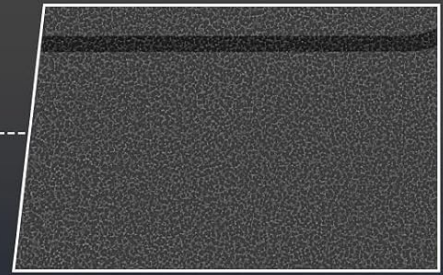


Metal material prevent from scratches

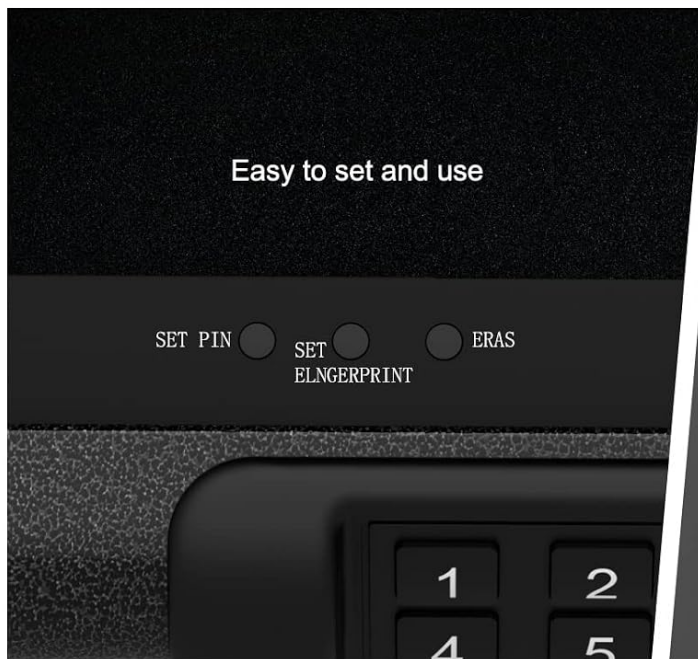 

Easy to set and use

 SET PIN SET ELINGERPRINT ERAS

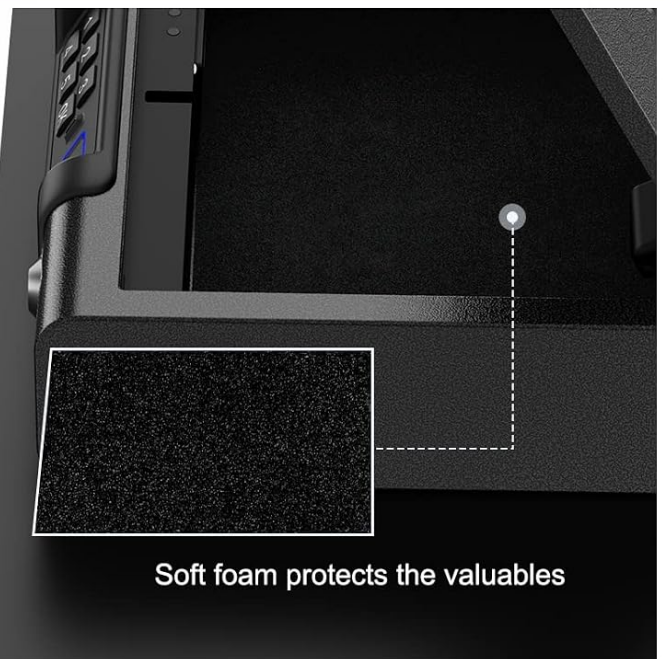

Soft foam protects the valuables

Image: The BILLCONCH gun safe with an emergency key inserted into the keyhole.

4.4 Internal LED Light

The safe features an internal LED light that activates when the safe is opened, providing visibility to its contents.



Image: The interior of the BILLCONCH gun safe with the LED light on, clearly illuminating the stored items.

5. MAINTENANCE

5.1 Battery Management

- The safe is powered by a rechargeable Lithium Ion battery.
- When the battery is low, the safe will provide a low battery reminder (e.g., a specific sound or light indicator).
- Charge the battery using the provided USB cable and a standard USB power source. The charging indicator will turn green when fully charged.
- Regularly check the battery level and recharge as needed to ensure continuous operation.

5.2 Cleaning

- Clean the exterior of the safe with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.
- Keep the fingerprint scanner clean and free of dirt or moisture to ensure optimal performance.
- Periodically inspect the safe for any signs of wear or damage.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Safe does not open with fingerprint.	Finger not properly placed; unregistered fingerprint; dirty scanner; low battery.	Ensure finger covers the entire scanner; re-register fingerprint; clean scanner; charge battery; use PIN or key.
Safe does not open with PIN code.	Incorrect PIN entered; PIN not set; low battery.	Verify PIN; set PIN if not already done; charge battery; use fingerprint or key.
No power/safe unresponsive.	Battery depleted or improperly installed.	Charge the battery; ensure battery is correctly installed; use emergency key to open.

Problem	Possible Cause	Solution
Internal light not working.	Low battery; LED malfunction.	Charge the battery. If problem persists, contact customer support.

7. SPECIFICATIONS

Ultra-large internal space

Value for the Money

3.2in

10in

12in

1 Metal latch bar

2 Padded foam

3 Setting area

4 Rechargeable battery

5 LED light

6 OK button

7 USB charging cable

8 Key

Image: The BILLCONCH gun safe with key dimensions labeled: 12 inches width, 10 inches depth, and 3.2 inches height.

Feature	Detail
Brand	BILLCONCH
Model Number	A1-Black
Product Dimensions	10"D x 12"W x 3.2"H
Item Weight	8.45 pounds
Lock Type	Biometric, Key, Mechanical Code Lock
Color	Black
Material	Alloy Steel, Carbon Steel, Metal
Special Feature	Portable
Mounting Type	Freestanding, Tabletop
Battery Type	1 Lithium Ion battery (included)
Water Resistance Level	Not Water Resistant
UPC	738629377936

8. WARRANTY AND SUPPORT

BILLCONCH provides a worry-free one-year warranty for this product. We are committed to offering reliable customer service and support.

- **Warranty Period:** One Year from the date of purchase.
- **Support:** We offer a 24-hour response service for any concerns or advice.
- **Money-back & Replacement:** 30-day money-back and replacement policy.

If you encounter any issues or have questions regarding your BILLCONCH Biometric Gun Safe, please contact our customer service directly for assistance. Refer to your purchase documentation or the BILLCONCH official website for contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question