

- [Manuals.plus](#) /
- › [Yechen](#) /
 - › Yechen Shoe Rack Storage Organizer User Manual - Model B0D9BL3SK6

Yechen B0D9BL3SK6

Yechen Shoe Rack Storage Organizer User Manual

Model: B0D9BL3SK6

INTRODUCTION

Thank you for choosing the Yechen Shoe Rack Storage Organizer. This manual provides essential information for the safe assembly, operation, and maintenance of your new furniture. Please read these instructions carefully before beginning assembly and retain them for future reference.



Figure 1: Yechen Shoe Rack Storage Organizer (Black)

This image displays the assembled Yechen Shoe Rack Storage Organizer in black, featuring two semi-circular rattan doors and a small top drawer. It is shown in an entryway setting, demonstrating its aesthetic and functional placement.

SAFETY GUIDELINES

- **Anti-Toppling Device:** For safety, it is crucial to install the included anti-toppling device. This prevents the shoe cabinet from tipping over, especially in households with children or pets.
- **Weight Limit:** Do not exceed the maximum weight capacity. The top surface supports up to 60 lbs, and each drawer supports up to 20 lbs. Overloading can compromise stability and cause damage.
- **Stable Placement:** Ensure the shoe rack is placed on a flat, stable surface. Adjustable foot knobs are provided to accommodate different floor conditions and enhance stability.
- **Assembly:** Follow all assembly instructions carefully. Incorrect assembly can lead to instability and potential injury.



Anti-collapse device

Please install the anti-collapse device, which can prevent the shoe cabinet from tipping over and protect your family.

Ventilation design

Keep the inside of the shoe cabinet dry to avoid shoes growing moldy spots.



Figure 2: Anti-Collapse Device and Ventilation Design

This diagram illustrates the proper installation of the anti-collapse device, which secures the shoe cabinet to the wall. It also highlights the ventilation design, showing air circulation paths to keep shoes dry and prevent mold.

PACKAGE CONTENTS

Before beginning assembly, please verify that all parts and hardware listed in the assembly manual are present and undamaged. If any components are missing or damaged, please contact customer service immediately.

Note: A detailed list of parts and hardware is typically included in the separate assembly instruction booklet.

ASSEMBLY INSTRUCTIONS

Assembly is required for this product. Please follow the step-by-step instructions provided in the separate assembly manual included with your purchase. All parts are numbered for easy identification.

1. **Preparation:** Clear a spacious area for assembly. Gather necessary tools (screwdriver, optional power drill, rubber mallet).
2. **Identify Parts:** Match all components with the parts list in the assembly manual.
3. **Step-by-Step Assembly:** Follow the diagrams and instructions precisely. Pay close attention to the orientation of each piece.
4. **Secure Connections:** Ensure all screws and fasteners are tightened securely, but do not overtighten.
5. **Install Anti-Toppling Device:** As a final and critical step, install the anti-toppling device to secure the cabinet to a wall.

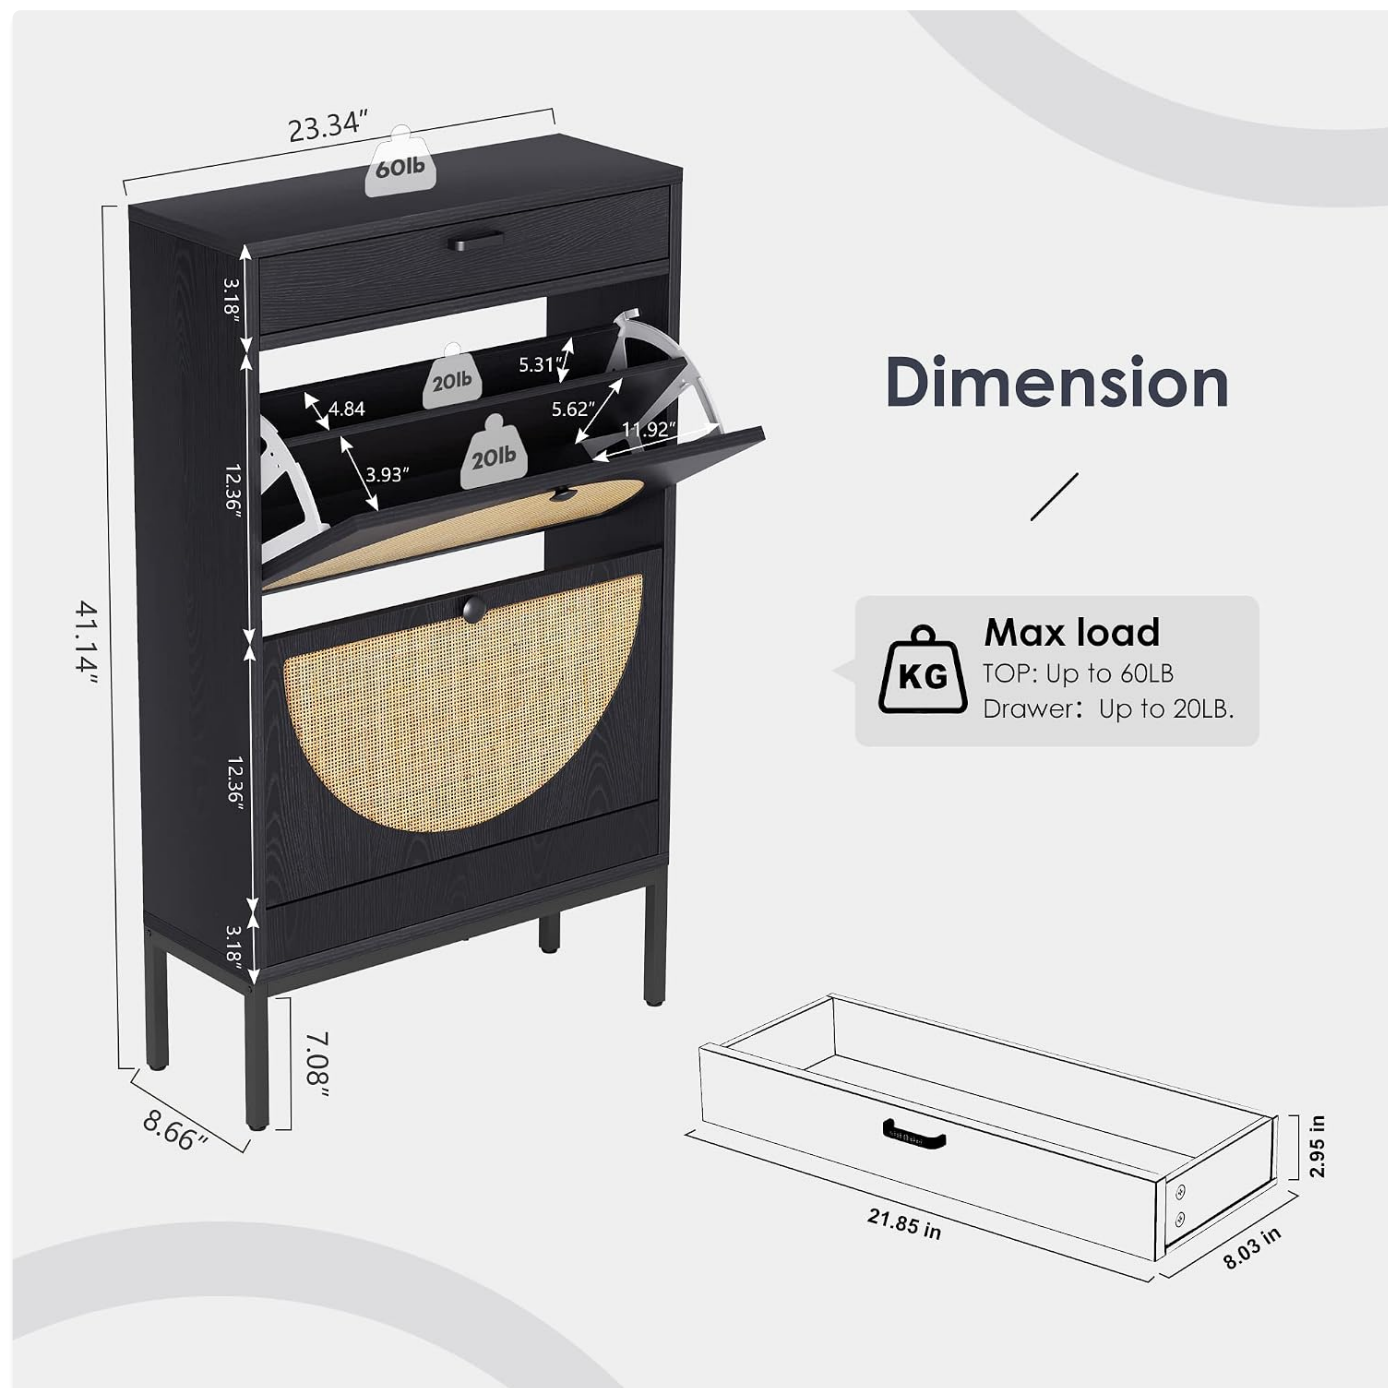


Figure 3: Product Dimensions and Load Capacity

This image provides a detailed dimensional overview of the shoe rack, including its overall height, width, and depth, as well as the internal measurements of the flip-down compartments and the top drawer. It also indicates the maximum load capacity for the top surface (60 lbs) and each drawer (20 lbs).

OPERATING YOUR SHOE RACK

Storage Compartments

The Yecheen Shoe Rack Storage Organizer is designed for efficient shoe storage and small item organization.

- **Top Drawer:** A small drawer located at the top provides convenient storage for keys, wallets, or other small entryway essentials.
- **Flip-Down Shoe Drawers:** The two main compartments feature flip-down doors, each containing an adjustable or removable shelf. These drawers can store up to 12 pairs of shoes, depending on their size and height.
- **Adjustable/Removable Shelves:** The interior shelves within the flip-down drawers can be adjusted or removed to accommodate different shoe types, such as sneakers, heels, or slippers. For taller footwear like trainers or boots, removing the middle shelf in a drawer will provide additional vertical space.



Figure 4: Internal Storage Layout

This image details the internal organization of the shoe cabinet, showing the small top drawer, and the two flip-down compartments with their adjustable shelves. It highlights how different shoe sizes and types can be accommodated by either keeping or removing the internal panel.



Figure 5: Footwear Compatibility

This graphic explains the footwear compatibility of the shoe rack. It shows that the middle shelf in each flip-down drawer is removable to accommodate taller shoes. The maximum recommended shoe size is UK9 or EU42.

CARE AND MAINTENANCE

- **Cleaning:** Wipe the cabinet surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the finish or rattan.
- **Rattan Care:** The natural rattan doors are dustproof. For deeper cleaning, gently wipe with a slightly damp cloth and allow to air dry completely.
- **Ventilation:** The rattan surface and backless design promote air circulation, helping to keep shoes dry and prevent odors or mold. Ensure the area around the cabinet allows for adequate airflow.
- **Bottom Clearance:** The 7.08-inch space at the bottom facilitates easy cleaning underneath the unit.

TROUBLESHOOTING

- **Cabinet Instability:** If the cabinet feels wobbly, ensure all assembly screws are tightened. Verify that the adjustable foot knobs are properly leveled on an even surface. Always install the anti-toppling device for maximum stability.
- **Shoes Not Fitting:** If shoes are too tall for the compartments, remove the middle shelf within the flip-down drawer to create more vertical space. Refer to Figure 5 for footwear compatibility guidelines.
- **Drawer Operation:** If drawers are stiff or do not open/close smoothly, check for any obstructions or misaligned components. Ensure all hardware is correctly installed.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Yechen
Model Number	B0D9BL3SK6
Color	Black
Product Dimensions (D x W x H)	8.66"D x 23.34"W x 41.14"H
Item Weight	38.3 pounds
Weight Limit (Top)	60 Pounds
Weight Limit (Drawer)	20 Pounds
Mounting Type	Freestanding (with anti-toppling device)
Assembly Required	Yes
Material	MDF, Natural Rattan

CUSTOMER SUPPORT

For any questions, concerns, or assistance with assembly or product issues, please contact Yechen customer service. Refer to your purchase documentation for specific contact details or visit the official Yechen store page on Amazon.

We are committed to providing excellent support and will endeavor to resolve any problems you may encounter.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C1CCWNH6>

More documents and user manuals: **<https://manuals.plus/>**