

Swissdigital J14-BR

Swissdigital J14-BR Travel Backpack User Manual

Model: J14-BR

INTRODUCTION

Thank you for choosing the Swissdigital J14-BR Travel Backpack. This manual provides essential information for the proper setup, operation, maintenance, and troubleshooting of your new backpack. Designed for convenience and security, this backpack features a TSA-friendly design, integrated USB charging port, and RFID protection, making it ideal for business, travel, and daily use.

PRODUCT OVERVIEW

The Swissdigital J14-BR backpack is engineered with multiple compartments and features to keep your belongings organized and secure.

Key Features:

- **Large Capacity & Organization:** Features 20 independent storage compartments, including 3 spacious main compartments and several hidden pockets.
- **TSA Approved Design:** Quick-access pocket unzips 90-180 degrees for efficient security checks without removing electronics.
- **Integrated USB-C Charging Port:** Built-in mobile power pocket and charging cable for convenient device charging (power bank not included).
- **RFID Protection:** Dedicated pockets to secure personal data encoded on credit cards, IDs, and passports.
- **Durable Construction:** Made from 1680D Polyester and 210D Nylon with high-density nylon lining.
- **Laptop Compartment:** Padded compartment fits laptops up to 15.6 inches.
- **Trolley Sleeve:** Allows the backpack to slide over luggage handles for hands-free transport.



Figure 1: Front view of the Swissdigital J14-BR Travel Backpack.

DIMENSIONS

15.6-inch laptop



Logo Detail



1680D Polyester
Strong and long-lasting

Figure 2: Dimensions of the Swissdigital J14-BR Travel Backpack (12.5"W x 7"D x 18.5"H) and material details (1680D Polyester).

FEATURES



Velvet glasses pocket



Multi-function pocket



Right side pocket



15.6 inch Padded Laptop compartment

Figure 3: Internal organization showing velvet glasses pocket, multi-function pockets, side pocket, and 15.6-inch padded laptop compartment.



TSA-FRIENDLY WITH MOUSE POUCH LAY-FLAT DESIGN

Breeze through security
without removing electronics



Second storage
section-Mouse Pouch



Figure 4: TSA-friendly lay-flat design allowing the backpack to open 90-180 degrees for easy security checks. Includes a mouse pouch.

DIMENSIONS

18.5" x 12.5" x 7"

Capacity 26.5 l



Figure 5: Dedicated RFID data protection pocket to safeguard sensitive information on cards and passports.

RFID DATA PROTECTION POCKET

(RFID-Radio Frequency Identification)

Helps secure personal data encoded on
your credit cards, IDs and passports



Figure 6: Trolley sleeve on the back panel for attaching the backpack to luggage handles, providing hands-free convenience.



Figure 7: Close-up of durable features including double-layer protection for notebooks, a durable and comfortable handle, durable buckles, special webbing tail buckles for shoulder strap adjustment, and U-shaped weight-reducing straps.

Video 1: Official product video showcasing the Swissdigital Design Circuit College Business Travel Backpack, highlighting its TSA-friendly features, built-in USB charging, and RFID protection.

SETUP

1. Adjusting Shoulder Straps:

- Loosen or tighten the shoulder straps using the adjustable buckles to achieve a comfortable fit. The U-shaped weight-reducing straps are designed for ergonomic support.

2. Connecting a Power Bank (for USB Charging):

- Locate the internal mobile power pocket inside the backpack.
- Connect your personal power bank (not included) to the internal USB-C charging cable.

- Ensure the external USB-C port on the side of the backpack is accessible for connecting your device.

OPERATING INSTRUCTIONS

1. Using the TSA-Friendly Feature:

- When going through airport security, unzip the main laptop compartment fully to lay the backpack flat (90-180 degrees).
- This allows your laptop and other electronics to remain in the backpack during screening, speeding up the process.

2. Charging Devices:

- With a power bank connected internally (as per Setup), plug your smartphone or other USB-C compatible device into the external USB-C port on the side of the backpack.
- Your device will begin charging.

3. Utilizing RFID Protection:

- Store your credit cards, ID cards, and passports in the designated RFID-protected pocket to prevent unauthorized scanning and data theft.

4. Organizing Contents:

- Use the various internal and external pockets for specific items: padded laptop sleeve for your computer, velvet pocket for glasses, side mesh pockets for water bottles or umbrellas, and multi-function pockets for smaller accessories.

MAINTENANCE

Cleaning Instructions:

- **Spot Cleaning:** For minor stains, use a damp cloth with mild soap. Gently rub the affected area and air dry.
- **Machine Wash:** The manufacturer recommends machine washing for thorough cleaning. Use a gentle cycle with cold water. Do not bleach. Air dry completely before reuse.
- **Drying:** Do not tumble dry. Hang the backpack in a well-ventilated area away from direct sunlight to air dry.
- **Zipper Care:** Periodically check zippers for smooth operation. If they become stiff, apply a small amount of zipper lubricant or wax.

TROUBLESHOOTING

1. USB Charging Port Not Working:

- **Check Power Bank:** Ensure your power bank is charged and properly connected to the internal USB-C cable.
- **Cable Connection:** Verify that both ends of the internal and external USB-C cables are securely plugged in.
- **Device Compatibility:** Confirm your device is compatible with USB-C charging.

2. Zippers Sticking:

- **Lubrication:** Apply a small amount of zipper lubricant, wax, or even a pencil lead to the zipper teeth to improve smoothness.
- **Clear Obstructions:** Check for any fabric or debris caught in the zipper teeth and carefully remove it.

3. Backpack Feels Uncomfortable/Heavy:

- **Adjust Straps:** Re-adjust the shoulder straps to distribute weight evenly. Ensure the backpack sits high on your back.
- **Weight Distribution:** Place heavier items closer to your back and lighter items towards the front or top.

SPECIFICATIONS

Feature	Detail
Brand Name	Swissdigital
Model Number	J14-BR
Item Dimensions (D x W x H)	7"D x 12.5"W x 18.5"H
Storage Volume	16.8 Liters
Number Of Pockets	15
Material Type	Polyester
Lining Description	Nylon
Color	Black
Compatible Device Size Maximum	15.6 Inches
Water Resistance Level	Water Resistant
Item Weight	2 Pounds

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the product warranty card included with your purchase or visit the official Swissdigital website. Keep your proof of purchase for any warranty claims.

US Patent No.: US 10,574,071 B2; US 10,931,137 B2; US 10,931,138 B2; US 11,601,009 B2.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question