



XY-70

# User Manual for Wireless Bluetooth TWS Earbuds XY-70

Model: XY-70 | Brand: Generic

## 1. INTRODUCTION

Thank you for choosing the XY-70 Wireless Bluetooth TWS Earbuds. These earbuds are designed to provide a superior audio experience with advanced features such as Active Noise Cancellation (ANC) and Environmental Noise Cancellation (ENC) for clear calls and immersive sound. Their lightweight and ergonomic design ensures comfort for extended use. This manual will guide you through the setup, operation, and maintenance of your new earbuds.

## 2. PACKAGE CONTENTS

Please verify that all items are present in your package:

- 1 pair of Wireless Bluetooth Earbuds (XY-70)
- 1 Wireless Charging Case
- 1 Mini USB Type-C Cable
- Ear Cushions (4 pieces: L, S sizes)
- 1 User Manual (this document)



Image: The XY-70 Wireless Bluetooth Earbuds in their charging case, showcasing their compact design.

### 3. PRODUCT FEATURES

---

#### 3.1 HiFi Stereo Sound & Clear Calls

The XY-70 earbuds are equipped with advanced audio drivers providing crystal clarity and deep resonant bass for an immersive listening experience. Noise-canceling technology ensures clear phone calls even in noisy environments.

# HIFI Stereo Sound

- noise reduction sound without distance



Take out & easily connect



HD Voice



Bluetooth 5.3 + EDR

Image: Visual representation highlighting HiFi Stereo Sound, HD Voice, and Bluetooth connectivity features of the earbuds.

## 3.2 ANC & Transparency Mode

Featuring Active Noise Cancellation (ANC) and Environmental Noise Cancellation (ENC) technology, these earbuds effectively block up to 90% of ambient noise, allowing you to focus on your audio. The Transparency mode enables you to hear your surroundings while still enjoying your music, enhancing situational awareness.

## 3.3 USB-C Fast Charging & Long Battery Life

Each earbud has a 30mAh battery capacity, providing 3-5 hours of single-use playtime. The 400mAh charging case extends the total battery life to up to 24 hours. A full charge for the case takes approximately 1 hour.

# 24Hrs Battery Life

- fast charging with USB cord

**4Hrs**

four single use

**1Hr**

Charging time



Image: Infographic showing 24 hours of total battery life, 4 hours for single use, and 1 hour charging time via USB-C.

## 4. SETUP GUIDE

---

### 4.1 Initial Charging

1. Before first use, place both earbuds into the charging case.
2. Connect the provided USB Type-C cable to the charging port on the case and plug the other end into a USB power source (e.g., wall adapter, computer USB port).
3. The indicator light on the charging case will show charging status. Allow approximately 1 hour for a full charge.

### 4.2 Pairing with Your Device

1. Ensure the earbuds are charged.
2. Open the charging case. The earbuds will automatically enter pairing mode.
3. On your device (smartphone, tablet, laptop), go to Bluetooth settings and turn Bluetooth on.
4. Search for available devices. You should see "XY-70" in the list.
5. Select "XY-70" to connect. Once connected, a voice prompt will confirm successful pairing.
6. The XY-70 earbuds are compatible with iOS, Android, Windows, and other Bluetooth-enabled devices.

# Easy Step pair

Take earphones out of charging case and connect them to bluetooth

<XY-70> is compatible with IOS/Android/Windows and other



Image: A visual guide demonstrating the simple pairing process of the XY-70 earbuds with a mobile device via Bluetooth settings.

## 5. OPERATING INSTRUCTIONS

### 5.1 Basic Controls

The XY-70 earbuds feature touch controls for easy management of audio and calls:

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap on the right earbud.
- **Previous Track:** Double tap on the left earbud.
- **Answer/End Call:** Single tap on either earbud.
- **Reject Call:** Press and hold either earbud for 2 seconds.
- **Activate Voice Assistant (Siri/Google Assistant):** Triple tap on either earbud.

### 5.2 Switching Noise Control Modes

The XY-70 earbuds support three modes: Normal, Transparency, and Active Noise Cancellation (ANC).

- **Toggle Modes:** Press and hold the touch area on the *left* earbud for 2 seconds to cycle through Normal, Transparency, and ANC modes. A voice prompt will confirm the selected mode.

## 6. MAINTENANCE

---

Proper maintenance ensures the longevity and optimal performance of your earbuds:

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth. Do not use abrasive cleaners or solvents.
- **Ear Tips:** Remove ear tips and clean them with mild soap and water if necessary. Ensure they are completely dry before reattaching.
- **Charging Ports:** Keep the USB-C charging port free of dust and debris.
- **Storage:** When not in use, store the earbuds in their charging case to protect them and keep them charged.
- **Water Resistance:** The earbuds are waterproof. However, avoid prolonged submersion in water and do not expose them to saltwater or other corrosive liquids. Dry them thoroughly if they get wet.

## 7. TROUBLESHOOTING

---

If you encounter issues with your XY-70 earbuds, please refer to the following common solutions:

Problem	Possible Cause	Solution
Earbuds not pairing	Low battery; Bluetooth off; Earbuds not in pairing mode; Interference.	Charge earbuds and case. Ensure Bluetooth is on. Place earbuds in case, close, then open to re-enter pairing mode. Move closer to device.
No sound from one earbud	Low battery; Not properly connected; Earbud malfunction.	Ensure both earbuds are charged. Place both earbuds back in the case, close, then open and reconnect. Try resetting earbuds (refer to manufacturer's specific reset instructions if available).
Charging case not charging	Faulty cable; Faulty power source; Dirty charging port.	Try a different USB-C cable and power adapter. Clean the charging port.
Poor sound quality	Ear tips not sealed; Distance from device; Interference.	Ensure ear tips fit snugly. Reduce distance between earbuds and device. Avoid strong electromagnetic interference.

## 8. SPECIFICATIONS

---

Feature	Detail
Model Name	XY-70 Bluetooth Earbuds
Noise Control	Active Noise Cancellation (ANC), Environmental Noise Cancellation (ENC)
Connectivity Technology	Wireless (Bluetooth 5.0)
Bluetooth Range	Up to 10 meters (33 feet)
Earbud Battery Capacity	30mAh (each earbud)
Charging Case Battery Capacity	400mAh
Single Use Playtime	3-5 hours
Total Playtime (with case)	Up to 24 hours
Charging Time	Approx. 60 minutes (for case)
Headphones Jack	Mini USB (Type-C)
Compatible Devices	Cellphones, Tablets, Laptops, Desktops (with Bluetooth)
Control Type	Touch, Voice (Siri, Google Assistant)
Water Resistance Level	Waterproof
Frequency Range	20 Hz - 20,000 Hz
Item Weight	37 Grams (total) / 1.31 ounces
Product Dimensions	4.92 x 3.35 x 1.52 inches
Material	Acrylonitrile Butadiene Styrene (ABS)
Manufacturer	Shenzhen Xiangxiangyu Technology Co.,Ltd

## 9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included in your product packaging or contact the seller directly.

If you have any questions or require assistance with your XY-70 earbuds, please reach out to the customer service team of the retailer where you purchased the product.