

JMANCE B0C1FWP3Y1

JMANCE Portable Apple CarPlay Android Auto Multimedia Player User Manual

Model: B0C1FWP3Y1

1. INTRODUCTION

Thank you for purchasing the JMANCE Portable Apple CarPlay Android Auto Multimedia Player. This device is designed to enhance your driving experience by integrating smartphone functionalities like navigation, music, and communication directly into your vehicle's dashboard. It features a 7-inch IPS touch screen, wireless Apple CarPlay and Android Auto support, Bluetooth 5.0, FM/AUX connectivity, and includes a backup camera for improved safety. Please read this manual thoroughly before installation and operation to ensure proper use and optimal performance.

2. SAFETY INFORMATION

- **Driving Safety:** Always prioritize safe driving. Do not operate the device in a way that distracts you from the road.
- **Installation:** Ensure the device is securely mounted and does not obstruct your view or interfere with vehicle controls. Improper installation can lead to accidents.
- **Power Supply:** Use only the provided power cable. Connecting to an incorrect power source may damage the device or your vehicle.
- **Temperature:** Avoid exposing the device to extreme temperatures, direct sunlight for prolonged periods, or high humidity.
- **Cleaning:** Disconnect power before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or solvents.
- **Maintenance:** Do not attempt to disassemble or repair the device yourself. Refer all servicing to qualified personnel.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- JMANCE Portable Multimedia Player Host

- Mounting Bracket (Suction Cup/Adhesive)
- 12V Power Socket (Car Charger)
- Backup Camera
- AUX Line
- User Manual



Figure 3.1: Included components in the package.

4. PRODUCT OVERVIEW

The JMANCE Portable Multimedia Player features a 7-inch IPS touch screen and various ports for connectivity.

4.1 Main Unit Features

- 7-inch FHD IPS Touch Screen (1024x600 resolution)
- Built-in Microphone
- Speaker

4.2 Ports and Connections

- **Audio AV In:** For connecting external audio/video sources.
- **USB Port:** For media playback from USB drives.
- **TF Card Slot:** For media playback from TF (MicroSD) cards.
- **DC-12V Power Port:** For connecting the 12V power adapter.



Figure 4.1: Side view of the player with labeled ports.

5. SETUP

5.1 Mounting the Device

The device can be mounted on your dashboard or windshield using the provided bracket. Choose a location that does not obstruct your view, airbags, or vehicle controls.

1. Clean the desired mounting surface thoroughly.
2. Attach the suction cup mount to the chosen surface (dashboard or windshield) and secure it by pressing down the

lever. For adhesive mounts, peel off the protective film and firmly press onto the surface.

3. Attach the multimedia player to the bracket. Adjust the angle and position for optimal viewing and accessibility. The bracket allows for telescopic regulation and 360-degree angle adjustment.

A variety of different mounting positions



Figure 5.1: Various mounting options for the player.

5.2 Power Connection

Connect the provided 12V power socket (car charger) to the DC-12V power port on the multimedia player, then plug the car charger into your vehicle's cigarette lighter socket.

5.3 Backup Camera Installation

The included backup camera provides a clear view when reversing. Professional installation is recommended for the backup camera wiring.

1. Mount the backup camera at the rear of your vehicle, typically near the license plate, ensuring a clear view.
2. Connect the camera's video cable to the Audio AV In port on the multimedia player.

3. Connect the camera's power cable to your vehicle's reverse light power supply. This ensures the camera activates automatically when the vehicle is put into reverse.



Figure 5.2: Backup camera display and features.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

- **Power On:** The device will power on automatically when connected to the car's power and the ignition is turned on.
- **Power Off:** The device will power off automatically when the car's ignition is turned off. You can also manually turn it off by pressing and holding the power button (if available) or disconnecting the power cable.

6.2 Wireless Apple CarPlay / Android Auto Connection

Connect your smartphone wirelessly for Apple CarPlay or Android Auto functionality.

1. Ensure Bluetooth and Wi-Fi are enabled on your smartphone.
2. On the multimedia player, navigate to the CarPlay or Android Auto interface.
3. On your phone, search for the device's Bluetooth name (e.g., "MEIHUA-9F79") and pair.
4. Once Bluetooth is connected, the device will prompt you to connect to its Wi-Fi network (e.g., "CarWFL_c774bb"). Connect your phone to this Wi-Fi network.
5. After successful Wi-Fi connection, Apple CarPlay or Android Auto will launch automatically.



Figure 6.1: Wireless CarPlay and Android Auto interface.

6.3 Bluetooth 5.0 Pairing (for calls and music without CarPlay/Android Auto)

If you only wish to use Bluetooth for calls and music without full CarPlay/Android Auto integration:

1. On the multimedia player, go to the Bluetooth settings.
2. Enable Bluetooth on your smartphone and search for available devices.
3. Select the device's Bluetooth name from your phone's list and confirm pairing.

4. Once paired, you can make hands-free calls and stream audio through the device.

6.4 AUX Connection

To transmit audio to your car's original radio system via AUX:

1. Connect one end of the provided AUX cable to the AUX output port on the multimedia player.
2. Connect the other end of the AUX cable to your car's AUX input jack.
3. Select the AUX input source on your car's radio. Audio from the multimedia player will now play through your car's speakers.



Figure 6.2: AUX and FM connection options.

6.5 FM Transmitter

To transmit audio to your car's original radio system via FM:

1. On the multimedia player, access the FM Transmitter settings.

2. Select an unused FM frequency on the player.
3. Tune your car's FM radio to the exact same frequency.
4. Audio from the multimedia player will now play through your car's speakers via FM radio.

6.6 Voice Control (Siri / Google Assistant)

When connected via Apple CarPlay or Android Auto, you can use voice commands:

- Activate Siri or Google Assistant by saying "Hey Siri" or "Hey Google," or by tapping the voice control icon on the screen.
- You can then issue commands such as "Play music," "Navigate to [destination]," "Send message to [contact]," or "Call [contact]."



Figure 6.3: Voice control functionality.

6.7 Media Playback (USB/TF)

Insert a USB drive into the USB port or a TF card into the TF card slot. The device will automatically detect the storage and allow you to browse and play supported audio and video files.

6.8 Backup Camera Operation

When the vehicle is shifted into reverse gear, the multimedia player will automatically switch to display the live feed from the connected backup camera, providing a clear view of the area behind your vehicle.

7. MAINTENANCE

- **Cleaning the Screen:** Use a soft, lint-free cloth to gently wipe the screen. For stubborn smudges, slightly dampen the cloth with water or a screen-safe cleaner. Avoid harsh chemicals.
- **General Cleaning:** Keep the device free from dust and debris. Use a soft brush or compressed air to clean ports and vents.
- **Cable Management:** Ensure all cables are neatly routed and secured to prevent damage or interference with driving.

8. TROUBLESHOOTING

If you encounter issues with your JMANCE multimedia player, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device does not power on.	No power connection or faulty power cable.	Check if the 12V power socket is securely plugged into both the device and the car's cigarette lighter. Ensure the car's ignition is on. Test the car's cigarette lighter with another device.
Wireless CarPlay/Android Auto fails to connect.	Bluetooth/Wi-Fi issues, incorrect pairing.	Ensure Bluetooth and Wi-Fi are enabled on your phone. Forget the device from your phone's Bluetooth/Wi-Fi settings and try pairing again. Restart both the phone and the multimedia player.
No audio from car speakers.	Incorrect AUX/FM settings, volume too low.	If using AUX, ensure the AUX cable is connected correctly and your car's radio is set to AUX input. If using FM, ensure the player and car radio are tuned to the exact same unused FM frequency. Check volume levels on both the player and car radio.
Backup camera image is not displayed or glitches.	Incorrect wiring, loose connection, faulty camera.	Verify all camera connections (video cable to player, power cable to reverse light). Ensure the camera is receiving power when the car is in reverse. If issues persist, consult a professional for wiring inspection.
Touch screen is unresponsive.	Temporary software glitch.	Restart the device by disconnecting and reconnecting power. If the issue persists, contact customer support.

9. SPECIFICATIONS

Feature	Specification
Brand	JMANCE
Model	B0C1FWP3Y1
Display Type	IPS Touch Screen
Screen Size	7 inches
Resolution	1024 x 600
Connectivity	Wireless Apple CarPlay, Wireless Android Auto, Bluetooth 5.0, Wi-Fi, AUX, USB, TF Card
Voice Control	Siri, Google Assistant
Mounting Type	Dashboard Mount (Suction Cup)
Vehicle Service Type	Car (Compatible with most 12-24V vehicles)
Human Interface Input	Microphone, Touchscreen

10. WARRANTY AND SUPPORT

JMANCE products are designed for reliability and performance. For warranty information, technical support, or service inquiries, please refer to the contact details provided with your purchase documentation or visit the official JMANCE website. Please retain your proof of purchase for warranty claims.

© 2023 JMANCE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question