

TIMEMORE C3S PRO

TIMEMORE C3S PRO Manual Coffee Grinder Instruction Manual

Model: C3S PRO

INTRODUCTION

Thank you for choosing the TIMEMORE C3S PRO Manual Coffee Grinder. This manual provides essential information for the safe and efficient use of your new coffee grinder. Please read it thoroughly before first use and keep it for future reference.

The TIMEMORE C3S PRO features an all-metal body, a patented S2C burr for consistent grinding, a convenient foldable handle for portability, and an ergonomic design for comfortable use.

PRODUCT OVERVIEW

Familiarize yourself with the components and key features of your TIMEMORE C3S PRO coffee grinder.

- **Foldable Handle:** Designed for compact storage and portability.
- **Lid:** All-metal construction for durability.
- **Bean Hopper:** Where whole coffee beans are loaded.
- **Grind Adjustment Dial:** Located at the bottom of the burr assembly, used to set grind coarseness.
- **S2C Burr:** Patented 38mm stainless steel conical burr for precise and uniform grinding.
- **Grinds Catcher:** Collects the ground coffee.
- **Silicone Base:** Provides anti-slip stability and reduces noise during grinding.



Image: The TIMEMORE C3S PRO grinder with its handle and coffee beans, illustrating its compact design.



TIME MORE®

SPIKE TO CUT 特許取得済みS2C660刃



均一なコーヒー粉



ステンレス鋼



クリーンフレーバー

Image: Detailed view of the patented S2C 660 stainless steel burr, highlighting its precision design for uniform grinding.



TIME MORE®

静粛性・摩擦軽減

アンチスリップ・
シリコンパッド設計



Image: The base of the grinder with its silicone pad, designed for anti-slip stability and noise reduction.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Initial Cleaning:** Before first use, clean the burr and grinds catcher with the included brush to remove any manufacturing residue. **Do not wash the burr assembly with water.**
3. **Assemble Handle:** Unfold the handle and ensure it is securely attached to the grinder shaft.

OPERATING INSTRUCTIONS

1. Grind Adjustment

The TIMEMORE C3S PRO features a stepped grind adjustment system. To adjust the grind size:

- Hold the grinder body firmly.
- Unscrew the grinds catcher.

- Locate the adjustment dial at the bottom of the burr assembly.
- Turn the dial clockwise for finer grind and counter-clockwise for coarser grind. Each click represents a step in coarseness.
- Refer to the following general guidelines for common brewing methods:
 - **Espresso:** 7-8 clicks
 - **Pour Over / Hand Drip:** 13-16 clicks
 - **French Press:** 17-20 clicks



Image: Close-up of the grind adjustment dial, showing settings for various coffee brewing methods.

2. Grinding Process

1. **Load Beans:** Remove the lid and pour the desired amount of whole coffee beans into the hopper. Replace the lid.
2. **Grind:** Hold the grinder body firmly with one hand and turn the handle clockwise with the other. The beans will be ground into the grinds catcher.
3. **Collect Grounds:** Once grinding is complete, unscrew the grinds catcher to retrieve your fresh coffee grounds.



TIME MORE®

クラシックな
立体的な格子柄
滑りにくく・持ちやすい



Image: A user demonstrating the grinding process with the TIMEMORE C3S PRO, highlighting the ergonomic grip.

MAINTENANCE

Regular cleaning ensures optimal performance and longevity of your grinder.

- **Daily Cleaning:** After each use, tap the grinder gently to dislodge any remaining coffee grounds. Use the included brush to clean the burrs and grinds catcher.
- **Deep Cleaning:** Periodically, you may disassemble the grinds catcher and burr assembly (refer to product diagrams if available for detailed disassembly) to thoroughly brush away fine coffee particles.
- **Important:** The burr assembly and main body are not designed to be washed with water. Water can cause rust and damage the grinding mechanism. Use only the brush for cleaning.
- **Storage:** Store the grinder in a dry place away from direct sunlight. The foldable handle allows for compact storage.



掃除が楽 ブラシが付属しています

Image: Disassembled TIMEMORE C3S PRO components being cleaned with a brush, emphasizing dry cleaning only.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Difficulty grinding, especially at fine settings.	Very fine grind settings increase resistance.	Apply steady, even pressure. For very fine grinds, it is normal to experience more resistance. Ensure the burr is clean.
Inconsistent grind size.	Burrs may be dirty or improperly assembled.	Clean the burr assembly thoroughly with the brush. Ensure all parts are correctly reassembled after cleaning.
Grinder feels unstable when placed on a surface during use.	The foldable handle, when extended, can affect balance.	Hold the grinder firmly in your hand while grinding. The silicone base provides some stability, but holding it ensures optimal balance.
Handle is difficult to turn.	Beans are too hard or burrs are clogged.	Check for foreign objects. Clean the burrs. Try a slightly coarser setting if resistance is consistently high.

SPECIFICATIONS

Brand	TIMEMORE
Model Name	C3S PRO (C3S Series)
Manufacturer Model Number	C3S FOLD-Black
Color	Black
Material	Aluminum (Body), Stainless Steel (Burr)
Product Use	Coffee Grinding
Included Components	Coffee Grinder, Cleaning Brush
Country of Origin	China

WARRANTY AND SUPPORT

Specific warranty information is not provided in this manual. For details regarding warranty coverage, returns, or technical support, please refer to the product packaging, the seller's website, or contact TIMEMORE customer service directly. You can often find support information on the official TIMEMORE website or through the retailer where you purchased the product.

© 2023 TIMEMORE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question