

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [COSORI /](#)
- › COSORI Pro II Smart Air Fryer 5.8QT User Manual

COSORI COSORI Pro II Smart Air Fryer 5.8QT

COSORI Pro II Smart Air Fryer 5.8QT User Manual

Model: COSORI Pro II Smart Air Fryer 5.8QT (B0C1GP69V2)

INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation, maintenance, and troubleshooting of your COSORI Pro II Smart Air Fryer 5.8QT. Please read all instructions thoroughly before first use and retain this manual for future reference.

Important Safety Information:

- Always place the air fryer on a stable, heat-resistant surface.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Keep children and pets away from the appliance during operation.
- Ensure proper ventilation around the air fryer during use.
- Unplug the air fryer when not in use and before cleaning.

PRODUCT OVERVIEW

The COSORI Pro II Smart Air Fryer 5.8QT is designed for healthy cooking with less oil. It features smart controls via the VeSync app and voice assistants, along with a user-friendly touch panel.



Figure 1: COSORI Pro II Smart Air Fryer 5.8QT and included accessories. The image displays the black air fryer with its digital control panel, a smartphone connected to the VeSync app, a COSORI recipe book, and a pack of 100 square brown air fryer liners, with one liner shown inside the air fryer basket containing cooked food.

Components:

- **Main Unit:** Houses the heating element and fan.
- **Control Panel:** Digital display for temperature, time, and preset functions.
- **Removable Basket:** Non-stick cooking basket for food.
- **Air Fryer Liners:** Disposable liners for easier cleanup and protection of the basket.

SETUP

1. **Unpacking:** Carefully remove all packaging materials from the air fryer and its accessories.
2. **Initial Cleaning:** Wipe the exterior of the air fryer with a damp cloth. Wash the removable basket with warm, soapy water. Dry all parts thoroughly before use.
3. **Placement:** Place the air fryer on a flat, stable, and heat-resistant surface, ensuring at least 5 inches (13 cm) of space around the back and sides for proper air circulation.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.
5. **VeSync App Setup (Optional for Smart Features):**
 - Download the free VeSync app from the App Store or Google Play Store.
 - Create an account or log in.
 - Follow the in-app instructions to pair your COSORI Pro II Smart Air Fryer with your smartphone via Wi-Fi. This enables remote control, access to recipes, and voice assistant integration.

OPERATING INSTRUCTIONS

Basic Operation:

1. **Prepare Food:** Place your food in the air fryer basket. For easier cleanup, consider using one of the provided air fryer liners.
2. **Insert Basket:** Slide the basket firmly into the air fryer.
3. **Power On:** Press the power button on the control panel.
4. **Set Temperature and Time:** Use the temperature and time adjustment buttons to set your desired cooking parameters.
5. **Start Cooking:** Press the start/pause button to begin air frying.
6. **Shaking/Flipping (Optional):** Some recipes may require shaking or flipping food halfway through cooking. The air fryer may beep to remind you.
7. **Finish Cooking:** The air fryer will beep when the cooking cycle is complete. Carefully remove the basket and transfer food.

Using the VeSync App:

- **Remote Control:** Control the air fryer's settings (temperature, time, start/stop) from your smartphone.
- **Recipes:** Access over 200 online recipes. The app can automatically apply temperature and time settings to the air fryer.
- **Scan-to-Cook:** Use the app to scan frozen food packaging for cooking instructions and nutritional information.
- **Notifications:** Receive cooking progress updates and notifications on your phone.

Voice Control:

Once connected to the VeSync app, you can integrate your air fryer with Amazon Alexa or Google Assistant for hands-free operation. Refer to the VeSync app for specific voice commands and setup

instructions.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer and allow it to cool completely before cleaning.
2. **Cleaning the Basket:**
 - Wash the removable basket with warm, soapy water and a non-abrasive sponge.
 - For stubborn food residue, soak the basket in warm, soapy water for 10-15 minutes.
 - The basket is **not dishwasher safe**.
3. **Cleaning the Interior:** Wipe the interior of the air fryer with a damp cloth. Do not use abrasive cleaners or scouring pads.
4. **Cleaning the Exterior:** Wipe the exterior with a damp cloth.
5. **Air Fryer Liners:** The included disposable liners protect the basket from food residue and scratches, making cleanup significantly easier. They are waterproof, oilproof, and nonstick, and can be safely heated up to 465°F.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet issue; appliance malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. Contact customer support if the issue persists.
Food is not cooked evenly.	Basket overloaded; food not shaken/flipped; incorrect temperature/time.	Do not overload the basket. Shake or flip food halfway through cooking. Adjust temperature and time as needed.
White smoke coming from the air fryer.	Grease residue from previous use; high-fat food.	Clean the basket and interior thoroughly after each use. For high-fat foods, drain excess oil from the basket during cooking.
VeSync app connection issues.	Incorrect Wi-Fi password; weak Wi-Fi signal; app not updated.	Verify Wi-Fi password. Ensure the air fryer is within Wi-Fi range. Update the VeSync app to the latest version. Restart your router and air fryer.

SPECIFICATIONS

Brand	COSORI
Model Name	COSORI Pro II Smart Air Fryer
Capacity	5.8 Quarts
Control Method	App, Voice (Amazon Alexa, Google Assistant)
Special Feature	Temperature Control

Material	Plastic
Nonstick Coating	Yes
Dishwasher Safe	No (for main unit/basket)
Max Liner Temperature	465°F (for included liners)

WARRANTY AND SUPPORT

COSORI provides a limited warranty for this product. For detailed warranty information, product registration, or technical support, please visit the official COSORI website or contact their customer service. You can often find contact details in the product packaging or on the brand's official online store page.

Online Resources:

- [COSORI Official Store on Amazon](#)
- VeSync App (for smart features and recipes)