

[Manuals.plus](#) /

› [Daewoo](#) /

› DAEWOO Smart TV 32DM53HA1 32-inch HD Android 11 User Manual

Daewoo 32DM53HA1

DAEWOO Smart TV 32DM53HA1 User Manual

Model: 32DM53HA1

INTRODUCTION

Thank you for purchasing the DAEWOO Smart TV 32DM53HA1. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your new television. Please read this manual thoroughly before using the TV and keep it for future reference.

The DAEWOO 32DM53HA1 is a 32-inch HD Smart TV powered by Android 11, offering a rich entertainment experience with integrated Wi-Fi, Bluetooth, and access to popular streaming services.

SETUP

1. Unboxing and Package Contents

Carefully remove the TV from its packaging. Ensure all components are present:

- DAEWOO 32DM53HA1 Smart TV
- Remote Control
- TV Stand (2 feet)
- Power Cable
- User Manual (this document)
- Batteries for Remote Control (1x AA battery required)



Image: DAEWOO 32DM53HA1 Smart TV, showcasing its display and design.

2. Stand Installation

If you are not wall-mounting the TV, attach the included stand feet:

1. Place the TV screen-down on a soft, flat surface to prevent scratches.
2. Align each stand foot with the corresponding slots on the bottom of the TV.
3. Secure the feet using the provided screws. Ensure they are firmly attached.



Image: The DAEWOO 32DM53HA1 Smart TV positioned on a table stand.

3. Wall Mounting (Optional)

The TV supports VESA wall mounts with a 75 x 75 mm standard. Wall mount brackets are not included. Follow the instructions provided with your wall mount kit for safe installation. Ensure proper ventilation around the TV.

4. Connecting Peripherals

Connect your external devices to the TV using the appropriate ports:

- **HDMI:** Connect Blu-ray players, game consoles, or set-top boxes (3 HDMI ports available).
- **USB:** Connect USB drives for media playback (2 USB ports, including 1 USB 3.0).
- **Antenna/Cable:** Connect an antenna or cable for DVB-S2, DVB-T2, DVB-C signals.
- **Ethernet:** For a wired internet connection.
- **VGA:** For connecting older computer systems.
- **3.5mm Audio Jack:** For headphones or external audio systems.

5. Power On and Initial Setup

After connecting all necessary cables:

1. Connect the power cable to the TV and then to a power outlet (220 VAC 50 Hz).
2. Press the power button on the remote control or on the TV.
3. The TV will guide you through the initial setup wizard. Follow the on-screen prompts to:
 - Select your preferred language.
 - Connect to a Wi-Fi network or use the Ethernet connection.
 - Sign in with your Google Account to access Android TV features and the Google Play Store.
 - Scan for available TV channels (DVB-S2, DVB-T2, DVB-C).
 - Agree to terms and conditions.

OPERATING INSTRUCTIONS

1. Remote Control Overview

The included remote control allows you to navigate the TV's functions. Insert 1 AA battery into the remote control before use. The remote uses Bluetooth technology for enhanced control.

- **Power Button:** Turns the TV on or off.
- **Input/Source:** Selects input sources (HDMI, AV, TV).
- **Navigation Buttons (Up/Down/Left/Right/OK):** Navigate menus and select options.
- **Back/Return:** Returns to the previous screen or menu.
- **Home:** Accesses the Android TV home screen.
- **Volume Up/Down:** Adjusts the volume level.
- **Mute:** Mutes or unmutes the sound.
- **Channel Up/Down:** Changes TV channels.
- **App Buttons:** Dedicated buttons for popular streaming services (e.g., Netflix, YouTube, Prime Video, Disney+, HBO, Spotify).
- **Voice Control:** Activates Google Assistant for voice commands.

2. Android TV Interface

The Android TV home screen provides quick access to your favorite apps, live TV, and content recommendations. Use the navigation buttons on your remote to browse.

3. App Management

- **Installing Apps:** Access the Google Play Store from the home screen to download and install new applications.
- **Using Pre-installed Apps:** Launch apps like Netflix, YouTube, Prime Video, Disney+, HBO, and Spotify directly from the home screen or using dedicated remote buttons.
- **Uninstalling Apps:** Go to *Settings > Apps*, select the app, and choose 'Uninstall'.

4. Chromecast Built-in

The TV features Chromecast Built-in, allowing you to cast content (videos, music, photos) from compatible mobile devices or computers directly to your TV. Ensure your device and TV are on the same Wi-Fi network.

5. Bluetooth Connectivity

Connect Bluetooth-compatible devices such as headphones or game controllers to your TV. Go to *Settings > Remote & Accessories > Add accessory* to pair new devices.

6. Sound Settings

The TV features integrated speakers with 12W power, Dolby Digital Plus, and a 5-band equalizer. Access sound settings via the TV menu to customize audio output, including surround sound options.

MAINTENANCE

1. Cleaning the TV

- Always unplug the TV before cleaning.
- Use a soft, dry, lint-free cloth to wipe the screen and cabinet.
- For stubborn marks, lightly dampen the cloth with water or a mild, non-abrasive screen cleaner. Never spray cleaner directly onto the screen.
- Avoid using alcohol, benzene, thinners, or other volatile substances, as they may damage the TV.

2. Software Updates

To ensure optimal performance and access to the latest features, keep your TV's software updated. The TV can automatically check for updates when connected to the internet. You can also manually check by going to *Settings > Device Preferences > About > System update*.

3. Factory Reset

If you encounter persistent issues or wish to clear all personal data, you can perform a factory reset. Go to *Settings > Device Preferences > Reset*. Be aware that this will erase all data, settings, and installed apps, returning the TV to its original factory state.

TROUBLESHOOTING

Before contacting support, try the following solutions for common issues:

Problem	Possible Solution
No power	Ensure the power cable is securely connected to the TV and the power outlet. Check if the outlet is working. Try a different power outlet.
No picture/sound	Check the input source. Ensure external devices are powered on and connected correctly. Adjust volume. Check speaker settings.
Remote control not working	Replace the AA battery. Ensure there are no obstructions between the remote and the TV. Re-pair the Bluetooth remote if necessary (refer to operating instructions).
Cannot connect to Wi-Fi	Ensure your router is on and working. Restart the router and the TV. Check Wi-Fi password. Try connecting via Ethernet cable.
Apps freezing or crashing	Close and restart the app. Clear the app's cache (<i>Settings > Apps > [App Name] > Clear cache</i>). Update the app. If issues persist, uninstall and reinstall the app.

Problem	Possible Solution
Poor picture quality	Check antenna/cable connection. Adjust picture settings (brightness, contrast, color). Ensure the source content is high quality.

SPECIFICATIONS

Detailed technical specifications for the DAEWOO 32DM53HA1 Smart TV:

Feature	Detail
Model Number	32DM53HA1
Brand	Daewoo
Screen Size	32 Inch (81.3 cm)
Display Technology	LED (DLED Panel)
Resolution	HD (1366 x 768 pixels)
HDR Format Supported	HDR10, HLG (Hybrid Log Gamma)
Operating System	Android TV 11
Processor	Quad Core
Connectivity Technology	Wi-Fi, Bluetooth, Ethernet, VGA
HDMI Ports	3
USB Ports	2 (1x USB 3.0)
Audio Output Mode	Surround
Speaker Description	Integrated speakers with 12W power, Dolby Digital Plus, 5-band equalizer
VESA Mounting Standard	75 x 75 mm
Product Dimensions (D x W x H)	10D x 70B x 50H centimeters
Item Weight	5.5 Kilograms
Power Supply	220 VAC 50 Hz
Supported Internet Services	Amazon Prime Video, Browser, Netflix, YouTube, Prime Video, Spotify
Screen Mirroring Technology	Google Cast (Chromecast Built-in)



ENERG



DAEWOO

32DM53HA1




26 kWh/1000h

ABCDEF **G**



45 kWh/1000h

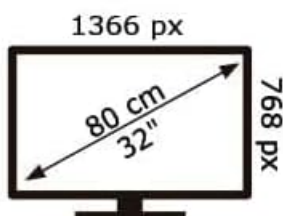

50665770

2019/2013

Image: Energy label for the DAEWOO 32DM53HA1, indicating energy efficiency class E. For more details, visit the [EPREL database](#).

WARRANTY AND SUPPORT

Warranty Information

This DAEWOO Smart TV 32DM53HA1 comes with a **three-year warranty** against manufacturing defects. Please retain

your proof of purchase for warranty claims. The availability duration for spare parts in the EU is also 3 years.

Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty service, please contact Daewoo customer support. Refer to the contact information provided with your purchase documentation or visit the official Daewoo website for regional support details.

© 2023 Daewoo. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C1GXSSKF>

More documents and user manuals: <https://manuals.plus/>