

[Manuals.plus](#) /

> [Armitron](#) /

> Armitron Sport Digital Chronograph Watch User Manual

Armitron 40/8465BLKTC

Armitron Sport Digital Chronograph Watch User Manual

Model: 40/8465BLKTC

INTRODUCTION

Thank you for choosing the Armitron Sport Digital Chronograph Watch. This manual provides detailed instructions for setting up, operating, and maintaining your watch. Please read it carefully to ensure optimal performance and longevity of your timepiece.





Image: Front view of the Armitron Sport Digital Chronograph Watch. The watch features a black resin case, a digital LCD display showing "TH 10:10" and "10:10", and a black nylon strap with hook and loop closure. Buttons for 'RESET', 'MODE', 'ST/STP', and 'EL' are visible on the sides. The display also indicates "Water Resist 165 FT".

Key Features

- Black resin case and top ring for durability.
- LCD display showing time, seconds, day, and date.
- Functions include: chronograph (stopwatch), alarm, and backlight.
- Black nylon strap with hook and loop closure for a secure and adjustable fit.
- Water resistant to 165 feet (50 meters), suitable for short periods of recreational swimming, but not diving or snorkeling.

Setup and Initial Configuration

Button Functions:

- **MODE Button:** Cycles through display modes (Time, Chronograph, Alarm).

- **RESET Button:** Used to reset values or exit setting modes.
- **ST/STP Button:** Starts/stops chronograph, adjusts values in setting mode.
- **EL Button:** Activates the backlight for illumination.

Setting Time and Date:

1. From the normal time display, press the **MODE** button three times to enter time setting mode. The seconds will begin to flash.
2. Press the **RESET** button to set the seconds to zero.
3. Press the **ST/STP** button to advance to the next setting (hours).
4. Press the **RESET** button to adjust the hours. Note the 'A' for AM and 'P' for PM indicators.
5. Repeat steps 3 and 4 for minutes, month, date, and day of the week.
6. Once all settings are complete, press the **MODE** button to return to the normal time display.

OPERATING INSTRUCTIONS

Using the Chronograph (Stopwatch):

1. From the normal time display, press the **MODE** button once to enter chronograph mode. The display will show "00:00:00".
2. Press the **ST/STP** button to start the chronograph.
3. Press the **ST/STP** button again to stop the chronograph.
4. Press the **RESET** button to reset the chronograph to zero.
5. To return to normal time display, press the **MODE** button.

Setting and Using the Alarm:

1. From the normal time display, press the **MODE** button twice to enter alarm setting mode. The alarm hours will flash.
2. Press the **RESET** button to adjust the alarm hours.
3. Press the **ST/STP** button to advance to the alarm minutes.
4. Press the **RESET** button to adjust the alarm minutes.
5. Press the **MODE** button to confirm and exit alarm setting mode.
6. To turn the alarm ON/OFF, press and hold the **RESET** button, then press the **ST/STP** button. An alarm icon will appear/disappear on the display.
7. When the alarm sounds, press any button to stop it.

Using the Backlight:

Press the **EL** button at any time to illuminate the display for easy viewing in low-light conditions. The backlight will remain on for a few seconds.

MAINTENANCE AND CARE

- **Cleaning:** Wipe the watch case and strap with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials.
- **Water Resistance:** This watch is water resistant to 165 feet (50 meters). It is suitable for short periods of recreational swimming, but not for diving or snorkeling. Do not operate buttons while the watch is wet or submerged.
- **Temperature:** Avoid exposing the watch to extreme temperatures (hot or cold) for prolonged periods, as this can affect battery life and accuracy.

- **Battery Replacement:** The watch uses 1 Product Specific battery (included). When the display dims or functions become erratic, it's time to replace the battery. Battery replacement should ideally be performed by a qualified watch technician to ensure water resistance is maintained.





Image: Side view of the Armitron Sport Digital Chronograph Watch. This image highlights the slim profile of the black resin case and the texture of the black nylon strap. Two buttons are visible on the side of the watch case.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is dim or blank.	Low battery.	Replace the battery.
Watch not keeping accurate time.	Low battery or internal malfunction.	Replace battery. If problem persists, contact customer support.
Buttons are unresponsive.	Watch may be wet or internal issue.	Ensure watch is dry. If problem persists, contact customer support.
Alarm not sounding.	Alarm is turned off.	Ensure alarm is activated (check for alarm icon on display).

SPECIFICATIONS

- **Model Number:** 40/8465BLKTC
- **Case Material:** Resin
- **Strap Material:** Nylon with hook and loop closure
- **Display Type:** Digital LCD
- **Water Resistance:** 165 feet (50 meters)
- **Battery Type:** 1 Product Specific battery (included)
- **Dimensions:** Approximately 5.51 x 3.74 x 3.74 inches (Package Dimensions)
- **Weight:** Approximately 2.82 ounces





Image: Back view of the Armitron Sport Digital Chronograph Watch. This perspective shows the reverse side of the watch, including the back of the resin case and the full length of the black nylon strap with its hook and loop closure system.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official Armitron website or contact their customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

Armitron Official Website: www.armitron.com

© 2024 Armitron. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question