

[Manuals.plus](#) /

› [Armitron](#) /

› Armitron Sport Digital Chronograph Watch User Manual

Armitron 40/8439GBKTC

Armitron Sport Digital Chronograph Watch User Manual

Model: 40/8439GBKTC | Brand: Armitron

1. INTRODUCTION

Thank you for choosing the Armitron Sport Digital Chronograph Watch. This timepiece is designed for durability and functionality, featuring a robust resin case, a clear LCD display, and essential functions like chronograph, alarm, and backlight. It is also water resistant, making it suitable for various activities. This manual will guide you through the setup, operation, and maintenance of your new watch.



Figure 1.1: Front view of the Armitron Sport Digital Chronograph Watch, displaying the time, day, and date, with visible function buttons.

2. COMPONENTS AND CONTROLS

Your Armitron Sport watch features several buttons for navigating its functions and a clear LCD display. Familiarize yourself with these controls:

- **ADJ (Adjust) Button:** Typically used to enter and exit setting modes, or to confirm settings.
- **MODE Button:** Used to cycle through different display modes (Time, Chronograph, Alarm).

- **SP/STP (Start/Stop) Button:** Used to start and stop the chronograph, or to increment values during setting.
- **EL (Electroluminescent) Button:** Activates the backlight for improved visibility in low light conditions.



Figure 2.1: Side view of the watch, illustrating the placement of the ADJ, MODE, SP/STP, and EL buttons.

3. INITIAL SETUP

3.1 Setting Time and Date

1. From the normal time display, press the **MODE** button repeatedly until the time setting mode is indicated (e.g.,

flashing digits).

2. Press the **ADJ** button to select the digit or setting you wish to change (e.g., hours, minutes, year, month, day).
3. Use the **SP/STP** button to increment the selected value. Hold the button to rapidly advance.
4. Repeat steps 2 and 3 until all time and date settings are correct.
5. Press the **ADJ** button again to exit the setting mode and return to the normal time display.

3.2 Setting the Alarm

1. From the normal time display, press the **MODE** button until the alarm display appears.
2. Press the **ADJ** button to activate the alarm setting mode (e.g., flashing alarm time).
3. Use the **SP/STP** button to set the desired alarm hour and minute.
4. Press the **ADJ** button to confirm the alarm time.
5. To turn the alarm ON/OFF, press the **SP/STP** button while in the alarm display mode. An alarm icon will typically appear when the alarm is active.

4. OPERATING INSTRUCTIONS

4.1 Time Display Modes

The watch can display time in 12-hour or 24-hour format, along with seconds, day, and date. Press the **MODE** button to cycle through the main display modes.

4.2 Chronograph Function (Stopwatch)

1. Press the **MODE** button until the chronograph display appears (usually indicated by 'CHRONO' or 'STP').
2. Press the **SP/STP** button to start the chronograph.
3. Press the **SP/STP** button again to stop the chronograph.
4. To reset the chronograph to zero, press the **ADJ** button while the chronograph is stopped.

4.3 Backlight Operation

To illuminate the display in dark conditions, press the **EL** button. The backlight will remain active for a few seconds.

4.4 Water Resistance Guidelines

Your Armitron Sport watch is water resistant to 165 feet (50 meters). This means it is suitable for short periods of recreational swimming, showering, and general water exposure. It is *not* suitable for diving, snorkeling, or high-impact water sports. Do not operate buttons while the watch is submerged in water.

5. CARE AND MAINTENANCE

- **Cleaning:** Wipe the watch regularly with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by drying. Avoid harsh chemicals or abrasive cleaners.
- **Temperature:** Avoid exposing the watch to extreme temperatures (hot or cold) for prolonged periods, as this can affect battery life and accuracy.
- **Impact:** While durable, avoid strong impacts or dropping the watch.
- **Battery Replacement:** The watch uses a product-specific battery. When the display dims or functions become erratic, it may be time for a battery replacement. It is recommended to have this done by a qualified watch technician to ensure water resistance is maintained.



Figure 5.1: Back view of the watch, highlighting the durable resin strap and buckle closure, designed for secure wear.

6. TROUBLESHOOTING

If you encounter issues with your watch, please refer to the table below for common problems and their solutions.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Display is dim or blank.	Low battery.	Replace the battery.
Time is incorrect.	Time not set correctly or accidental button press.	Refer to Section 3.1 to reset the time and date.
Buttons are unresponsive.	Watch may be in a locked mode or internal issue.	Try pressing the MODE button repeatedly. If issue persists, a battery reset (removal and reinsertion) might be needed by a technician.
Water inside the display.	Water resistance compromised (e.g., buttons pressed underwater, seal damage).	Immediately take the watch to a qualified watch repair center. Do not attempt to dry it yourself.

7. TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	40/8439GBKTC
Movement Type	Quartz
Case Material	Resin
Case Diameter	53 Millimetres
Case Thickness	16.5 Millimetres
Band Material Type	Resin
Band Width	22 Millimetres
Band Color	Black
Water Resistance Depth	165 Feet (50 Meters)
Item Weight	132 g
Battery	1 Product Specific battery (included)

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Armitron watches typically come with a limited warranty covering manufacturing defects. Please refer to the warranty card included with your purchase or visit the official Armitron website for specific warranty terms and conditions. Keep your proof of purchase for warranty claims.

8.2 Customer Support

For further assistance, technical support, or service inquiries, please contact Armitron customer service. Contact details can usually be found on the official Armitron website or on the packaging of your product. When contacting support, please have your watch model number (40/8439GBKTC) and purchase details ready.