

West Bend WB0300RCR2XRB

West Bend Mini Fridge with Freezer (Model WB0300RCR2XRB) User Manual

Brand: West Bend | Model: WB0300RCR2XRB

1. PRODUCT OVERVIEW

This retro-designed compact fridge offers a cool, colorful, and sophisticated look for any setting. The 3.1 cu. ft. freezer/refrigerator is an ideal fit for your home, dorm, or office, saving space while keeping your favorite foods and beverages within reach. The double-door design allows for easy access to salads, fruits, and snacks throughout your day, and the unit's spacious freezer capacity saves you money as you store frozen foods in bulk. Manual defrost maintains optimal temperature with the turn of a dial. Built-in door shelves and the beverage can dispenser make food storage simple, accommodating 2-liter bottles, six (6) 12 oz. drinks, and assorted condiments. Two adjustable, removable glass shelves allow for easy cleaning and viewing of your food items at-a-glance, and mechanical temperature control allows for easy selection of the unit's correct settings with the turn of a dial. This chicly designed compact fridge complements any setting.

Key Features

- **Compact Design:** 3.1 Cu.Ft. of space is perfect for food, soda, beer, or other beverages with a freezer section for frozen goods.
- **Space Saving:** Ideal for dorm rooms, offices, apartments and more. Dimensions: 18 x 20.75 x 34.5 inches.
- **Adjustable Temperature:** Mechanical temperature control with manual defrost.
- **Versatile Features:** 2 Adjustable removable shelves, crisper drawer, door shelves for drinks or snacks, mini ice cube tray.
- **Easy Installation:** Designed for freestanding installation. Proper ventilation is required to maintain satisfactory cooling and overall performance.





Figure 1: Front view of the West Bend Mini Fridge with Freezer.



2. IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using this appliance to reduce the risk of fire, electric shock, or injury.

- Ensure the appliance is properly grounded.
- Do not operate the appliance with a damaged cord or plug.
- Keep ventilation openings clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments, unless they are of the type recommended by the manufacturer.
- Unplug the refrigerator before cleaning or performing any maintenance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Refrigerator Unit
- Glass Shelves (2)
- Care and Use Manual

4. INSTALLATION AND SETUP

4.1 Unpacking

1. Remove all packaging materials, including the foam base and adhesive tape.
2. Inspect the refrigerator for any damage. Report any damage to your retailer immediately.
3. Clean the interior and exterior of the refrigerator with a soft cloth and mild detergent before use.

4.2 Placement

- Place the refrigerator on a firm, level surface.
- Allow at least 5 inches (12.7 cm) of space between the back and sides of the refrigerator and any adjacent walls or cabinets for proper air circulation.
- Avoid placing the refrigerator in direct sunlight or near heat sources (e.g., stoves, heaters).
- Ensure the ambient temperature is between 50°F (10°C) and 90°F (32°C) for optimal performance.



Figure 3: Refrigerator placed in a bedroom setting.

VINTAGE STYLE

Robin's Egg Blue refrigerator and freezer with a sleek and sophisticated retro design



Figure 4: Refrigerator placed in an office setting.

4.3 Power Connection

Plug the refrigerator into a dedicated, grounded 120V AC outlet. Do not use extension cords or adapter plugs.

4.4 Initial Operation

After plugging in, allow the refrigerator to stand for at least 2-4 hours before loading with food. This allows the refrigerant to settle and ensures efficient cooling.

5. OPERATING YOUR REFRIGERATOR

5.1 Temperature Control

The refrigerator features a mechanical temperature control dial located inside the fresh food compartment. Turn the dial to adjust the cooling intensity. Higher numbers typically indicate colder temperatures. Start with a medium setting and adjust as needed based on your preferences and the ambient temperature.

AMPLE STORAGE

Spacious 3.0 cu. ft. capacity stores all your favorite foods, snacks, beverages, wine and more



Figure 5: Interior view with temperature control dial (top right of fresh food compartment).

5.2 Storage Recommendations

- **Fresh Food Compartment:** Ideal for fruits, vegetables, dairy products, and beverages. The adjustable glass shelves allow for flexible storage.
- **Freezer Compartment:** Suitable for storing frozen foods. Ensure items are properly sealed to prevent freezer burn.
- **Door Shelves:** Designed for bottles, cans, and smaller condiments. The beverage can dispenser holds standard 12 oz. cans.

6. CARE AND MAINTENANCE

6.1 Cleaning

1. Unplug the refrigerator from the power outlet.
2. Remove all food items and removable parts (shelves, crisper drawer).
3. Wash interior surfaces and removable parts with a solution of mild detergent and warm water. Rinse thoroughly and dry.

4. Clean the exterior with a soft cloth and mild detergent.
5. Periodically clean the condenser coils at the back of the unit with a soft brush or vacuum cleaner to maintain efficiency.

2 GLASS SHELVES

Two adjustable, removable glass shelves allow for easy viewing and quick access



Figure 6: Adjustable glass shelves and crisper drawer for easy cleaning.

6.2 Manual Defrost

The freezer compartment requires manual defrosting when frost accumulation reaches approximately 1/4 inch (0.6 cm) thick.

1. Unplug the refrigerator.
2. Remove all food from the freezer and place it in a cooler.
3. Leave the freezer door open to allow frost to melt naturally. Place towels at the bottom to absorb water.
4. Do not use sharp objects or heating devices to remove frost, as this can damage the freezer.
5. Once defrosted, clean and dry the interior thoroughly before plugging the unit back in and returning food.

7. TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Refrigerator does not operate.	Not plugged in; circuit breaker tripped; temperature control set to 'OFF'.	Ensure plug is secure; reset circuit breaker; turn temperature control to desired setting.
Refrigerator is not cold enough.	Temperature control set too warm; door opened too frequently; poor ventilation; excessive food load.	Adjust temperature control to a colder setting; minimize door openings; ensure adequate clearance around unit; reduce food load temporarily.
Food in refrigerator is freezing.	Temperature control set too cold.	Adjust temperature control to a warmer setting.
Excessive frost buildup in freezer.	Freezer door not sealed properly; frequent door openings; high humidity.	Check door seal; minimize door openings; perform manual defrost.
Unusual noises.	Refrigerator not level; items rattling inside; normal compressor operation.	Adjust leveling feet; rearrange items; gurgling/humming sounds are normal.

8. PRODUCT SPECIFICATIONS

Feature	Specification
Brand	West Bend
Model Number	WB0300RCR2XRB
Capacity	3.1 Cubic Feet (Total)
Fresh Food Capacity	2.2 Cubic Feet
Freezer Capacity	0.9 Cubic Feet
Dimensions (D x W x H)	20.75 x 18 x 34.5 inches
Item Weight	48 Pounds
Installation Type	Freestanding
Defrost System	Manual (Freezer), Automatic (Refrigerator)
Voltage	120 Volts

Feature	Specification
Certification	Energy Star
Color	Robin's Egg Blue

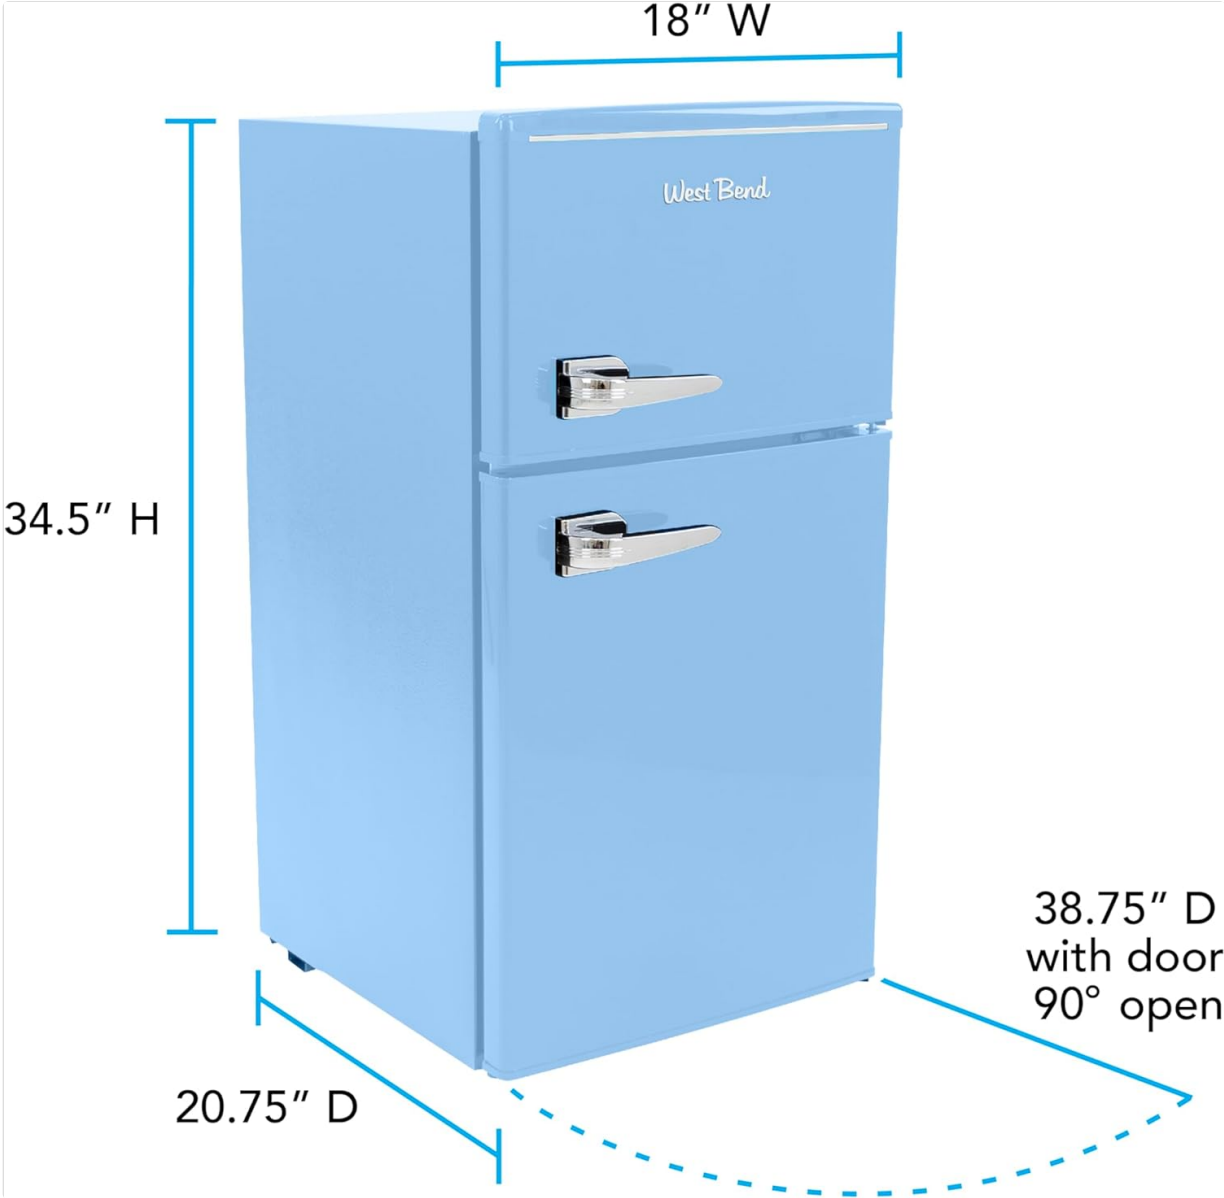








Figure 7: Product dimensions.

9. WARRANTY AND CUSTOMER SUPPORT

This West Bend Mini Fridge with Freezer (Model WB0300RCR2XRB) includes a 1-year manufacturer limited warranty from the date of purchase. Please retain your proof of purchase for warranty claims.

For customer support, troubleshooting assistance, or to inquire about warranty service, please visit the official West Bend store or contact their customer service department.

Visit the [West Bend Store on Amazon](#) for more information and support resources.

 <p>West Bend® Automatic Bread & Dough Maker</p> <p>Register this product with West Bend's Bread & Dough Maker website. http://www.westbend.com/breadmaker</p> <p>Product registration is required to activate warranty.</p> <p>Important Safeguards 2 Before Using for the First Time 3 Using Your West Bend® Bread Maker 4 Cleaning Your West Bend® Bread Maker 5 Troubleshooting 6 Recipes 7 Warranty 8</p> <p>SAVE THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE</p> <p>© 2011 West Bend® www.westbend.com</p>	<p>West Bend Automatic Bread & Dough Maker: Recipes and Instructions</p> <p>Comprehensive user manual for the West Bend Automatic Bread & Dough Maker, featuring recipes, operating instructions, ingredient guides, and troubleshooting tips.</p>
 <p>West Bend® HOT AIR POPCORN POPPER</p> <p>Register this product with West Bend's Popcorn Popper website. http://www.westbend.com/popcornpopper</p> <p>Product registration is required to activate warranty.</p> <p>Important Safeguards 2 Before Using for the First Time 3 Using Your West Bend® Popcorn Popper 4 Cleaning Your West Bend® Popcorn Popper 5 Troubleshooting 6 Recipes 7 Warranty 8</p> <p>SAVE THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE</p> <p>© 2011 West Bend® www.westbend.com</p>	<p>West Bend Hot Air Popcorn Popper Instruction Manual</p> <p>This document provides instructions for using, cleaning, and maintaining the West Bend Hot Air Popcorn Popper. It includes important safety precautions, helpful hints, and recipes.</p>
 <p>WEST BEND® 0.9 cu. ft. Microwave Oven Instruction Manual</p> <p>Register this product with West Bend's Microwave Oven website. http://www.westbend.com/microwaveoven</p> <p>Product registration is required to activate warranty.</p> <p>Important Safeguards 2 Installation Instructions 3 Precautions 4 Control Panel 5 Operating Instructions 6 Special Features 7 Special Cooking Functions 8-11 Special Accessories 12 Care & Maintenance 13 Warranty 14</p> <p>SAVE THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE</p> <p>© 2011 West Bend® www.westbend.com</p>	<p>West Bend 0.9 cu. ft. Microwave Oven Instruction Manual</p> <p>This instruction manual provides essential safety guidelines, installation procedures, operating instructions, control panel details, special features, cooking techniques, and care & maintenance information for the West Bend 0.9 cu. ft. Microwave Oven (Models: WBMW92W, WBMW92B, WBMW92S).</p>
 <p>West Bend® BREADMAKER Instruction Manual</p> <p>Register this product with West Bend's Breadmaker website. http://www.westbend.com/breadmaker</p> <p>Product registration is required to activate warranty.</p> <p>Important Safeguards 2 Before Using for the First Time 3 Using Your West Bend® Breadmaker 4 Cleaning Your West Bend® Breadmaker 5 Troubleshooting 6 Recipes 7 Warranty 8</p> <p>SAVE THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE</p> <p>© 2011 West Bend® www.westbend.com</p>	<p>West Bend Breadmaker Instruction Manual</p> <p>Comprehensive instruction manual for the West Bend Breadmaker, covering setup, operation, troubleshooting, and recipes. Learn how to make various types of bread with your West Bend appliance.</p>
 <p>West Bend® LARGE CAPACITY COFFEEMAKERS Instruction Manual</p> <p>Register this product with West Bend's Coffeemaker website. http://www.westbend.com/coffeemaker</p> <p>Product registration is required to activate warranty.</p> <p>Important Safeguards 2 Before Using for the First Time 3 Using Your West Bend® Coffeemaker 4 Cleaning Your West Bend® Coffeemaker 5 Warranty 6</p> <p>SAVE THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE</p> <p>© 2011 West Bend® www.westbend.com</p>	<p>West Bend Large Capacity Coffeemaker Instruction Manual</p> <p>Comprehensive instruction manual for West Bend Large Capacity Coffeemakers, covering important safeguards, brewing instructions, cleaning, and warranty information.</p>
 <p>West Bend® AUTOMATIC BREAD MAKER Instruction Manual</p> <p>Register this product with West Bend's Breadmaker website. http://www.westbend.com/breadmaker</p> <p>Product registration is required to activate warranty.</p> <p>Important Safeguards 2 Before Using for the First Time 3 Using Your West Bend® Bread Maker 4 Cleaning Your West Bend® Breadmaker 5 Troubleshooting 6 Recipes 7 Warranty 8</p> <p>SAVE THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE</p> <p>© 2011 West Bend® www.westbend.com</p>	<p>West Bend Automatic Bread Maker Instruction Manual</p> <p>User guide for the West Bend Automatic Bread Maker, covering important safeguards, operating instructions, cleaning, troubleshooting, and recipes for homemade bread.</p>

