

Manuals.plus /
› km5 /
› Bluetooth CD Player Instant Disk Audio-CP1(White) User Manual

km5 CP1-001(W)

Bluetooth CD Player Instant Disk Audio-CP1 User Manual

Model: CP1-001(W) | Brand: km5

[Overview](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. PRODUCT OVERVIEW

The km5 Instant Disk Audio-CP1 is a portable Bluetooth CD player designed to offer a modern way to enjoy your CD collection. Its unique photo frame design allows for display of CD jacket art, making it an aesthetic addition to any space. Equipped with Bluetooth 5.0, it provides wireless connectivity to headphones or speakers, and its built-in lithium-ion battery ensures portability with up to 7-8 hours of continuous playback.

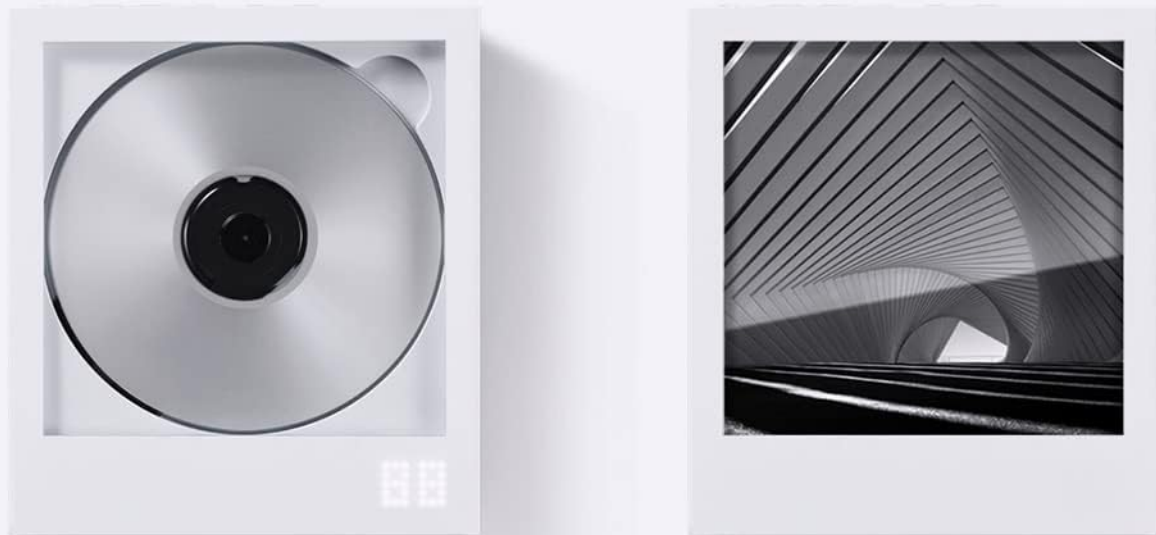


Figure 1.1: Front view of the CP1 CD Player. This image displays the white CP1 CD player from the front, highlighting its square shape and the transparent cover that allows the CD to be seen. A small digital display is visible at the bottom right.

Key Features:

- **Instant Photo Frame Design:** Allows display of CD jacket art and can be wall-mounted (bracket sold separately).
- **Bluetooth 5.0 Connectivity:** Connects wirelessly to earphones or Bluetooth speakers.
- **Portable Power:** Integrated 1,800 mAh lithium-ion battery provides approximately 7-8 hours of playback.
- **USB Type-C Charging:** Convenient and modern charging method.
- **Compact Dimensions:** Measures 160mm x 140mm x 26mm and weighs 300g.
- **Supported Disc Formats:** CD, CD-R, CD-RW, MP3 (12CM or 8CM disc size).
- **ASP (Shockproof):** 2M SDRAM for anti-shock protection.
- **Audio Output:** 3.5mm Stereo Earphone Jack.
- **Playback Modes:** Full songs playback, Full loop playback, 1 loop playback.
- **False Operation Lock Key:** Prevents accidental button presses.

2. SETUP GUIDE

2.1 Unpacking and Initial Charge

Carefully remove the CP1 CD player from its packaging. Before first use, it is recommended to fully charge the device. Connect the provided USB Type-C cable to the charging port on the side of the player and the other end to a compatible USB power adapter (not included) or a computer USB port.

- The charging indicator light will illuminate during charging.
- A full charge typically takes approximately 1 hour.
- Once fully charged, the indicator light may change color or turn off, depending on the model.



Figure 2.1: USB Type-C Charging Port. This image shows a close-up of the side of the CP1 player, highlighting the USB Type-C port for charging and a small indicator light.

2.2 Inserting a CD

To insert a CD:

1. Gently lift the transparent cover of the CD player.
2. Place the CD onto the spindle with the label side facing up. Ensure the CD is securely seated.
3. Close the transparent cover until it clicks into place.



Figure 2.2: CD Insertion. This image provides a top-down view of the CP1 player with a CD already placed inside, illustrating how the disc fits under the transparent cover.



Figure 2.3: Open CD Player. This image shows several CP1 players, with one open to reveal the CD loading mechanism, demonstrating the ease of disc insertion.

2.3 Wall Mounting (Optional)

The CP1 CD player is designed to be wall-mountable, allowing you to display your CD jacket art. A wall mounting bracket is sold separately and is required for this feature. Refer to the instructions provided with the wall mounting bracket for proper installation.



Figure 2.4: Wall-Mounted CP1. This image shows the CP1 player mounted on a wall, demonstrating its use as a decorative item that displays CD artwork.

3. OPERATION

3.1 Powering On/Off

To power on the device, locate the power button (usually marked with a power symbol) on the player and press it. To power off, press and hold the power button until the device shuts down.

3.2 Basic Playback Controls

The CP1 features intuitive controls located on the top or side of the device. Refer to the image below for button identification.



Figure 3.1: Control Buttons. This image provides a close-up of the side of the CP1 player, clearly showing the playback control buttons.

- **Play/Pause:** Press to start or pause playback.
- **Next Track:** Press to skip to the next song.
- **Previous Track:** Press to go back to the beginning of the current song, or to the previous song if pressed again.
- **Volume Up/Down:** Adjust the playback volume.

3.3 Playback Modes

The CP1 offers several playback modes, typically controlled by a switch or button on the device:

- **Full Songs Playback:** Plays all tracks on the CD in sequence.
- **Full Loop Playback:** Repeats the entire CD after all tracks have played.
- **1 Loop Playback:** Repeats the current track continuously.

3.4 Bluetooth Pairing

To connect your CP1 to Bluetooth earphones or speakers:

1. Ensure the CP1 is powered on.
2. Activate Bluetooth pairing mode on your external Bluetooth device (refer to its manual for specific instructions).
3. The CP1 should automatically enter Bluetooth pairing mode when powered on or when a dedicated Bluetooth button is pressed (if available). A Bluetooth indicator light may flash.
4. On your external device, select "CP1" or a similar name from the list of available Bluetooth devices.
5. Once connected, the Bluetooth indicator light on the CP1 will typically become solid.

Note: Bluetooth audio compression may slightly affect audio dynamic range compared to wired connections.

3.5 Using the 3.5mm Stereo Earphone Jack

For a wired audio experience, connect standard 3.5mm headphones or an audio cable to the 3.5mm stereo earphone jack located on the side of the CP1. This will typically disable Bluetooth audio output.

4. MAINTENANCE AND CARE

4.1 Cleaning the Device

- Wipe the exterior of the CP1 with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- For the transparent cover, use a microfiber cloth to avoid scratches.

4.2 CD Care

- Handle CDs by their edges to avoid fingerprints on the playing surface.
- Clean CDs with a soft, lint-free cloth, wiping from the center outwards.
- Store CDs in their cases to prevent dust and scratches.

4.3 Battery Care

- Avoid exposing the device to extreme temperatures.
- If storing the device for an extended period, charge the battery to approximately 50% to prolong its lifespan.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Low battery; Power button not pressed correctly.	Charge the device fully. Press and hold the power button firmly.
CD does not play or skips.	CD is dirty, scratched, or inserted incorrectly; Disc format not supported.	Clean the CD. Ensure the CD is inserted correctly. Verify the disc format (CD/CD-R/CD-RW/MP3).
Cannot pair with Bluetooth device.	Bluetooth not enabled on external device; Device too far; Interference.	Ensure Bluetooth is active and in pairing mode on your external device. Move devices closer. Restart both devices.
No sound from headphones/speakers.	Volume too low; Incorrect output selected (Bluetooth vs. wired); Faulty headphones/cable.	Increase volume. Ensure correct connection (Bluetooth paired or wired connected). Test with different headphones/cable.

Problem	Possible Cause	Solution
Buttons are unresponsive.	False operation lock key is engaged.	Locate the lock switch (often on the back or side) and disengage it.

6. PRODUCT SPECIFICATIONS

Feature	Detail
Model Name	CP1
Item Model Number	CP1-001(W)
Brand	km5
Product Dimensions	6.3 x 5.51 x 1.02 inches (160mm x 140mm x 26mm)
Item Weight	10.6 ounces (300g)
Connectivity Technology	Bluetooth 5.0
Supported Disc Formats	CD, CD-R, CD-RW, MP3 (12CM or 8CM disc size)
Audio Output	3.5mm Stereo Earphone Jack
Power Supply	USB 5V, Lithium Ion Battery (1,800 mAh)
Playback Time	Approx. 7-8 hours
Charging Method	USB Type-C
ASP (Shockproof)	2M SDRAM

7. WARRANTY AND SUPPORT

7.1 Warranty Information

This product comes with a standard manufacturer's warranty. Please retain your proof of purchase for warranty claims. For specific warranty terms and duration, refer to the documentation included with your product or visit the official km5 website. Typical warranty covers defects in materials and workmanship under normal use.
Note: Protection plans may be available for extended coverage. Check with your retailer for details.

7.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact km5 customer support. You can typically find contact information on the manufacturer's website or within the product packaging.
Online Resources: For additional information and updates, visit the official km5 store on Amazon:[km5 Official Store](#)

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C1J6LDJ6>

More documents and user manuals: <https://manuals.plus/>