

[Manuals.plus](#) /

› [Kobo](#) /

› Kobo Stylus 2 Instruction Manual for Libra Colour, Sage, Elipsa, and Elipsa 2E

Kobo N605-AC-BK-S-PN

Kobo Stylus 2 Instruction Manual

MODEL: N605-AC-BK-S-PN

1. Introduction

The Kobo Stylus 2 is designed to enhance your eReading experience by allowing you to write, annotate, and draw directly on your compatible Kobo eReader. Its lightweight and ergonomic design, combined with a redesigned tip, offers a natural and comfortable writing experience.

Key Features:

- **Natural Writing Experience:** Write thoughts and ideas on your Kobo eReader as if on paper.
- **Enhanced Annotation:** Easily underline, circle, or highlight text in eBooks and PDFs.
- **Integrated Notebook Function:** Take notes and annotate documents with dedicated notebook features.
- **Convenient Controls:** Features a dedicated button for highlighting and an eraser on the back for corrections.
- **USB-C Rechargeable:** Simple and fast charging via a USB-C power adapter.
- **Replacement Tips Included:** Comes with 2 replacement tips for extended use.

Compatibility:

The Kobo Stylus 2 is compatible only with the following Kobo eReaders: Kobo Libra Colour, Kobo Sage, Kobo Elipsa, and Kobo Elipsa 2E.



Figure 1: Kobo Stylus 2, a sleek black digital pen.

2. Setup

2.1 Initial Activation and Charging

1. For first use, connect the Kobo Stylus 2 to a USB-C power source (e.g., a computer USB port or a wall adapter) using a USB-C cable (not included) to activate it.
2. Allow approximately 3 hours for a full charge. The stylus can be charged via any standard USB-C power adapter.

2.2 Pairing with your Kobo eReader

The Kobo Stylus 2 should automatically pair with a compatible Kobo eReader when brought into close proximity. Ensure your eReader's software is up to date for optimal performance.

Pair kobo stylus2 with compatible Kobo eReaders*



Figure 2: The Kobo Stylus 2 in use, demonstrating its seamless interaction with a Kobo eReader for highlighting.

3. Operating Instructions

3.1 Writing and Drawing

- To write or draw, simply touch the stylus tip to the eReader screen. The redesigned tip provides a smooth, pen-on-paper feel.
- Utilize the integrated notebook function on your compatible Kobo eReader to create freehand notes, sketches, and diagrams.

3.2 Highlighting and Annotating

- **Highlighting:** Press and hold the dedicated button on the side of the stylus while dragging the tip over the text you wish to highlight.

- **Marginal Notes:** Write directly in the margins of your eBooks and PDFs to add personal notes or comments.
- **Circling/Underlining:** Use the stylus to circle or underline important words or phrases.


3.3 Erasing

- To erase mistakes, simply flip the stylus and use the eraser on the back end to rub out unwanted marks on the screen.



Figure 3: The Kobo Stylus 2 illustrating its highlight button and eraser functionality for easy corrections.

Mark up, highlight, and erase with ease

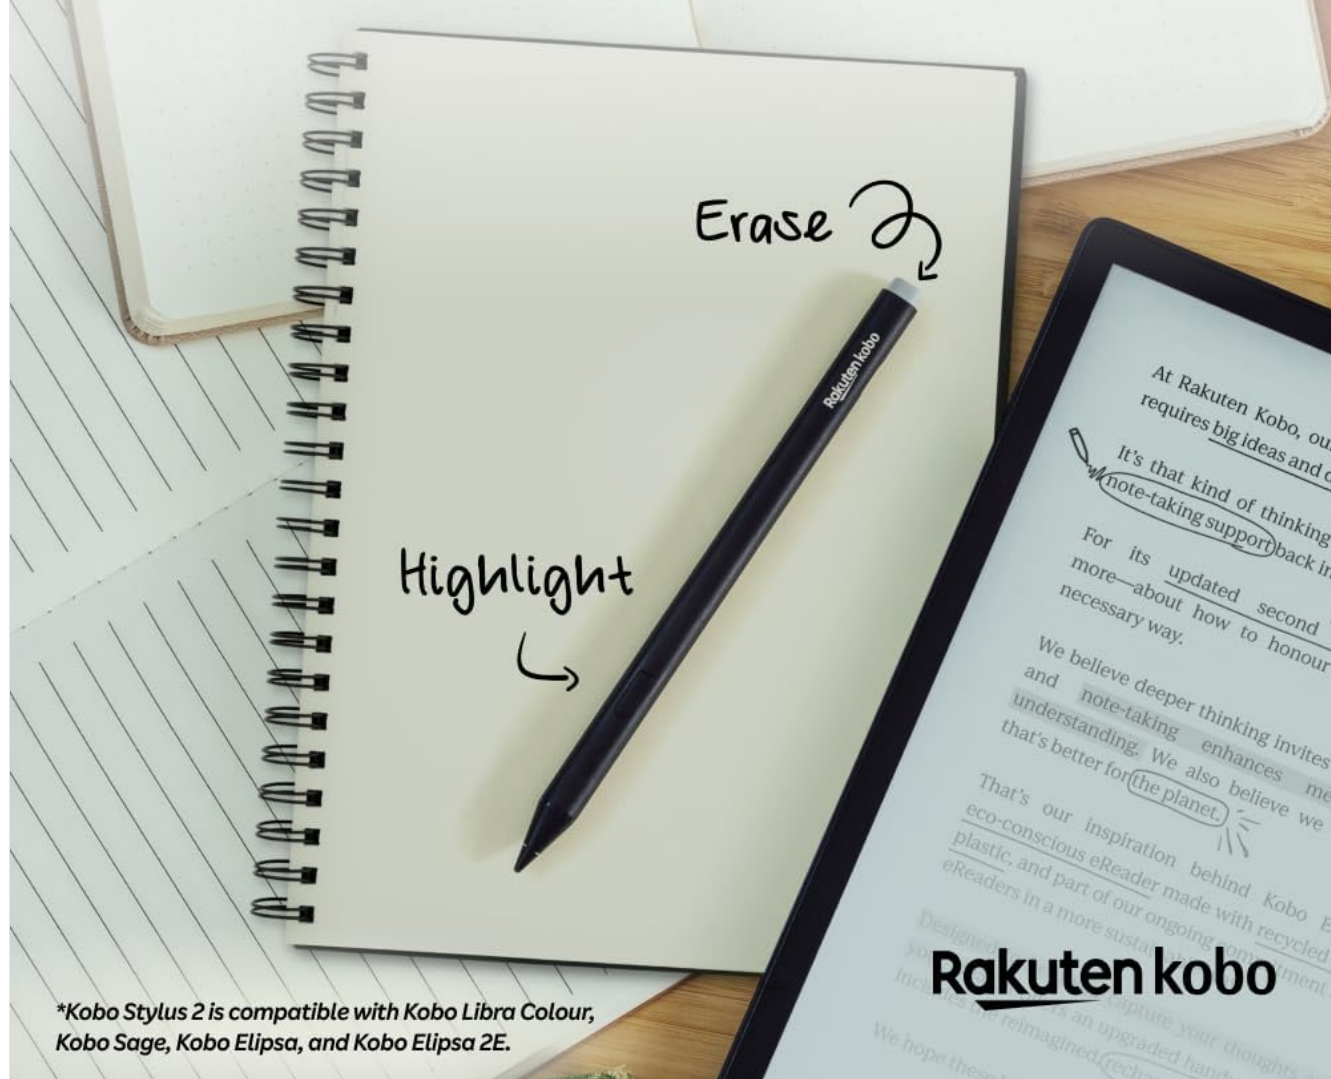

**Kobo Stylus 2 is compatible with Kobo Libra Colour, Kobo Sage, Kobo Elipsa, and Kobo Elipsa 2E.*

Figure 4: The Kobo Stylus 2 enabling users to capture thoughts and notes in various colors on a Kobo Libra Colour eReader.

4. Maintenance

4.1 Charging

To charge your Kobo Stylus 2, connect it to a USB-C power source using a compatible USB-C cable. A full charge takes approximately 3 hours.

4.2 Replacing Stylus Tips

The Kobo Stylus 2 comes with 2 replacement tips. If the tip becomes worn or damaged, it can be easily replaced. Additional tips are sold separately.

1. Gently pull the old tip straight out from the stylus body.
2. Insert a new tip firmly into the stylus until it clicks into place.

5. Troubleshooting

5.1 Stylus Not Responding

- Ensure the stylus is charged. Connect it to a USB-C power source for at least 15-30 minutes.
- Verify that your Kobo eReader is compatible with the Kobo Stylus 2 (Libra Colour, Sage, Elipsa, Elipsa 2E).
- Restart your Kobo eReader.
- Check if the stylus tip is securely installed and not damaged. Replace if necessary.

5.2 Charging Issues

- Ensure the USB-C cable and power adapter are functioning correctly. Try a different cable or adapter.
- Verify the USB-C port on the stylus is clean and free of debris.

6. Specifications

Feature	Detail
Brand	Kobo
Model Number	N605-AC-BK-S-PN
Color	Black
Material	Conductive Material
Item Weight	13 grams
Dimensions (LxWxH)	8 x 9 x 155 mm
Battery Type	Lithium Ion
Number of Batteries	1 (included)
Charging Time	3 Hours
Compatible Devices	Kobo Elipsa 2E, Kobo Libra Colour, Kobo Sage
UPC	681495008636

7. Warranty and Support

7.1 Product Warranty

The Kobo Stylus 2 comes with a **2-year product warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

7.2 Customer Support

For further assistance, technical support, or to purchase additional accessories such as replacement tips, please visit the official Kobo website or contact Kobo customer service. You can also refer to the support section of your Kobo eReader for device-specific help.

Official Kobo Store: [Kobo Store on Amazon](#)