

[Manuals.plus](#) /

› [Redmi](#) /

› Redmi Buds 4 Harry Potter Edition Wireless Earbuds User Manual

Redmi Redmi Buds 4 (PW-FTUP-0E2D)

Redmi Buds 4 Harry Potter Edition User Manual

Model: PW-FTUP-0E2D



INTRODUCTION

Thank you for choosing the Redmi Buds 4 Harry Potter Edition wireless earbuds. This manual provides detailed instructions on how to set up, operate, maintain, and troubleshoot your device to ensure optimal performance and longevity. Please read this manual thoroughly before use.

WHAT'S IN THE BOX

- Redmi Buds 4 Harry Potter Edition Earbuds
- Charging Case
- USB Charging Cable
- Protective Case (Golden Snitch Pouch)
- User Manual
- Additional Ear Tips



Image: All items included in the Redmi Buds 4 Harry Potter Edition package.

PRODUCT OVERVIEW

The Redmi Buds 4 Harry Potter Edition features a unique design inspired by the Harry Potter universe, including the Hogwarts crest on the charging case and lightning bolt motifs on the earbuds. The product includes a special Golden Snitch protective pouch.



Image: Redmi Buds 4 Harry Potter Edition earbuds in their open charging case.

Components:

- **Earbuds:** Left and Right earbuds with touch control areas.
- **Charging Case:** Houses and charges the earbuds. Features a USB-C charging port.
- **LED Indicator:** Displays charging status and pairing mode.
- **Microphones:** For calls and Active Noise Cancellation.



Image: Closed charging case with the Hogwarts crest visible.

SETUP

1. Charging the Earbuds and Case

1. **Initial Charge:** Before first use, place both earbuds into the charging case and connect the case to a power source using the provided USB-C cable. Ensure the earbuds are fully charged.
2. **Charging Status:** The LED indicator on the charging case will show the charging status. A full charge for the case takes approximately 2 hours. The earbuds charge automatically when placed in the case.
3. **Battery Life:** The earbuds and case combined offer up to 30 hours of battery life.

2. Pairing with a Device

1. **First-time Pairing:** Open the charging case. The earbuds will automatically enter pairing mode, and the LED indicator will flash.
2. **Enable Bluetooth:** On your device (smartphone, tablet, etc.), enable Bluetooth.
3. **Select Device:** Search for "Redmi Buds 4" in the list of available Bluetooth devices and select it to connect.
4. **Successful Connection:** Once connected, the LED indicator on the case will turn off or display a steady light, and you will hear an audible confirmation.
5. **Re-pairing:** If the earbuds do not connect automatically, place them back in the case, close the lid, then open it again to re-enter pairing mode.

3. Wearing the Earbuds

- Identify the 'L' (left) and 'R' (right) markings on the earbuds.
- Gently insert the earbuds into your ear canals and rotate them slightly until they fit snugly and comfortably.
- Experiment with different ear tip sizes to find the best fit for optimal sound quality and noise cancellation.

OPERATING INSTRUCTIONS

Power On/Off

- **Power On:** The earbuds power on automatically when removed from the charging case.
- **Power Off:** The earbuds power off automatically when placed back into the charging case and the lid is closed.

Touch Controls

The Redmi Buds 4 feature touch-sensitive areas on each earbud for controlling various functions. The specific functions may vary slightly depending on your device and app settings.

Action	Function
Double-tap (Left/Right Earbud)	Play/Pause music, Answer/End call
Triple-tap (Left/Right Earbud)	Next track, Reject call
Press and hold (Left/Right Earbud)	Toggle Active Noise Cancellation (ANC) / Transparency mode

Active Noise Cancellation (ANC)

The Redmi Buds 4 feature Active Noise Cancellation to reduce ambient noise. To toggle ANC or Transparency mode, press and hold the touch area on either earbud. Transparency mode allows you to hear your surroundings while still listening to audio.

MAINTENANCE

Cleaning

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.
- Remove ear tips and clean any earwax or debris from the earbud nozzles using a small, clean brush or cotton swab.
- Ensure charging contacts on both earbuds and the case are clean and free of dust to maintain proper charging.

Storage

- When not in use, always store the earbuds in their charging case to protect them and keep them charged.
- Store the device in a cool, dry place away from extreme temperatures and direct sunlight.

Water Resistance

The Redmi Buds 4 are water-resistant. This means they can withstand splashes, sweat, and light rain. They are not designed for swimming or showering. Do not submerge the earbuds in water. The charging case is not water-resistant.

TROUBLESHOOTING

If you encounter any issues with your Redmi Buds 4, please refer to the following common solutions:

- **Earbuds not pairing:** Ensure both earbuds are charged. Place them back in the case, close the lid, wait a few seconds, then open it again to re-enter pairing mode. Check your device's Bluetooth settings and try

reconnecting.

- **No sound from one earbud:** Ensure both earbuds are charged. Try placing them back in the case and taking them out again. Clean the charging contacts.
- **Charging issues:** Verify the USB-C cable and power adapter are working correctly. Ensure the charging contacts on the earbuds and case are clean.
- **Low volume or poor sound quality:** Adjust the volume on your connected device. Ensure the earbuds are properly seated in your ears. Try different ear tip sizes. Clean any debris from the earbud nozzles.
- **Earbuds not responding to touch controls:** Ensure your fingers are clean and dry. Try resetting the earbuds.

Factory Reset

If issues persist, a factory reset may resolve them. Consult the official Redmi support website or your product's specific documentation for detailed factory reset instructions, as the procedure can vary.

SPECIFICATIONS

Feature	Detail
Brand	Redmi
Model Name	buds 4
Model Number	PW-FTUP-0E2D
Ear Placement	In Ear
Form Factor	In Ear
Noise Control	Active Noise Cancellation
Connectivity Technology	Bluetooth
Control Method	Remote (Touch Controls)
Battery Average Life (with case)	30 Hours
Carrying Case Battery Charging Time	2 Hours
Audio Driver Type	Dynamic Driver
Frequency Range	20 Hz - 20,000 Hz
Enclosure Material	Acrylonitrile Butadiene Styrene (ABS)
Water Resistance Level	Water Resistant (Earbuds only)
Item Weight	0.42 Kilograms (approximate total weight)
Additional Features	Lightweight

WARRANTY INFORMATION

Redmi products are covered by a limited warranty. Please refer to the warranty card included in your product

packaging or visit the official Redmi website for detailed warranty terms and conditions specific to your region. Keep your purchase receipt as proof of purchase for warranty claims.

CUSTOMER SUPPORT

For further assistance, technical support, or service inquiries, please contact Redmi customer support through their official website or the contact information provided in your product documentation. Ensure you have your product model number (PW-FTUP-0E2D) and proof of purchase ready when contacting support.