

[Manuals.plus](#) /

> [Noaton](#) /

> Noaton Polaris Ceiling Fan 11045B User Manual

Noaton 11045B

Noaton Polaris Ceiling Fan User Manual

MODEL: 11045B

1. Product Overview

The Noaton Polaris Ceiling Fan (Model 11045B) is a versatile 2-in-1 solution providing both efficient cooling and adjustable LED lighting. Designed for rooms up to 14 m², it features a compact design, quiet operation, and convenient remote control functionality.

- **Versatile Solution:** Ideal for cooling and lighting in spaces like children's rooms, studies, or bedrooms.
- **2-in-1 Functionality:** Combines effective air circulation with an elegant dimmable LED light module.
- **Durable Construction:** Equipped with 5 ABS blades enclosed within a robust fan body for safety and longevity.
- **Adjustable LED Lighting:** Features a 42W LED module with adjustable intensity and 3 color temperatures (3000-6000K).
- **Flexible Placement:** With a 45 cm diameter, it's suitable for various room sizes and can be mounted on sloped ceilings or even walls.
- **Energy Efficient:** Consumes only 35 watts of power, offering an airflow of up to 40 m³ per minute.
- **Ultra-Quiet Operation:** Operates at a maximum of 30 dB, making it suitable for use during sleep.
- **Programmable Timer:** Includes a timer function (1 or 2 hours) for automated operation.

 


Figure 1: Noaton Polaris Ceiling Fan (Model 11045B) with included remote control.

2. Safety Information

Please read all safety instructions carefully before installation and use. Failure to follow these instructions may result in electric shock, fire, or serious personal injury.

- **Electrical Safety:** Always disconnect power at the circuit breaker before installing, cleaning, or performing maintenance on the fan. Ensure all electrical connections comply with local codes and regulations.
- **Installation:** This product must be installed by a qualified electrician. Ensure the mounting structure can support the fan's weight (1.46 kg). Do not install the fan in a location where blades could strike objects or people.
- **Operation:** Do not insert any objects into the fan blades while the fan is operating. Keep children and pets

away from the fan during operation.

- **Cleaning:** Use only a dry, soft cloth for cleaning. Do not use water or liquid detergents, as this may damage the motor or electrical components.
- **Maintenance:** Do not attempt to repair or modify the fan yourself. Contact qualified service personnel for any repairs.

3. Package Contents

Verify that all components are present and undamaged before beginning installation:

- Noaton Polaris Ceiling Fan Unit (main body with motor and blades)
- Integrated LED Light Module
- Remote Control
- Mounting Hardware (screws, anchors, mounting bracket)
- User Manual

4. Setup and Installation

Follow these steps for proper installation:

1. **Preparation:** Turn off power at the main circuit breaker. Ensure the mounting surface (ceiling or wall) is structurally sound and free of obstacles.
2. **Mounting Bracket Installation:** Secure the mounting bracket to the ceiling or wall using the provided screws and anchors. Ensure it is firmly attached.
3. **Electrical Connection:** Connect the fan's electrical wires to the household wiring according to the wiring diagram provided in the separate installation guide. Ensure all connections are secure and insulated.
4. **Fan Body Attachment:** Carefully lift the fan unit and attach it to the mounting bracket. Secure it with the designated screws.
5. **LED Module Installation:** Connect the LED light module to the fan's electrical connector and secure it in place.
6. **Final Check:** Double-check all connections and ensure the fan is securely mounted.

 


Figure 2: Front view of the Noaton Polaris Ceiling Fan, showing the integrated light and fan blades.

 


Figure 3: Side profile of the Noaton Polaris Ceiling Fan, illustrating its compact design.

5. Operating Instructions

The Noaton Polaris Ceiling Fan is controlled via the included remote control. Ensure batteries are installed correctly in the remote.

- **Power ON/OFF:** Press the **ON** button to turn the fan and light on, and the **OFF** button to turn them off.
- **Fan Speed Control:** Use the fan speed buttons (**1**, **2**, **3**) to select desired airflow. Speed 1 is the lowest, Speed 3 is the highest.
- **Light ON/OFF:** Press the light bulb icon button to toggle the light on or off independently.
- **Light Brightness Adjustment:** Use the **+/-** buttons to dim or brighten the LED light.

- **Color Temperature Adjustment:** Press the sun icon button to cycle through the three color temperatures: warm white (3000K), neutral white (4500K), and cool white (6000K).
- **Timer Function:** Press the **1H** or **2H** button to set the fan to automatically turn off after 1 or 2 hours, respectively.

6. Maintenance

Regular maintenance ensures optimal performance and longevity of your fan. Always ensure the fan is turned off and disconnected from power before cleaning.

- **Cleaning:** Dust the fan body and blades regularly with a soft, dry, lint-free cloth. Do not use abrasive cleaners, solvents, or wet cloths, as these can damage the finish or electrical components.
- **Blade Inspection:** Periodically check the fan blades for any signs of damage or imbalance.
- **Mounting Check:** Ensure the mounting hardware remains secure. Tighten any loose screws if necessary.

7. Troubleshooting

If you encounter issues with your Noaton Polaris Ceiling Fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply; Remote control batteries are dead; Incorrect wiring.	Check circuit breaker and wall switch; Replace remote control batteries; Verify wiring connections (consult a qualified electrician).
Fan makes excessive noise.	Loose mounting screws; Unbalanced blades; Internal motor issue.	Ensure all mounting screws are tight; Check for any obstructions; Contact customer support if noise persists.
Light does not work.	No power to light; LED module connection loose or faulty.	Check power supply; Ensure LED module is properly connected; Contact customer support if light remains off.
Remote control not responding.	Dead batteries; Obstruction between remote and fan; Remote not paired (if applicable).	Replace batteries; Ensure clear line of sight; Refer to pairing instructions (if any, not specified for this model).

8. Specifications

Feature	Specification
Model Number	11045B
Product Dimensions (L x W x H)	45 x 45 x 19.5 cm
Weight	1.46 kg
Fan Diameter	45 cm
Blade Diameter	29 cm
Motor Power	Max 35 W

Feature	Specification
LED Power	Max 42 W / 4914 lm
Airflow	Up to 40 m³/min (at highest speed)
Noise Level	Max 30 dB
Color Temperatures	3000K (Warm White), 4500K (Neutral White), 6000K (Cool White)
Control Method	Remote Control
Material	ABS (Plastic)
Mounting Type	Ceiling Mount (also suitable for wall mounting)
Assembly Required	Yes

9. Warranty and Support

Noaton products are designed for reliability and performance. For warranty information, technical support, or service inquiries, please contact your retailer or visit the official Noaton website. Keep your proof of purchase for warranty claims.

For further assistance, please refer to the contact information provided with your purchase or on the manufacturer's official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C1L3B1JL>

More documents and user manuals: <https://manuals.plus/>