

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Faber](#) /

› [Faber 20L Built-In Microwave Oven \(Model FBIMWO 20 L SG BK\) - User Manual](#)

Faber FBIMWO 20 L SG BK

Faber 20L Built-In Microwave Oven (Model FBIMWO 20 L SG BK) - User Manual

Comprehensive instructions for safe and efficient use.

1. INTRODUCTION

Thank you for choosing the Faber 20L Built-In Microwave Oven. This manual provides essential information for the installation, operation, and maintenance of your appliance. Please read it thoroughly before use and keep it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy when using your appliance, follow basic precautions, including the following:

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure the appliance is properly grounded.
- This appliance is intended for household use only.
- **Child Lock Safety:** The oven features a child lock function to prevent accidental operation by children. Refer to the "Operating Instructions" section for details on activating and deactivating this feature.

3. PRODUCT OVERVIEW

3.1 Components

The Faber 20L Built-In Microwave Oven includes the main unit and a grill rack for various cooking needs.

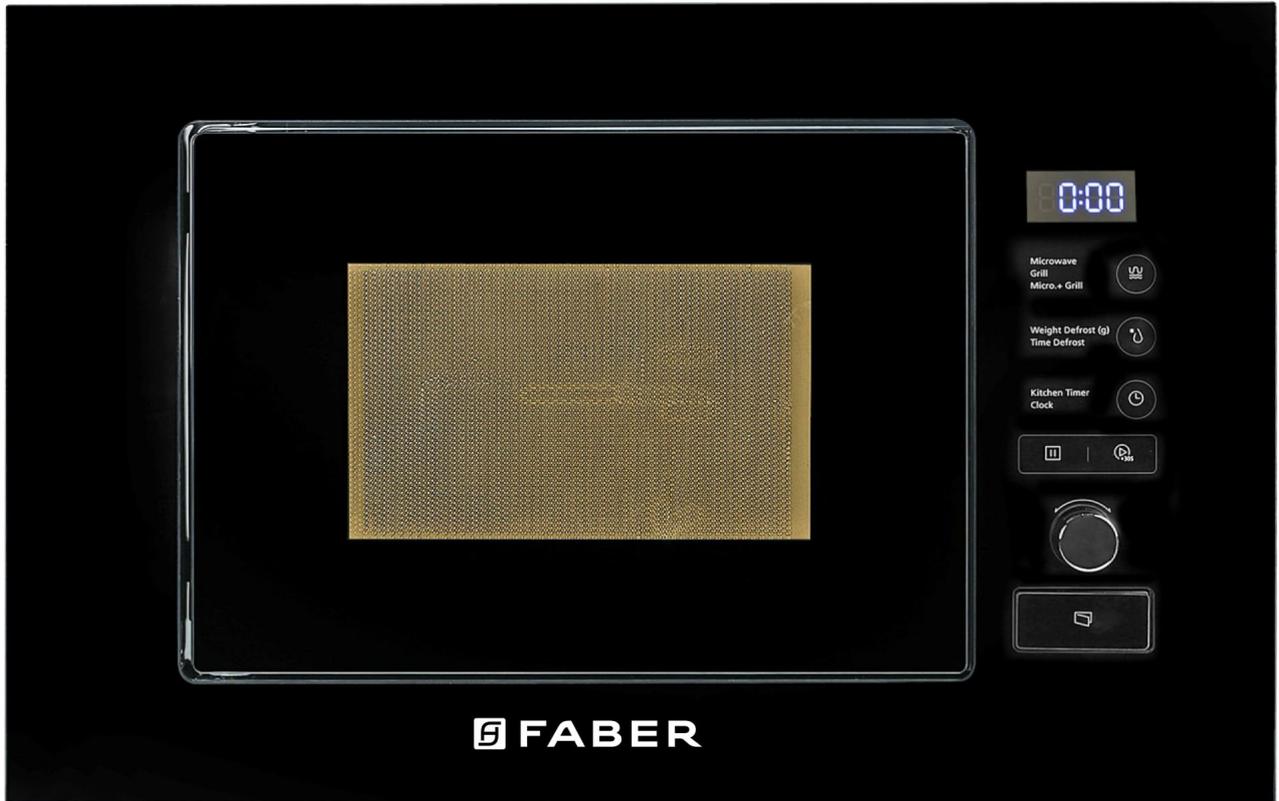


Image 1: Front view of the Faber 20L Built-In Microwave Oven. This image displays the sleek black finish and the touch control panel on the right side.

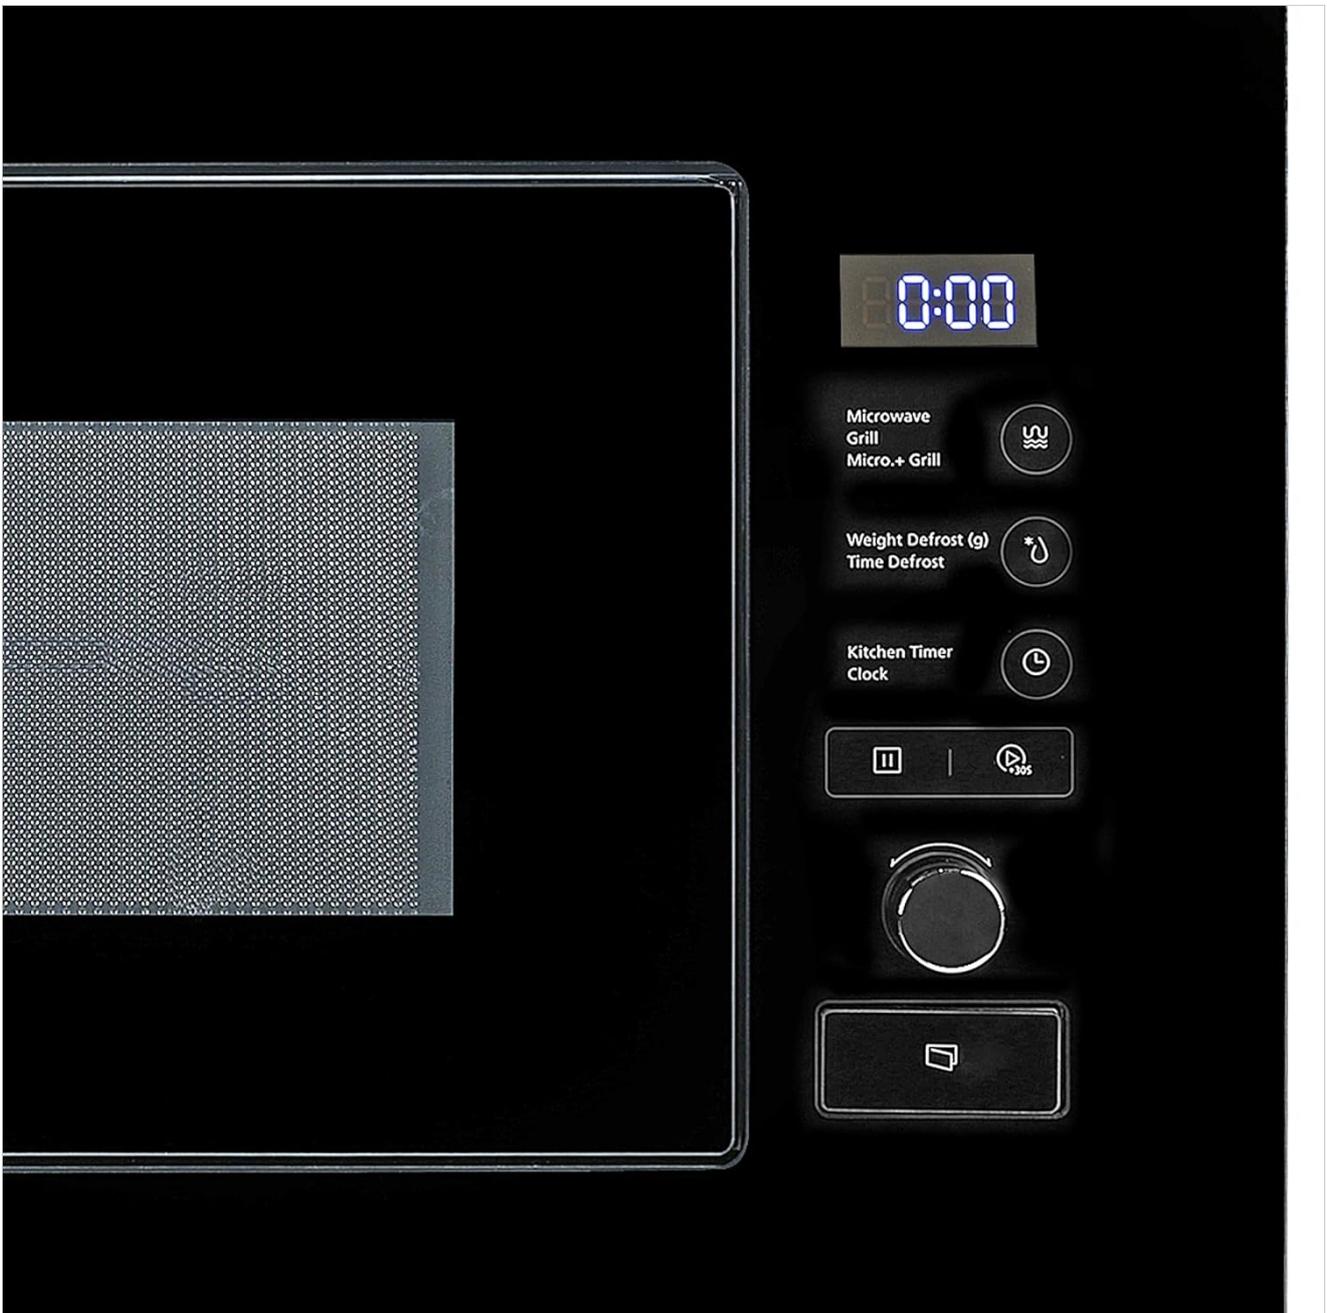


Image 2: Interior view of the microwave oven with the door open, showing the glass turntable and the included grill rack.

3.2 Control Panel

The oven features an intuitive touch control panel for easy operation.



Image 3: Detailed view of the touch control panel, displaying the digital display, function buttons, and rotary knob for setting time and power levels.

- **Digital Display:** Shows time, power level, and cooking status.
- **Function Buttons:** For selecting cooking modes (Microwave, Grill, Convection, Combination), Defrost, Auto Cook, and Child Lock.
- **Rotary Knob:** Used to adjust cooking time, weight for defrosting, or select auto cook menus.
- **Start/Pause Button:** To begin or temporarily stop cooking.
- **Stop/Clear Button:** To cancel a program or clear settings.

4. SETUP AND INSTALLATION

This appliance is designed for built-in installation. Professional installation is recommended to ensure proper fitting and electrical connection.

4.1 Unpacking

- Remove all packaging materials from the oven cavity and accessories.
- Check the oven for any damage, such as a misaligned or bent door, damaged door seals, or dents in the cavity. Do not operate the oven if it is damaged. Contact customer service.

4.2 Location Requirements

- The oven must be placed on a flat, stable surface or installed into a suitable cabinet opening.
- Ensure adequate ventilation around the appliance. Do not block air vents.
- Maintain a minimum distance from other appliances as specified in the installation guide (usually provided separately with the product).

4.3 Electrical Connection

- Connect the oven to a properly grounded electrical outlet.
- Ensure the voltage and frequency match the specifications of your appliance (230 Volts, 50Hz).
- Do not use extension cords or adapters.



Image 4: Side view of the microwave oven, illustrating its compact design for built-in integration.

5. OPERATING INSTRUCTIONS

5.1 Setting the Clock

1. When the oven is first plugged in, the display will show "0:00".
2. Press the "Clock" button.
3. Turn the rotary knob to set the hour. Press "Clock" again.
4. Turn the rotary knob to set the minutes. Press "Clock" to confirm.

5.2 Microwave Cooking

1. Place food in a microwave-safe container on the turntable.
2. Press the "Microwave" button.
3. Turn the rotary knob to select the desired power level (e.g., P100 for full power, P80 for 80% power).
4. Press "Microwave" again to confirm power.
5. Turn the rotary knob to set the cooking time.
6. Press "Start" to begin cooking.

5.3 Grill Cooking

1. Place food on the grill rack provided.
2. Press the "Grill" button.
3. Turn the rotary knob to set the grilling time.
4. Press "Start" to begin grilling.

5.4 Convection Cooking

1. Place food in a heat-resistant dish.
2. Press the "Convection" button.
3. Turn the rotary knob to select the desired temperature.
4. Press "Convection" again to confirm temperature.
5. Turn the rotary knob to set the cooking time.
6. Press "Start" to begin convection cooking.

5.5 Combination Cooking

This oven offers various combination modes (Microwave + Grill, Microwave + Convection) for versatile cooking.

1. Press the "Combination" button repeatedly to cycle through available modes.
2. Once the desired combination mode is displayed, press "Combination" to confirm.
3. Turn the rotary knob to set the cooking time.
4. Press "Start" to begin.

5.6 Auto Cook Menus

The oven includes 10 pre-programmed auto cook menus for common dishes.



Image 5: Icon representing the 10 Auto Cook Menus feature, simplifying cooking for various dishes.

1. Press the "Auto Cook" button.
2. Turn the rotary knob to select the desired menu number (e.g., A-1 for pizza, A-2 for potatoes).
3. Press "Auto Cook" again to confirm.

4. Turn the rotary knob to select the weight or quantity if prompted.
5. Press "Start" to begin.

5.7 Defrost Function

The defrost function allows for thawing food by weight or time.



Image 6: Icon illustrating the defrosting capability of the oven.

1. Place frozen food in the oven.
2. Press the "Defrost" button.
3. Turn the rotary knob to select defrost by weight or time.
4. Adjust the weight or time using the rotary knob.
5. Press "Start" to begin defrosting.

5.8 Child Lock

To prevent accidental operation, especially by children, activate the child lock.



Image 7: Icon depicting the child lock safety feature, designed to prevent unintended use.

- **To Activate:** Press and hold the "Stop/Clear" button for 3 seconds. A lock indicator will appear on the display.
- **To Deactivate:** Press and hold the "Stop/Clear" button for 3 seconds again. The lock indicator will disappear.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and efficient operation of your microwave oven.

6.1 Cleaning the Oven Interior

- Always unplug the oven before cleaning.
- Wipe the interior cavity with a damp cloth after each use. For stubborn stains, use a mild detergent.
- Clean the door seals and sealing surfaces regularly to ensure proper door closure.
- The glass turntable can be removed and washed in warm soapy water or a dishwasher.

6.2 Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals.
- Ensure no water enters the ventilation openings.

7. TROUBLESHOOTING

If you encounter issues with your microwave oven, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure power cord is securely plugged in; Close the door firmly; Check household fuse or reset circuit breaker.
Food not heating	Incorrect cooking time or power level set; Door not closed properly.	Adjust cooking time and power level; Ensure door is fully closed.
Sparking inside oven	Metal in oven; Food residue on cavity walls.	Remove any metal objects; Clean oven interior thoroughly.
Display shows "Error"	Malfunction.	Unplug the oven for a few minutes, then plug it back in. If the error persists, contact customer service.

For issues not listed here, or if problems persist, please contact Faber customer support.

8. SPECIFICATIONS

Brand	Faber
Model Number	FBIMWO 20 L SG BK (131.0654.030)
Capacity	20 Liters
Installation Type	Built-In
Controls	Touch Control
Special Features	Auto Cook Menus (10), Grill, Convection, Defrost, Combination Cooking, Digital Timer, Child Lock, Automatic Power-Off Protection
Oven Cooking Mode	Microwave, Grill, Convection, Combination
Color	Black
Voltage	230 Volts
Wattage	2450 Watts
Material	Stainless Steel
Item Dimensions (LxWxH)	34.4 x 59.5 x 38.2 Centimeters
Item Weight	15 kg
Included Components	Grill Rack
Country of Origin	China

9. WARRANTY AND SUPPORT

9.1 Warranty Information

This Faber 20L Built-In Microwave Oven comes with a **1-year warranty** from the date of purchase, covering manufacturing defects. Please retain your purchase receipt for warranty claims.

Extended warranty options may be available for purchase separately. Refer to your retailer or Faber's official website for details.

9.2 Customer Support

For technical assistance, service requests, or any queries regarding your appliance, please contact Faber customer support:

- **Toll-Free Number:** 1800-209-3484
- **Manufacturer:** Franke Faber India Pvt Ltd
- **Address:** 1086/1/2, SANASWADI, TAL - SHIRUR, PUNE - 412208, MAHARASHTRA, INDIA

You can also visit the official Faber website for more information and support resources.