

Faber FPO 621 BK

Faber FPO 621 BK Electric Oven User Manual

Model: FPO 621 BK (116.0483.892)

1. INTRODUCTION AND SAFETY INFORMATION

Thank you for choosing the Faber FPO 621 BK Electric Oven. This manual provides essential information for the safe and efficient use, installation, and maintenance of your appliance. Please read these instructions carefully before using the oven and keep them for future reference.

1.1 General Safety Warnings

- Ensure the oven is installed by a qualified technician in accordance with local regulations and electrical codes.
- Do not allow children to operate or play with the oven. Keep packaging materials away from children.
- The oven becomes hot during use. Avoid touching heating elements or interior surfaces. Use oven mitts.
- Never use water to extinguish oil or grease fires. Turn off the appliance and cover the flame with a lid or fire blanket.
- Do not store flammable materials in or near the oven.
- Disconnect the appliance from the power supply before cleaning or maintenance.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- This appliance is intended for household use only.

2. PRODUCT OVERVIEW

The Faber FPO 621 BK is an 83-liter electric oven designed for versatile cooking. It features a sleek black glass finish and a sensor touch interface for easy operation.

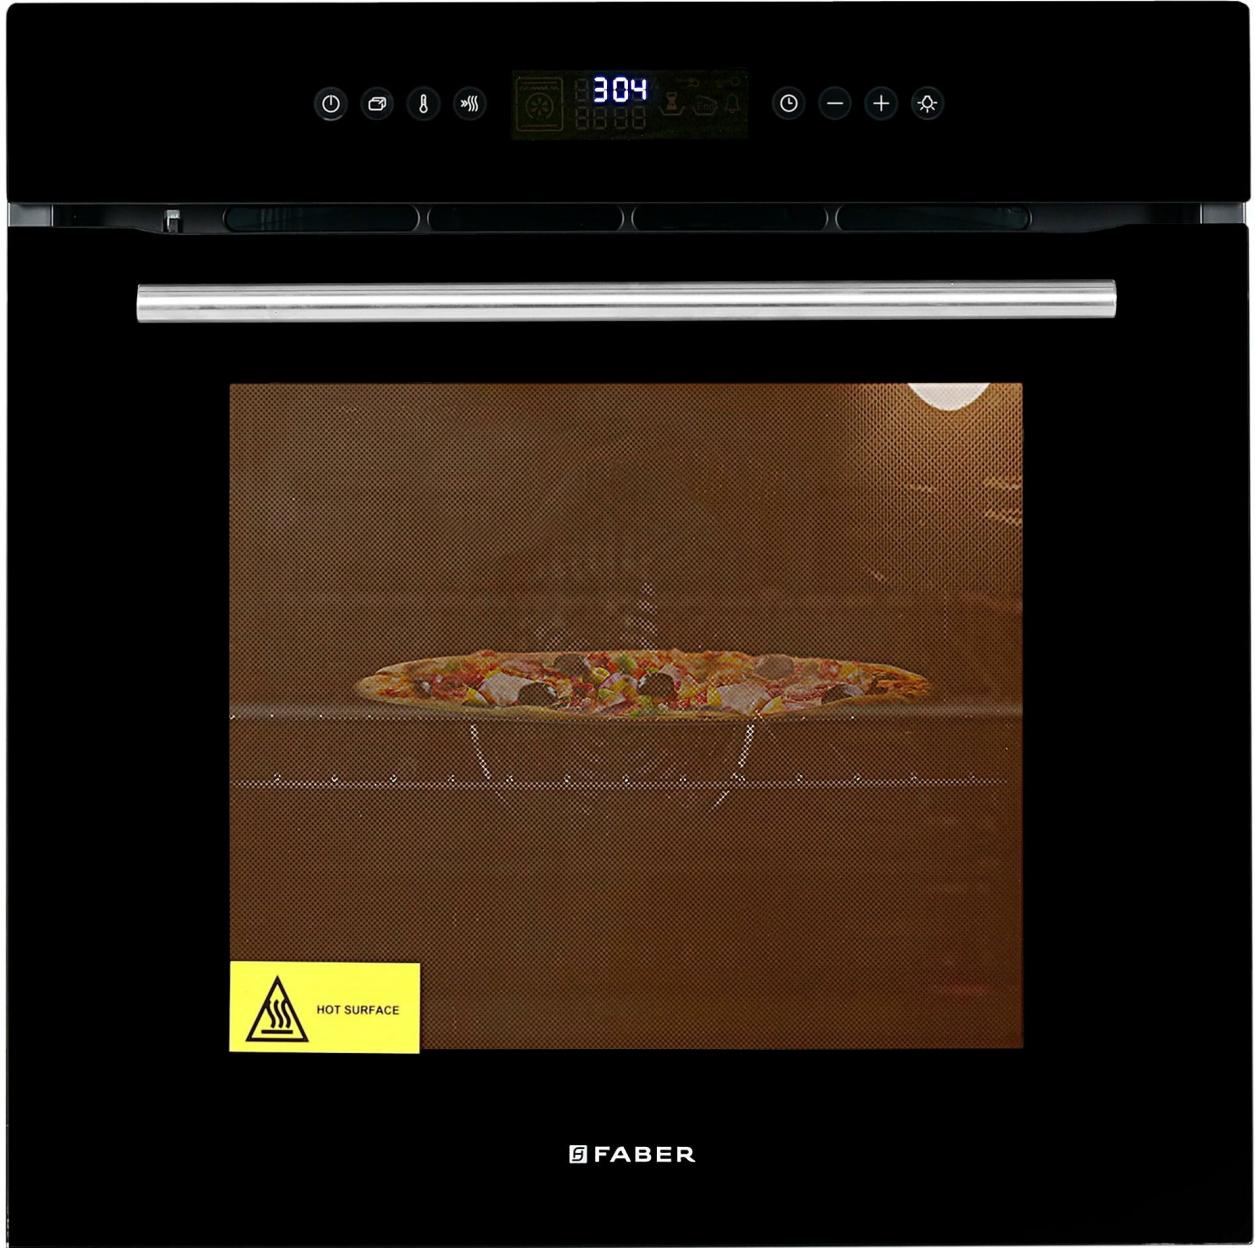


Figure 2.1: Front view of the Faber FPO 621 BK Electric Oven. This image displays the black glass finish, metallic bar handle, and the sensor touch control panel.

2.1 Key Features

- **Gross Capacity:** 83 Litres
- **Control:** Sensor Touch Interface with White LED Display
- **Finish:** Black Glass Finish
- **Cooking Functions:** 10 (Convection Top with Bottom Heat, Full Surface Grill, Fan Assisted Grill, Pizza, Bake, Fast Cooking, Delicate Cooking, Top Oven, Multi Cooking, Defrosting)
- **Temperature Range:** 60°C to 250°C
- **Timer:** Digital Clock with Automatic Cut-off Timer
- **Safety Features:** Child Lock and Safety Switch Off, Cooling System, 3-Layer Door Plate, Cool Touch Glass Door
- **Convenience:** Auto Switch On/Off Program, Speed Cook, Memory Function, Reminder Function, Removable inner Glass for easy cleaning

2.2 Accessories

- 1 x Grill rack
- 1 x Universal Pan
- 1 x Rotisserie

3. SETUP AND INSTALLATION

Proper installation is crucial for the safe and efficient operation of your oven. It must be installed by a qualified professional.

3.1 Unpacking

Carefully remove all packaging materials. Inspect the oven for any damage. Do not use the appliance if it appears damaged. Keep packaging materials out of reach of children.

3.2 Installation Dimensions

The oven is designed to fit into a standard kitchen cabinet. Ensure the cabinet dimensions meet the following requirements:

- **Oven Size (W*D*H):** 594 mm * 568.8 mm * 594 mm
- **Carcass Size (W*D*H):** 565 mm * 575 mm * 595 mm

Ensure adequate ventilation around the oven as per installation guidelines provided separately with the product.

3.3 Electrical Connection

- The oven requires a dedicated electrical circuit.
- **Total Load:** 3.42 Kw
- The electrical connection must comply with local wiring regulations.
- Ensure the appliance is properly earthed.

3.4 First Use Preparation

Before using the oven for the first time, clean the interior with a damp cloth and mild detergent. Run the oven empty at maximum temperature for approximately 30 minutes to burn off any manufacturing residues. Ensure the kitchen is well-ventilated during this process.

4. OPERATING INSTRUCTIONS

The Faber FPO 621 BK oven features a user-friendly sensor touch interface. Refer to the control panel diagram for button identification (if available in separate documentation).

4.1 Control Panel Overview

The control panel consists of touch-sensitive buttons and a White LED Display. Functions are selected by touching the corresponding icons or indicators.

4.2 Setting the Time and Timer

- Upon first power-up or after a power outage, the display will flash.
- Use the appropriate touch controls (refer to your oven's specific icons) to set the current time.
- The **Digital Clock with Automatic Cut-off Timer** allows you to set a cooking duration. The oven will automatically switch off once the set time has elapsed.

- The **Auto Switch On/Off Program** allows you to program the oven to start and stop cooking at specific times.
- The **Reminder Function** can be set for an audible alert at a specific time without affecting oven operation.

4.3 Selecting a Cooking Function and Temperature

To begin cooking:

1. Touch the function selection icon to cycle through the 10 available cooking functions.
2. Once the desired function is displayed, touch the temperature control icon to adjust the temperature between 60°C and 250°C.
3. The oven will begin preheating. The display may indicate when the set temperature is reached.

4.4 Cooking Functions Explained

- **Convection Top with Bottom Heat:** Ideal for baking cakes, pastries, and roasting meats.
- **Full Surface Grill:** For grilling larger quantities of food, such as steaks, sausages, or toast.
- **Fan Assisted Grill:** Combines grilling with fan circulation for even browning and faster cooking.
- **Pizza:** Optimized for baking pizzas with a crispy base.
- **Bake:** Standard baking function for various dishes.
- **Fast Cooking:** Utilizes multiple heating elements for quicker preheating and cooking.
- **Delicate Cooking:** Gentle heat for delicate dishes that require slow, even cooking.
- **Top Oven:** Uses only the top heating element, suitable for browning or finishing dishes.
- **Multi Cooking:** Allows cooking on multiple levels simultaneously.
- **Defrosting:** Uses the fan to circulate air at room temperature, gently defrosting food.

4.5 Special Functions

- **Speed Cook:** Reduces preheating time and accelerates cooking for certain dishes.
- **Memory Function:** Allows you to save frequently used cooking settings for quick recall.
- **Child Lock:** Activates to prevent accidental operation of the oven, enhancing safety. To activate/deactivate, refer to the specific icon on your control panel.
- **Safety Switch Off:** The oven will automatically switch off after a prolonged period of inactivity or if a maximum operating time is exceeded, as a safety measure.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Faber FPO 621 BK oven.

5.1 General Cleaning

- Always ensure the oven is cool and disconnected from the power supply before cleaning.
- Do not use abrasive cleaners, harsh detergents, or metal scourers, as these can damage surfaces.
- Clean spills immediately to prevent them from baking onto surfaces.

5.2 Cleaning the Interior

- For light soiling, wipe the interior with a damp cloth and mild dish soap.
- For stubborn stains, use a specialized oven cleaner, following the product's instructions carefully. Ensure adequate ventilation.

- The **Removable inner Glass** design allows for easier cleaning of the oven door. Consult the full product manual for instructions on how to safely remove and re-install the inner glass panel.
- Clean the grill rack, universal pan, and rotisserie accessories after each use with warm soapy water.

5.3 Cleaning the Exterior

- Wipe the **Black Glass Finish** and control panel with a soft, damp cloth and a mild glass cleaner. Dry thoroughly with a soft, lint-free cloth to avoid streaks.
- Clean the metallic bar handle with a soft cloth.

5.4 Cooling System

The oven is equipped with a cooling system that continues to run for a short period after the oven is turned off. This helps to cool down the oven components and prevent overheating. Do not obstruct the ventilation openings.

6. TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and their potential solutions.

Problem	Possible Cause	Solution
Oven does not turn on.	No power supply; circuit breaker tripped; door not closed properly.	Check power connection; reset circuit breaker; ensure oven door is fully closed.
Oven not heating to set temperature.	Incorrect function selected; temperature setting too low; faulty heating element.	Verify function and temperature settings; if problem persists, contact service.
Display shows an error code.	Internal fault detected.	Note the error code and contact customer service for assistance.
Child Lock is active.	Oven controls are locked.	Refer to Section 4.5 for instructions on deactivating the Child Lock.

If the issue persists after attempting these solutions, please contact Faber customer support.

7. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Faber
Model	FPO 621 BK (116.0483.892)
Capacity	83 Litres (Gross)
Control Type	Sensor Touch Interface
Finish	Black Glass Finish
Number of Functions	10 Cooking Functions
Temperature Range	60°C – 250°C
Total Load	3.42 Kw

Feature	Specification
Light Bulb	25 watt
Oven Size (W*D*H)	594 mm * 568.8 mm * 594 mm
Carcass Size (W*D*H)	565 mm * 575 mm * 595 mm
Energy Efficiency	"A" class

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This Faber FPO 621 BK Electric Oven comes with a **1 Year Warranty** from the date of purchase. The warranty covers manufacturing defects and faulty materials under normal domestic use. Please retain your purchase receipt as proof of purchase for warranty claims.

The warranty does not cover damage caused by improper installation, misuse, neglect, unauthorized repairs, or normal wear and tear.

8.2 Customer Support

For technical assistance, service requests, or warranty claims, please contact Faber customer support. Contact details can typically be found on the Faber official website or on your warranty card.

Please have your oven model number (FPO 621 BK) and serial number (if applicable) ready when contacting support.