

[manuals.plus](#) /› [NANAMI](#) /› [NANAMI 3-in-1 Wireless Charger for Samsung - Instruction Manual \(Model HM006\)](#)

## NANAMI HM006

# NANAMI 3-in-1 Wireless Charger for Samsung - Instruction Manual

Model: HM006

Brand: NANAMI

## 1. INTRODUCTION

The NANAMI 3-in-1 Wireless Charging Station (Model HM006) is designed to simultaneously charge your compatible Samsung Galaxy phone, Galaxy Watch, and Galaxy Buds Pro. This device aims to simplify your charging experience by reducing cable clutter and providing a dedicated charging hub for your essential devices. It features fast charging capabilities and multiple safety protections.



Image: The NANAMI 3-in-1 Wireless Charger in black, showcasing a Samsung phone, Galaxy Watch, and Galaxy Buds charging simultaneously on the stand.

## 2. WHAT'S IN THE BOX

- 1x NANAMI 3-in-1 Wireless Charging Station
- 1x 20W Quick Charge Wall Charger
- 1x 1.5m USB Type-C Cable
- 1x User Guide

## 3. SETUP INSTRUCTIONS

1. **Connect the Power Adapter:** Insert the USB Type-C cable into the charging port on the back of the wireless charging station.
2. **Plug into Power:** Connect the other end of the USB Type-C cable to the provided 20W Quick Charge Wall Charger. Plug the wall charger into a standard electrical outlet.
3. **Power On:** The charging station is now ready for use.



## Perfect Viewing Angle

---

Image: Visual comparison highlighting the benefit of using the included 20W PD Charger Adapter for optimal charging performance.

---

## 4. OPERATING INSTRUCTIONS

This charging station allows for simultaneous wireless charging of up to three compatible devices.

### 4.1 Charging Your Phone

- Place your compatible smartphone vertically or horizontally on the front charging stand.
- The smart LED indicator at the base of the phone stand will illuminate for approximately 10 seconds to confirm charging has begun, then turn off to avoid disturbing sleep.
- Ensure your phone is centered on the charging pad for optimal connection.

### 4.2 Charging Your Galaxy Watch

- Drape your compatible Galaxy Watch over the magnetic charging pad located at the top of the stand.
- Ensure the watch's charging coils align with the pad for proper charging. The watch screen will typically display a charging animation.

### 4.3 Charging Your Galaxy Buds/AirPods

- Place your compatible wireless earbuds (in their charging case) on the flat charging pad located at the base behind the phone stand.
- The earbuds case will typically show its own indicator light to confirm charging.

## Wide compatibility

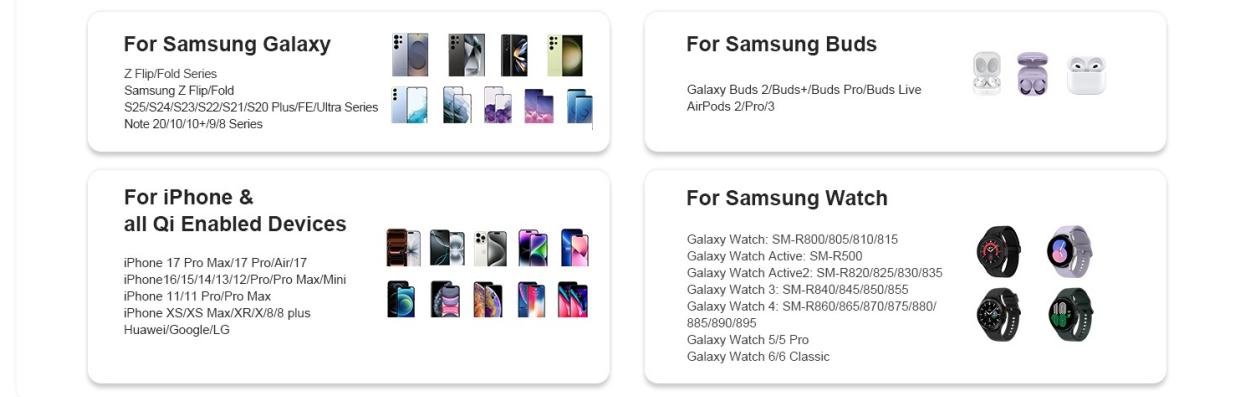


Image: The charging station demonstrating vertical and horizontal phone charging, alongside watch and earbud charging.

## 4.4 LED Indicator Behavior

- The smart LED indicator at the base of the phone stand will turn on for 10 seconds when a device is placed for charging, then go off during the charging process. This design prevents disturbing light during sleep.



Image: The charging station on a nightstand, illustrating the LED indicator's behavior for undisturbed sleep.

## 5. COMPATIBILITY

The NANAMI 3-in-1 Wireless Charging Station is universally compatible with a wide range of Qi-enabled devices.

### 5.1 Compatible Phones

- For Samsung Galaxy:** Z Flip/Fold, S25/S25+/S25 Ultra, S24/S24+/S24 Ultra, S23 Ultra/S23+/S23, S22 Ultra/S22+/S22, S21 FE/S21 Ultra/S21+/S21, S20 FE/S20 Ultra/S20+/S20, S10+/S10/S10e, S9/S8/S7, Note 20/10/9/8/5.
- For iPhone:** 15 Pro Max/15 Plus/15/15 Pro, 14 Pro Max/14 Plus/14/14 Pro, 13 Pro Max/13 Pro/13/13 Mini, 12 Pro Max/12 Pro/12/SE 2022, 11 Pro Max/11 Pro/11/SE 2020, XR/XS Max/XS/X/8 Plus.

### 5.2 Compatible Wireless Earbuds

- Galaxy Buds/Buds Pro/Live.
- AirPods 3/Pro/2 with wireless charging case.

### 5.3 Compatible Watches

- **Only for Galaxy Watch:** 6/5/5 Pro/4/3.
- **Note:** Not compatible with Apple Watch.

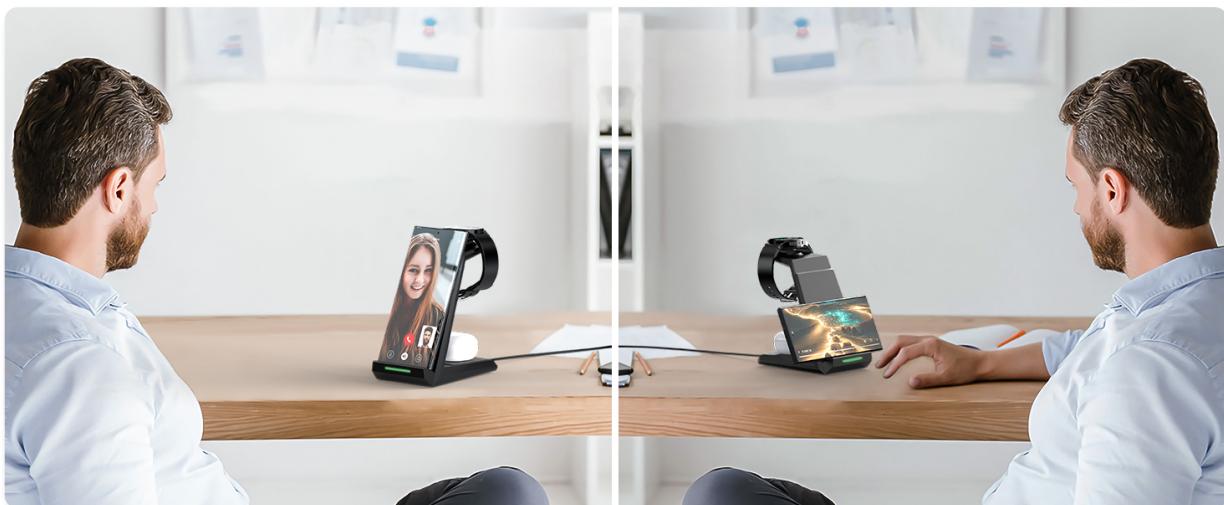


Image: A visual guide to the wide compatibility of the charging station with various devices.

## 6. SAFETY FEATURES

The NANAMI wireless charger incorporates multiple safety features to ensure a secure charging experience:

- **Temperature Control:** Prevents overheating during charging.
- **Overcharge Protection:** Protects devices from being overcharged.
- **Over-current Protection:** Safeguards against excessive current flow.
- **Over-voltage Protection:** Protects against voltage spikes.
- **Foreign Object Detection (FOD):** Detects metallic objects on the charging surface to prevent damage and ensure safe operation.

### Case-friendly Charging

**Note:** Please remove all metal or magnetic attachments on the back of your phone.



Image: Diagram highlighting the multi-protection features for safe and fast charging.

## 7. MAINTENANCE

- Keep the charging station clean and free from dust and debris. Use a soft, dry cloth for cleaning.
- Avoid placing metallic objects, credit cards, or cases with metal attachments on the charging surfaces, as this can interfere with charging and trigger foreign object detection.
- Ensure phone cases are no thicker than 5mm for optimal wireless charging performance.

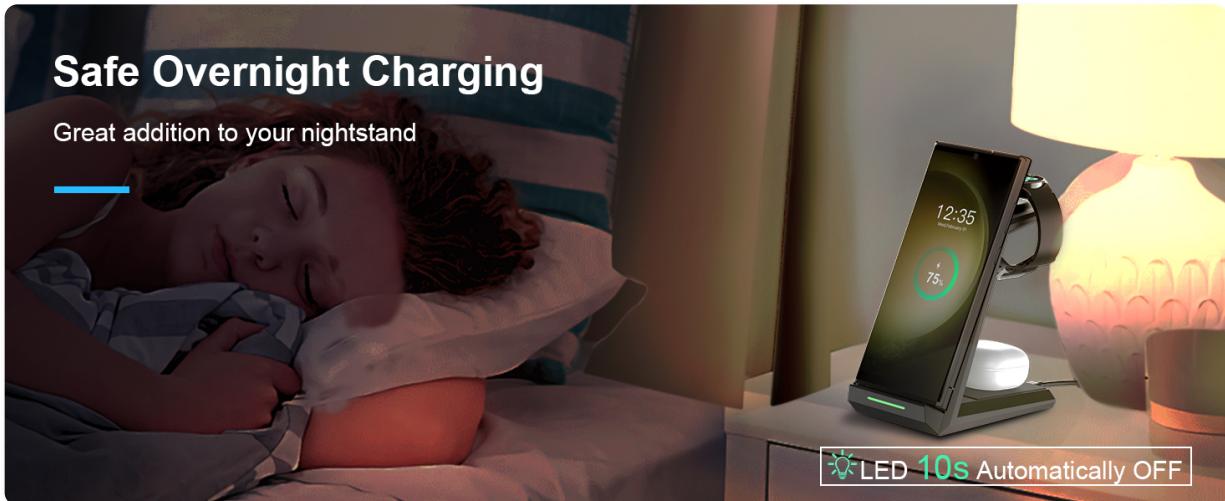


Image: Guidance on case compatibility and items to avoid for effective wireless charging.

## 8. TROUBLESHOOTING

- **Device not charging or charging slowly:**
  - Ensure the device is properly aligned with the charging coil on the pad.
  - Verify that the charging station is connected to the provided 20W Quick Charge Wall Charger and a working power outlet.
  - Remove any thick phone cases (over 5mm), metallic objects, or credit cards from the back of your phone or between the device and the charging pad.
  - Restart your device and try charging again.
- **Watch charging intermittently or getting hot:**
  - Ensure the watch is perfectly aligned on the magnetic charging pad. Slight adjustments may be needed.
  - If the watch consistently overheats, remove it from the charger and allow it to cool down. Ensure the charging pad is clean and free of obstructions.
- **LED indicator light not staying on:**
  - The LED indicator is designed to illuminate for 10 seconds upon placing a device and then turn off to prevent light disturbance. This is normal operation and does not indicate a fault.
- **No charging indicator light at all:**
  - Check the power connection to the wall adapter and the charging station. Try a different power outlet.
  - Ensure no foreign objects are on the charging pad that might prevent activation.

## 9. SPECIFICATIONS

Feature	Detail
Model Number	HM006
Package Dimensions	5.67 x 4.84 x 3.11 inches
Item Weight	6.4 ounces
Connectivity Technology	Wireless
Special Features	Fast Charging, Wireless Charging, Charger Stand
Form Factor	Stand/Dock
Color	Black
Connector Type	USB Type C
Input Voltage	9 Volts
Amperage	2 Amps
Total USB Ports	1

## 10. OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: An official product video from Nanami Direct demonstrating the features and usage of the NANAMI 3-in-1 Wireless Charging Station for Samsung devices.

## 11. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided in the included User Guide or visit the official NANAMI website. Keep your purchase receipt for warranty claims.