

[Manuals.plus](#) /

› [Anker](#) /

› Anker Soundcore Liberty 4 NC Wireless Earbuds Instruction Manual

Anker Liberty 4 NC

Anker Soundcore Liberty 4 NC Wireless Earbuds Instruction Manual

Model: Liberty 4 NC

INTRODUCTION

Thank you for choosing the Anker Soundcore Liberty 4 NC Wireless Earbuds. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device. Please read it carefully before use to ensure optimal performance and longevity of your earbuds.

PACKAGE CONTENTS

The Anker Soundcore Liberty 4 NC package includes the following items:

- Soundcore Liberty 4 NC Earbuds
- Charging Case
- 5 pairs of Ear Tips (XS/S/M/L/XL) - M size is pre-installed
- USB-C to USB-A Charging Cable
- Quick Start Guide
- Safety Manual

ノイズキャンセリングと 長時間再生へのこだわり

Soundcore Liberty 4 NC



世界トップレベル機関SGSが
認証する超高性能な
ノイズキャンセリング機能



ひとりひとりに
パーソナライズされた
ノイズキャンセリングを提供



※2023-05-30にSGS Testing & Control Services Singapore Pte Ltd.より認証

Image: The package contents of the Soundcore Liberty 4 NC, including earbuds, charging case, ear tips, and charging cable.

Video: This video demonstrates the unboxing process of the Soundcore Liberty 4 NC, showing all included accessories and documentation.

SETUP

1. Wearing the Earbuds

Insert the earbuds into your ears and rotate them until they fit snugly and comfortably. The correct fit is crucial for optimal sound quality and noise cancellation.

選べるモード

交通機関や好みの強度に合わせて、手動でもノイズキャンセリングモードを選択可能。また、外音取り込みモードも2種類のモードからお選びいただけます

最大50時間の長時間再生

本体のみで最大10時間、充電ケース使用時で最大50時間の音楽再生が可能です。さらにワイヤレス充電や10分間の充電で4時間の音楽再生にも対応しました

		
ノイズキャンセリングOFF	10H	50H
ノイズキャンセリングON	8H	40H



Image: A person demonstrating the correct way to wear the Soundcore Liberty 4 NC earbuds for a secure and comfortable fit.

2. Changing Ear Tips

Select the ear tips that provide the best seal and comfort for your ears. An improper fit can affect sound quality and noise cancellation performance. Gently twist and pull to remove the current ear tip, then push and twist to attach a new one. Ensure the ear tip is securely attached before use.

新技術ウルトラノイズ キャンセリング 3.0

イヤホンが外部の環境やノイズを
検知・除去するだけでなく、
耳の形を瞬時に計測し、
これまで 取りこぼしていたノイズまで除去。
ひとりひとりにパーソナライズされた
ノイズキャンセリングを提供

ULTRA
NOISE
CANCELING 3.0

さらにアップグレードした 基礎性能

高感度センサー、大口径ドライバー、
高遮音チャンバーで 基礎性能が大幅向上。
多様な雑音を効果的に除去します



Image: Various sizes of ear tips included with the Soundcore Liberty 4 NC, highlighting the importance of choosing the right size.

Video: This video demonstrates how to properly change the ear tips on the Soundcore Liberty 4 NC earbuds and ensure a secure fit.

3. Initial Pairing

To pair your Soundcore Liberty 4 NC earbuds with a new device:

1. Place both earbuds into the charging case and leave the lid open.
2. Press and hold the button on the charging case for 3 seconds until the LED lights on the case start flashing continuously. This indicates the earbuds are in pairing mode.
3. On your device (smartphone, tablet, etc.), enable Bluetooth and search for "Soundcore Liberty 4 NC" in the list of available devices.
4. Select "Soundcore Liberty 4 NC" to connect. Once connected, the LED lights will turn off.

OPERATING INSTRUCTIONS

The Soundcore Liberty 4 NC earbuds feature touch-sensitive control panels on the upper part of the stems. You can customize these controls using the Soundcore app.

Video: This video demonstrates the various touch controls and operations for the Soundcore Liberty 4 NC earbuds.

Soundcore App Features

Download the Soundcore app to unlock the full potential of your Liberty 4 NC earbuds. The app allows you to:

- Customize touch controls.
- Adjust noise cancellation levels and modes (Manual, Transportation, Adaptive).
- Enable or disable Transparency mode.
- Access HearID for personalized sound profiles.
- Update firmware.
- And more.

NOISE CANCELLING & TRANSPARENCY MODES

The Liberty 4 NC features Ultra Noise Cancelling 3.0, which not only detects and removes external noise but also measures your ear shape to provide personalized noise cancellation, eliminating previously missed noises. The earbuds automatically adapt noise cancellation levels based on your environment and ear shape when in automatic mode.



Image: An illustration of the Ultra Noise Cancelling 3.0 technology, showing how it detects and cancels noise.

You can switch between Noise Cancelling, Normal, and Transparency modes. Transparency mode allows you to hear your surroundings while still enjoying your audio. The Soundcore app offers manual settings and various transportation modes (e.g., airplane, bus, train) to optimize noise cancellation for specific environments.

さらに進化したノイズキャンセリング基礎性能



Image: Screenshot from the Soundcore app showing options for selecting different noise cancelling modes, including manual and transportation modes.

Video: This video demonstrates how to adjust noise cancellation settings and switch between different modes using the Soundcore app.

MULTIPOINT CONNECTION

The Soundcore Liberty 4 NC supports multipoint connection, allowing you to connect to two devices simultaneously (e.g., a smartphone and a PC). This feature enables seamless switching between audio sources without manually disconnecting and reconnecting.

1. Wear both earbuds.
2. Press and hold both earbuds' touch panels simultaneously for 3 seconds to enter multipoint mode.
3. Alternatively, enable multipoint mode through the Soundcore app.

Video: This video illustrates how to connect the Soundcore Liberty 4 NC earbuds to two devices simultaneously using multipoint connection.

CHARGING & BATTERY LIFE

The earbuds offer up to 10 hours of playback on a single charge, and up to 50 hours with the charging case (with ANC off). A quick 10-minute charge provides approximately 4 hours of playback.

- **Charging the Earbuds:** Place the earbuds into the charging case. The LED indicators on the case will show the charging status.
- **Charging the Case:** Connect the charging case to a power source using the provided USB-C cable. The case also supports wireless charging.

新技術ウルトラノイズ キャンセリング 3.0

イヤホンが外部の環境やノイズを検知・除去するだけでなく、耳の形を瞬時に計測し、これまで取りこぼしていたノイズまで除去。ひとりひとりにパーソナライズされたノイズキャンセリングを提供。



Image: An illustration highlighting the long battery life of the Soundcore Liberty 4 NC and its wireless charging capability.

LED Indicators

The LED indicators on the charging case provide information about the battery level:

- Long white light: Battery 60% - 100%
- Short white light: Battery 20% - 60%
- Red light: Battery less than 20%

Video: This video explains the meaning of the LED indicators on the Soundcore Liberty 4 NC charging case, showing battery status.

MAINTENANCE

Regular cleaning of your earbuds is essential for hygiene and optimal performance. Use a cotton swab with a small amount of disinfectant alcohol to gently wipe the golden filter mesh of the earbuds. Additionally, remove the ear tips and wash them with water. Ensure they are completely dry before reattaching them to the earbuds. For cleaning the earbud ports and filters, use an air blower to dislodge debris, then use a Q-tip or toothpick to remove any remaining dirt.

Video: This video provides a step-by-step guide on how to clean your Soundcore Liberty 4 NC earbuds, including the ear tips and charging contacts.

TROUBLESHOOTING

Resetting the Earbuds

If you experience connection issues or other functional problems, try resetting your earbuds:

1. Place both earbuds into the charging case and leave the lid open.
2. Press and hold the button on the charging case for 10 seconds until the LED indicators flash white 3 times. This indicates a successful reset.
3. After resetting, delete "Soundcore Liberty 4 NC" from your device's Bluetooth history and attempt to pair again.

Note: Ensure the earbuds are properly connected to the charging case before resetting. If the left earbud is placed in the charging case, a white LED indicator will be displayed, confirming it is connected.

Video: This video guides you through the process of resetting your Soundcore Liberty 4 NC earbuds to resolve connection or functionality issues.

Bluetooth Connection Failure

If you encounter issues connecting via Bluetooth:

1. Restart your Bluetooth device (smartphone, PC, etc.).
2. Delete all pairing records of "Soundcore Liberty 4 NC" from your device's Bluetooth settings and turn Bluetooth off.
3. Ensure the charging case has sufficient battery and that the ear tips are not obstructing the earbud charging connectors.
4. Place the earbuds in the charging case and leave the lid open.
5. Press and hold the button on the charging case for 10 seconds until the LED indicator flashes white 3 times.
6. Turn on Bluetooth on your device, search for "Soundcore Liberty 4 NC", and pair.

Note: When performing a reset, ensure the earbuds are properly connected to the charging case. A reset may fail if not properly connected. When the left earbud is placed in the charging case, a white LED indicator is displayed, confirming that the earbud is connected to the charging case. Also, ensure the earbuds and charging case have sufficient battery, and remove any debris from the charging pins with a dry cloth.

Video: This video provides troubleshooting steps for when the Bluetooth connection fails with your Soundcore Liberty 4 NC earbuds.

SPECIFICATIONS

Feature	Specification
Model Name	Anker Soundcore Liberty 4 NC
Noise Control	Active Noise Cancellation
Frequency Response	2.48 GHz
Headphone Jack	True Wireless
Connectivity Technology	Wireless (Bluetooth)
Wireless Communication Technology	Bluetooth
Compatible Devices	Bluetooth-enabled devices such as smartphones and PCs
Control Type	Media Control
Cable Feature	Cable-less
Product Weight	60.4 g
Water Resistance Level	Waterproof (IPX4)
Material	Plastic
Impedance	10 Ohms

WARRANTY & SUPPORT

Anker provides an 18-month product warranty from the date of order. If any malfunction occurs, Anker will provide appropriate support, including replacement or repair. Additionally, the warranty is automatically extended to 24 months for registered Anker Japan official website members.

For product and delivery inquiries, please contact customer support.



Image: An illustration showing the 18-month product warranty and an additional 6-month extension for members.



Image: An illustration representing Japanese customer support for Anker products.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question