

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Dyson](#) /
- › [Dyson Cyclone V10 Animal Origin Cordless Vacuum Cleaner User Manual](#)

Dyson 400480-91

Dyson Cyclone V10 Animal Origin Cordless Vacuum Cleaner

MODEL: 400480-91

Introduction

The Dyson Cyclone V10 Animal Origin cordless vacuum cleaner is engineered for powerful and versatile deep cleaning, especially in homes with pets. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your vacuum cleaner.



Image: The Dyson Cyclone V10 Animal Origin cordless vacuum cleaner, showing its main body, wand, and various cleaning attachments.

Important Safety Instructions

Before using your Dyson vacuum cleaner, read all instructions and cautionary markings in this manual and on the appliance. When using an electrical appliance, basic precautions should always be followed, including the following:

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only Dyson recommended attachments.
- Do not use with a damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.

- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material, such as chlorine bleach, ammonia, or drain cleaner.
- Do not use without dust bin and filter in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up hard or sharp objects such as glass, nails, screws, coins, etc.

What's in the Box

Your Dyson Cyclone V10 Animal Origin package includes the following components:

- Vacuum Cleaner (main body)
- Wand
- Motorbar™ cleaner head
- Docking station
- Combination tool
- Crevice tool
- Reach under tool
- Hair screw tool
- Charger

Setup and Initial Use

Assembly

1. Unpack all components from the box.
2. Connect the wand to the main body of the vacuum cleaner until it clicks securely into place.
3. Attach your desired cleaner head (e.g., Motorbar™ cleaner head) to the end of the wand until it clicks. For handheld use, attach tools directly to the main body.

Charging the Battery

Before first use, fully charge your vacuum cleaner. The battery life is approximately 60 minutes on a full charge, depending on the power mode used.

- Mount the docking station in a convenient location near a power outlet, following the instructions provided with the docking station.
- Connect the charger to the docking station and plug it into a wall outlet.
- Place the vacuum cleaner into the docking station. The indicator light on the battery will illuminate to show it is charging.
- A full charge typically takes several hours. The indicator light will turn off when charging is complete.

Operating Instructions

Powering On/Off

The Dyson Cyclone V10 Animal Origin uses a power trigger. Press and hold the trigger to operate the vacuum. Release the trigger to turn it off. This design helps conserve battery life by only using power when needed.

Selecting Power Modes

Your vacuum cleaner features 3 power levels to suit different cleaning tasks and surfaces:

- **Mode 1 (Eco):** For longer cleaning tasks and lighter debris on all floor types.
- **Mode 2 (Medium):** For everyday cleaning on various surfaces, offering a balance of power and run time.
- **Mode 3 (Boost/Max):** For intensive spot cleaning and stubborn dirt. This mode uses more battery power.

Use the slider switch on the top of the main body to cycle through the power modes.

Cleaning Different Surfaces

The Motorbar™ cleaner head is designed to seamlessly transition between hard floors and carpets. For specialized cleaning, utilize the included tools:

- **Combination tool:** For dusting and general cleaning of surfaces.
- **Crevice tool:** For narrow gaps and edges.
- **Reach under tool:** Extends and bends to clean under low furniture.
- **Hair screw tool:** Designed to pick up long hair and pet hair without tangling.

Maintenance

Regular maintenance ensures optimal performance of your Dyson vacuum cleaner.

Emptying the Dust Bin

Empty the dust bin as soon as the dirt reaches the MAX mark. The bin has a capacity of 0.2 gallons.

1. Hold the vacuum cleaner over a trash bin.
2. Push the red lever down firmly to release the bin flap and eject the dirt.
3. Close the bin flap securely until it clicks into place.

Washing the Filter

The washable filter should be cleaned regularly, at least once a month, or more frequently with heavy use. Ensure the filter is completely dry before reinserting.

1. Twist the filter counter-clockwise from the main body and pull it away.
2. Wash the filter under cold running water, gently squeezing it until the water runs clear. Do not use detergents.
3. Shake excess water from the filter and leave it to air dry for at least 24 hours in a warm place with good airflow. Do not dry in a tumble dryer, microwave, or near an open flame.
4. Once completely dry, reinsert the filter by twisting it clockwise until it clicks into place.

General Care

- Wipe the exterior of the vacuum cleaner with a clean, damp cloth only. Do not use any cleaning agents or polishes.
- Check cleaner heads and tools for blockages regularly. Remove any hair or debris wrapped around the brush bar.

Troubleshooting

If you encounter issues with your Dyson Cyclone V10 Animal Origin, refer to the following common problems and solutions:

No Power or Intermittent Power

- **Check battery charge:** Ensure the battery is fully charged.
- **Charger connection:** Verify the charger is properly connected to the vacuum and the wall outlet.
- **Trigger operation:** Ensure the power trigger is fully pressed and held.
- **Temperature:** The vacuum may temporarily shut off if the motor overheats. Allow it to cool down for at least an hour.

Loss of Suction

- **Empty the dust bin:** A full bin can restrict airflow.
- **Check for blockages:** Inspect the cleaner head, wand, and main body inlet for any obstructions.
- **Clean the filter:** A dirty filter can significantly reduce suction. Wash and thoroughly dry the filter as instructed in the Maintenance section.

Cleaner Head Not Spinning

- **Check for blockages:** Remove any hair or debris tangled around the brush bar.
- **Ensure proper attachment:** Make sure the cleaner head is securely attached to the wand or main body.

If problems persist after following these steps, please contact Dyson customer support.

Specifications

Brand: Dyson

Model Name: Dyson Cyclone V10 Animal Origin

Item Model Number: 400480-91

Special Feature: Bagless, Cordless, Lightweight, Washable Filter

Filter Type: Cartridge

Is Cordless?: Yes

Capacity: 0.2 Gallons

Wattage: 50.4 watts

Form Factor: Stick

Color: Purple

Product Dimensions: 9.5"L x 9.8"W x 48.7"H

Battery Life: Up to 60 minutes

Controller Type: Push Button

Control Method: Touch

Number of Power Levels: 3

Portable: Yes

Indoor/Outdoor Usage:	Indoor
Vacuum Collection Technology:	Cyclonic technology
Item Weight:	5.17 pounds
Power Source:	Battery Powered
Surface Recommendation:	All floors
Care Instructions:	Wipe clean only. Wash filter as instructed.

Warranty and Support

Your Dyson Cyclone V10 Animal Origin vacuum cleaner comes with a **2-year warranty** covering parts and labor from the date of purchase. Please retain your proof of purchase for warranty claims.

For further assistance, troubleshooting, or to register your product, please visit the official Dyson support website or contact their customer service. Contact details can typically be found on the Dyson website or in the packaging materials.