

## Dyson V12

# Dyson V12 Detect Slim+ Cordless Vacuum Cleaner User Manual

Model: V12 | Brand: Dyson

## 1. INTRODUCTION

The Dyson V12 Detect Slim+ is Dyson's lightest intelligent cordless vacuum, designed for powerful and efficient cleaning across various surfaces. It features advanced technology to reveal invisible dust and provide a deep clean.

Key features include:

- Lightweight and Cordless design for easy maneuverability.
- Bagless operation with a washable filter for convenient maintenance.
- 30% more power compared to previous models, ensuring strong suction.
- Up to 60 minutes of run time on a single charge.
- Power button operated for continuous cleaning without holding a trigger.



## 2. SETUP

### 2.1 Unpacking and Assembly

Carefully remove all components from the packaging. Ensure all parts listed in the packing list are present. Assemble the main body of the vacuum cleaner by connecting the wand to the motorhead and the main unit. Ensure all connections click securely into place.

### 2.2 Charging the Battery

Before first use, fully charge the vacuum cleaner. The Dyson V12 Detect Slim+ comes with a charging dock. Mount the charging dock to a wall in a convenient location near a power outlet, or use it as a freestanding charger. Connect the charger to the dock and then place the vacuum onto the dock. The battery indicator on the LCD screen will show charging progress. A full charge takes approximately 3.5 hours.

The wall-mounted dock also provides convenient storage for the vacuum and its accessories.

## 3. OPERATING INSTRUCTIONS

### 3.1 Powering On/Off and Suction Modes

To turn the vacuum on or off, press the red power button located on the top of the main unit. Unlike some models, this vacuum features a power button for continuous cleaning, eliminating the need to hold down a trigger.

The LCD screen on the back of the main unit displays current performance, including selected power mode and remaining run time. To cycle through the suction modes (Eco, Med, Boost), press the button below the LCD screen. Each mode offers different levels of suction power and battery life:

- **Eco Mode:** Provides the longest run time (up to 60 minutes) for lighter cleaning tasks.
- **Med Mode:** A balanced mode for everyday cleaning.
- **Boost Mode:** Delivers maximum suction power for stubborn dirt and debris, with a shorter run time.

### 3.2 Using the Laser Detect Slim Fluffy Optic Cleaner Head

The Fluffy Optic cleaner head is equipped with a precisely angled green laser that illuminates microscopic dust on hard floors, making it visible for thorough cleaning. This feature helps ensure no dust is missed.

### 3.3 Attaching and Using Accessories

The Dyson V12 Detect Slim+ comes with various attachments for different cleaning needs. To attach an accessory, align it with the end of the wand or the main unit and push until it clicks into place. To remove, press the red release button on the accessory and pull it off.

Common accessories include:

- **Motorbar Cleaner Head:** Ideal for carpets and rugs, designed to prevent hair tangling.
- **Crevice Tool:** For cleaning tight spaces, corners, and edges.
- **Combination Tool:** Features a brush and wide nozzle for versatile cleaning on various surfaces.
- **Hair Screw Tool:** Anti-tangle conical brush bar for picking up long hair and pet hair from pet beds, car seats,

and stairs.

## 4. MAINTENANCE

### 4.1 Emptying the Dustbin

Empty the dustbin when debris reaches the 'MAX' line. To empty, hold the vacuum over a trash bin, push the red lever forward to release the bin, and then push it further to open the base and release the dirt. Close the bin securely after emptying.

### 4.2 Cleaning the Filter

The vacuum features a washable filter. For optimal performance, wash the filter at least once a month, or more frequently if used heavily. To remove the filter, twist the purple cap counter-clockwise from the top of the main unit. Wash the filter under cold running water until the water runs clear. Squeeze out excess water and allow it to air dry completely for at least 24 hours before reinserting. Do not use detergents or put it in a dishwasher.

### 4.3 Cleaning the Brush Bars

Regularly check and clean the brush bars in the cleaner heads to remove any tangled hair or debris. Follow the instructions in the full manual for specific cleaner head disassembly and cleaning procedures.

## 5. TROUBLESHOOTING

If your Dyson V12 Detect Slim+ is not performing as expected, consider the following common issues:

- **No Power:** Ensure the battery is fully charged. Check if the charger is properly connected to both the vacuum and the power outlet.
- **Reduced Suction:** Check if the dustbin is full and needs emptying. Inspect the filter to ensure it is clean and dry. Look for blockages in the cleaner head, wand, or main unit.
- **Cleaner Head Not Spinning:** Check for obstructions in the brush bar. Ensure the cleaner head is securely attached.

For more detailed troubleshooting or persistent issues, refer to the comprehensive online support resources available on the Dyson website or contact Dyson customer support.

## 6. SPECIFICATIONS

Feature	Detail
Brand	Dyson
Model Name	V12 Detect+

Style	V12 Detect Slim +
Special Feature	Lightweight, Cordless, Bagless, Washable Filter
Filter Type	Cartridge
Included Components	Charging Dock
Capacity	0.2 Gallons
Wattage	350 watts
Runtime	1 hour (60 minutes)
Charging Time	3.5 Hours
Product Dimensions	9.8"L x 9.9"W x 49.1"H
Item Weight	4.84 pounds
Battery Type	Lithium-Ion
Noise Level	78 dB
Control Method	Touch
Controller Type	Push Button

## 7. WARRANTY AND SUPPORT

The Dyson V12 Detect Slim+ Cordless Vacuum Cleaner comes with a **2-year warranty** covering parts and labor. This warranty protects against defects in materials and workmanship under normal household use.

For warranty claims, technical support, or to purchase genuine Dyson parts and accessories, please visit the official Dyson website or contact their customer service department. Keep your proof of purchase for warranty validation.

Official Dyson Store: [Dyson Store on Amazon](#)