

[Manuals.plus](#) /

> [FREDORCH](#) /

> FREDORCH F20 Sex Machine Instruction Manual

FREDORCH F20

FREDORCH F20 Sex Machine Instruction Manual

INTRODUCTION

This instruction manual provides comprehensive guidance for the safe and effective use of your FREDORCH F20 Sex Machine. Please read all instructions carefully before operation to ensure proper setup and functionality. Keep this manual for future reference.

PRODUCT OVERVIEW

The FREDORCH F20 Sex Machine is designed for adjustable and versatile use, featuring remote control operation and compatibility with various attachments. It is equipped with a powerful yet quiet motor for a consistent experience.

power outlet. Verify that the power indicator light on the machine illuminates.

Product Details



Image: Detailed view of the FREDORCH F20 machine's components and assembly points.



Image: Dimensions of a typical silicone dildo attachment and the Vac-U-Lock adapter.

OPERATING INSTRUCTIONS

Remote Control Pairing and Basic Operation

1. Ensure the machine is plugged in and the power light is on.
2. Bring the remote control close to the machine and point it towards the receiver.
3. Press and hold either the '+' (plus) or '-' (minus) button on the remote until the indicator light on the remote illuminates, signifying a successful connection.
4. The machine has 8 operating modes. Use the **A**' button to cycle to the next mode and the **B**' button to cycle to the previous mode.

5. To start or accelerate the machine, press and hold the '+' button. To stop or reduce speed, press and hold the '-' button.
6. To stop the machine immediately, click the 'C' or 'D' button.
7. To change modes while the machine is running, first stop the machine using 'C' or 'D', then select the desired mode with 'A' or 'B', and finally press '+' or '-' to start.



Image: Diagram of the remote control with button functions and mode descriptions.

Video: Operation and Remote Control Instructions

Your browser does not support the video tag.

Video: This video demonstrates the operation and remote control instructions for the FREDORCH F20 Sex Machine, including power connection, remote pairing, and mode selection.

Adjusting Angle and Stroke

- The machine supports an angle adjustment range from -45° to +90°, allowing for various positions.
- The stroke distance is adjustable from 3-13cm. Adjust the stroke length using the knob on the side of the machine.

Adjust according to demand
-45° to +90°



Image: Examples of various adjustable angles for the machine, including Riding Cowgirl, Missionary, Lying Flat, and Doggy Style positions.

Quiet entertainment

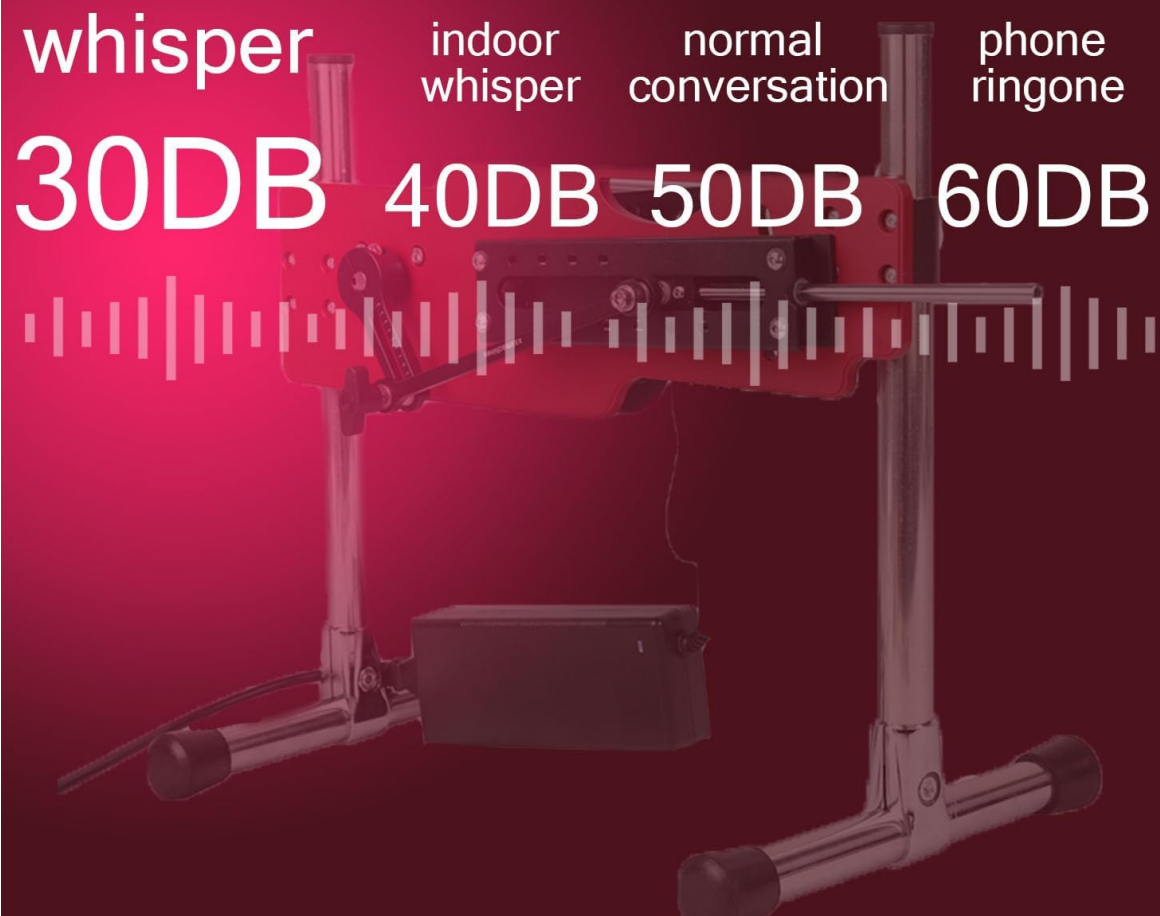


Image: Close-up of the 30° angle fine-tuning knob on the FREDORCH F20 machine.



Image: The stroke length adjustment mechanism on the FREDORCH F20 machine, showing a range of 3-13cm.

FEATURES

- **Speed Adjustable:** The machine features a speed governor for easy control of the operating speed.
- **Quiet Operation:** Operates at a low decibel level (30-38dB), comparable to a whisper, ensuring privacy.
- **Angular Adjustment:** Supports angle adjustments from -45° to $+90^{\circ}$ for diverse usage scenarios.
- **Adjustable Stroke:** Offers a stroke distance of 3-13cm.
- **Vac-U-Lock Compatibility:** The Vac-U-Lock connector allows for easy attachment and interchangeability of various accessories.
- **Powerful Motor:** Equipped with a 120W high-power silent motor.

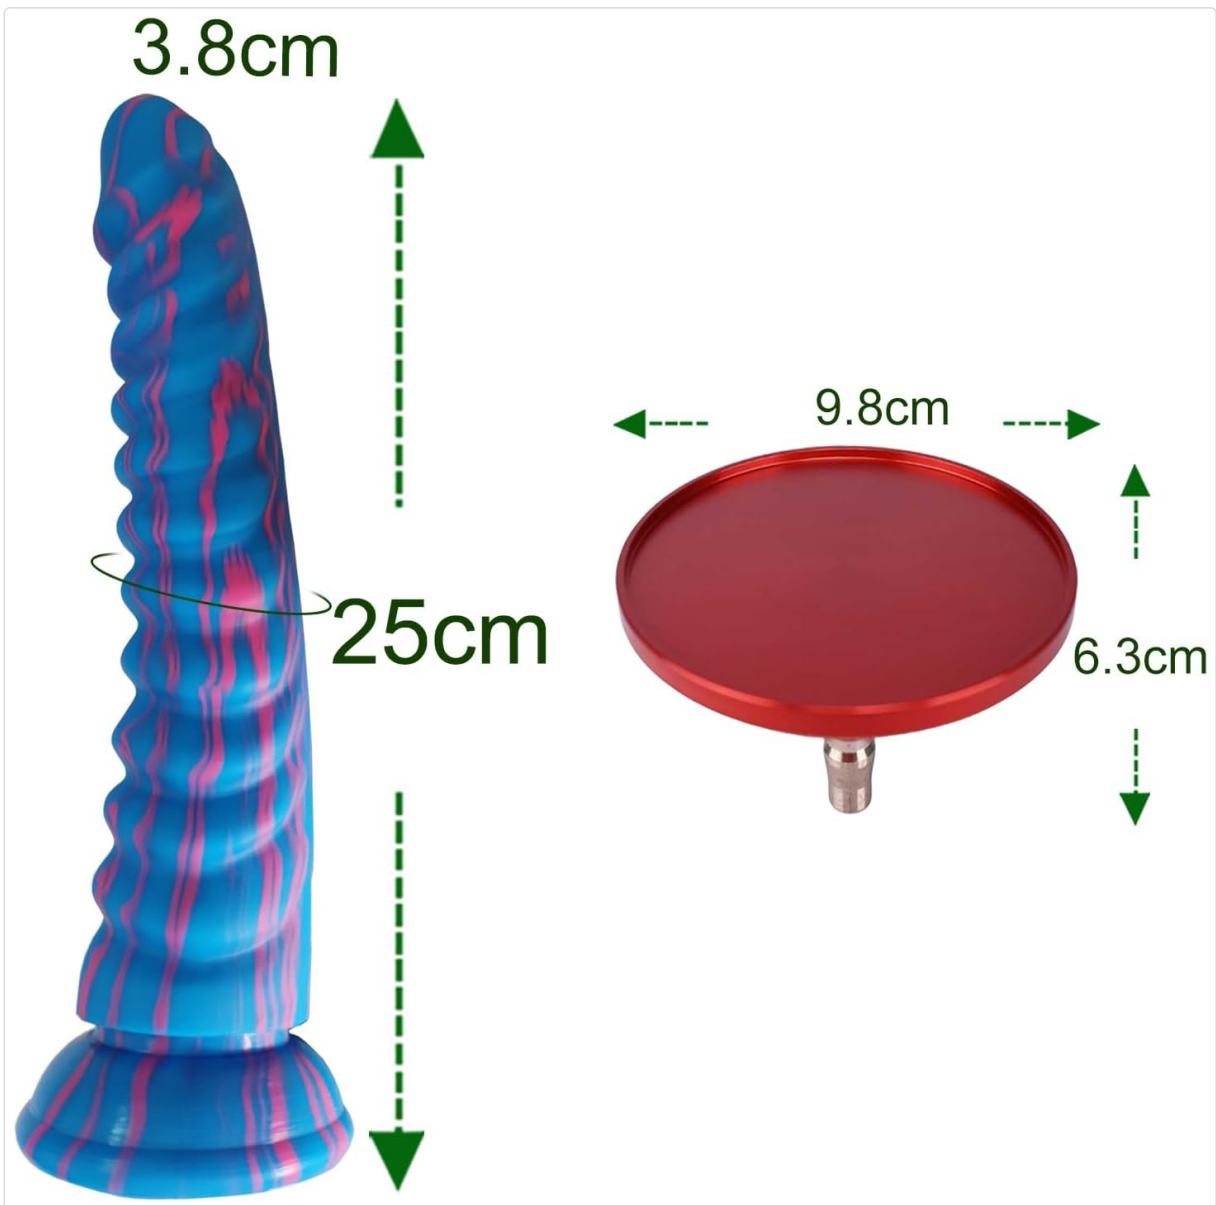


Image: Illustration of the quiet operation of the FREDORCH F20 machine, indicating a noise level of 30dB (whisper).

MAINTENANCE AND CARE

- **Cleaning:** After each use, disconnect the power and clean all attachments and the reciprocating shaft with warm water and a mild, toy-safe soap. Rinse thoroughly and allow to air dry completely.
- **Storage:** Store the machine and its accessories in a clean, dry, and cool place, away from direct sunlight and extreme temperatures.
- **Lubrication:** Periodically check the moving parts for smooth operation. If necessary, apply a small amount of silicone-based lubricant to the reciprocating mechanism, avoiding contact with electrical components.
- **Inspection:** Regularly inspect the power cord and all connections for any signs of damage. Do not use the machine if any part is damaged.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power outlet issue; remote not paired.	Ensure power cord is securely plugged into machine and outlet. Test outlet with another device. Re-pair remote control by holding '+' or '-' button.
Remote control not responding.	Remote battery low; remote too far; interference.	Replace remote control batteries. Bring remote closer to the machine. Ensure no obstructions between remote and machine.
Machine operation is noisy or rough.	Lack of lubrication; foreign object; loose parts.	Apply silicone-based lubricant to moving parts. Inspect for any obstructions. Ensure all screws and connections are tight.
Attachment is loose.	Improper attachment; Vac-U-Lock not secure.	Ensure the attachment is fully seated onto the Vac-U-Lock adapter and the adapter is securely fastened to the machine.

SPECIFICATIONS

- **Brand:** FREDORCH
- **Model:** F20
- **Power:** 120W
- **Noise Level:** 30-38dB
- **Stroke Length:** 3-13cm
- **Angle Adjustment:** -45° to +90°
- **Dimensions (Package):** 20.47 x 12.01 x 9.49 inches
- **Weight (Package):** 15.41 Pounds
- **ASIN:** B0C1RTKCK6

WARRANTY AND SUPPORT

For any questions, concerns, or warranty claims, please contact FREDORCH customer support. Refer to your purchase documentation for specific warranty terms and contact information. We are committed to providing assistance and resolving any issues you may encounter.

Contact: Please refer to the seller information on your purchase platform or the FREDORCH official website for customer service contact details.