

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [AULCMEET](#) /

› [AULCMEET H01JE Replacement AC Remote Control User Manual for Toshiba Air Conditioners](#)

AULCMEET H01JE

AULCMEET H01JE Replacement AC Remote Control User Manual

Model: **H01JE** | Brand: **AULCMEET**

1. INTRODUCTION

This manual provides instructions for the AULCMEET H01JE replacement remote control, designed for use with various Toshiba Split Wall Type Air Conditioning units. This remote control is pre-programmed and typically requires no setup; it functions directly out of the package once batteries are installed.

2. PRODUCT OVERVIEW

The AULCMEET H01JE remote control features an ergonomic design and a clear LCD display for easy operation. Below is an illustration of the remote with its primary buttons.





Figure 1: Front view of the AULCMEET H01JE remote control.

Key Buttons and Functions:

- **Power Button (Orange):** Turns the air conditioner unit on or off.
- **TEMP. Buttons (Up/Down Arrows):** Adjusts the desired temperature setting.
- **MODE Button:** Cycles through operating modes (e.g., Auto, Cool, Dry, Fan, Heat).
- **FAN Button:** Adjusts the fan speed (e.g., Auto, Low, Medium, High).
- **SWING Button:** Controls the vertical louver swing function.

- **HI POWER Button:** Activates maximum cooling or heating for rapid temperature change.
- **ECO Button:** Engages energy-saving mode.
- **MEMO Button:** Stores or recalls preferred settings.
- **1-3-5-9H Button:** Sets various timer durations (1, 3, 5, or 9 hours).
- **PRESET Button:** Activates a pre-set operating mode.
- **CLR Button:** Clears current settings or timer.
- **ON/OFF Buttons:** Used for setting timer on/off functions.
- **SET Button:** Confirms selected settings, often used with timer functions.
- **FILTER Button:** Indicates when the air filter needs cleaning or resetting the filter indicator.
- **CLOCK Button:** Sets the current time.
- **RESET Button:** Resets the remote control to factory default settings.
- **CHECK Button:** Used for diagnostic purposes or checking system status.
- **PAP Button:** (Specific function may vary by AC model, often related to air purification or special airflow patterns).

3. SETUP

Battery Installation

The remote control requires two (2) AAA batteries for operation. Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.



Figure 2: Battery compartment with batteries inserted.

Note: The remote is designed to work immediately after battery installation without additional programming for compatible Toshiba AC units.

4. OPERATING INSTRUCTIONS

Point the remote control directly at the indoor unit of your air conditioner when operating. Ensure there are no obstructions between the remote and the unit.

4.1. Power On/Off

- Press the **Power** button (orange) once to turn the air conditioner on.

- Press the **Power** button again to turn the air conditioner off.

4.2. Temperature Adjustment

- Use the **TEMP. Up** arrow button to increase the desired temperature.
- Use the **TEMP. Down** arrow button to decrease the desired temperature.

4.3. Mode Selection

- Press the **MODE** button repeatedly to cycle through the available operating modes:
 - **AUTO:** The unit automatically selects the operating mode based on the room temperature.
 - **COOL:** Provides cooling operation.
 - **DRY:** Dehumidifies the room.
 - **FAN:** Operates only the fan, circulating air without cooling or heating.
 - **HEAT:** Provides heating operation (if supported by your AC unit).

4.4. Fan Speed Adjustment

- Press the **FAN** button repeatedly to adjust the fan speed. Options typically include Auto, Low, Medium, and High.

4.5. Airflow Direction (SWING)

- Press the **SWING** button to activate or deactivate the automatic vertical louver swing. Pressing it multiple times may adjust the swing range or fix the louver position.

4.6. Timer Functions

- **Setting ON/OFF Timer:** Use the **ON** and **OFF** buttons in conjunction with the **SET** button to program the unit to turn on or off after a specified duration.
- **Preset Timers:** Press the **1-3-5-9H** button to quickly set the unit to turn off after 1, 3, 5, or 9 hours.
- **CLOCK:** Press the **CLOCK** button to set the current time on the remote's display.
- **MEMO:** Use the **MEMO** button to save your preferred settings (mode, temperature, fan speed) for quick recall.

4.7. Special Functions

- **HI POWER:** Press this button for rapid cooling or heating. The unit will operate at maximum capacity for a set period.
- **ECO:** Activates an energy-saving mode, which may adjust temperature and fan speed to reduce power consumption.
- **PRESET:** Recalls a previously saved or factory-defined set of operating parameters.
- **FILTER:** If your AC unit has a filter indicator, pressing this button may reset it after cleaning the filter. Consult your AC unit's manual for specific filter maintenance.
- **PAP:** This button typically activates a specific air purification or special airflow pattern function, depending on your Toshiba AC model.

5. MAINTENANCE

5.1. Cleaning the Remote Control

- Wipe the remote control with a soft, dry cloth.
- Do not use liquid cleaners, abrasive cleaners, or chemical sprays, as these can damage the remote's surface or internal components.

5.2. Battery Replacement

- Replace batteries when the remote's display becomes dim or the remote stops responding consistently.
- Always replace both AAA batteries at the same time with new ones.
- Remove batteries if the remote will not be used for an extended period to prevent leakage.
- Dispose of used batteries according to local regulations.

6. TROUBLESHOOTING

Remote Not Responding:

- **Check Batteries:** Ensure batteries are correctly inserted with the correct polarity and are not depleted. Replace with new AAA batteries if necessary.
- **Line of Sight:** Make sure there are no obstructions between the remote control and the air conditioner's indoor unit. The remote uses infrared signals, which require a clear path.
- **Distance:** Ensure you are within the effective operating range of the air conditioner unit.
- **Reset Remote:** If issues persist, try pressing the **RESET** button (often a small recessed button requiring a pointed object like a paperclip). This will restore factory settings.

Display Issues:

- **Dim Display:** This usually indicates low battery power. Replace the batteries.
- **No Display:** Check battery installation and ensure batteries are new.

Specific Functions Not Working:

- Some advanced functions (e.g., PAP, specific timer settings) may depend on the specific model of your Toshiba air conditioner. Refer to your AC unit's original manual for confirmation of supported features.

7. SPECIFICATIONS

Model Number	H01JE
Brand	AULCMEET
Compatible Devices	Toshiba Split Wall Type Air Conditioners (e.g., WH-F08J, WH-H01JE, WH-F09J, WC-H01EE/F, WC-h01JE, WH-H01EE, WH-H03JE, WC-H04JE, WH-H05JE, WH-H06JE, WH-H07JE)
Battery Type	2 x AAA Batteries
Product Dimensions	6.7 x 2 x 0.7 inches (17 x 5.1 x 1.8 cm)
Item Weight	2.99 ounces (84.76 grams)
Special Feature	Ergonomic Design

Color	White
-------	-------

8. WARRANTY AND SUPPORT

This remote control is designed for reliable operation. For any issues or questions regarding compatibility or functionality, please contact the seller or manufacturer directly. Keep your purchase receipt for any warranty claims.