



Manuals.plus /

› **PERFASCIN** /

› PERFASCIN RM-C3348 Replacement Remote Control User Manual for JVC Smart LCD LED TVs

PERFASCIN RM-C3348

PERFASCIN RM-C3348 Replacement Remote Control User Manual

Model: RM-C3348 | Brand: PERFASCIN

INTRODUCTION

This manual provides instructions for the PERFASCIN RM-C3348 Replacement Remote Control. This remote is designed to be a direct replacement for various JVC Smart LCD LED TV models, offering full functionality without the need for programming. Please read this manual carefully to ensure proper use and longevity of your remote control.



Figure 1: PERFASCIN RM-C3348 Remote Control (Front View)

COMPATIBLE TV MODELS

The RM-C3348 remote control is compatible with the following JVC Smart LCD LED TV models:

- LT-50KB585
- LT-40N5105A
- LT-32KC197
- LT 32KC197
- RM-C3348
- RM-C3349
- RM-C3354
- LT-55KB695
- LT-65KC595
- T32KC197

If your TV model is not listed, please contact customer support for compatibility verification.

PACKAGE CONTENTS

The package includes:

- 1 x PERFASCIN RM-C3348 Replacement Remote Control

Note: Batteries are not included and must be purchased separately.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two AAA (LR03) 1.5V batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.



Figure 2: Battery Compartment with Batteries Inserted

First Use

This remote control is designed for immediate use with compatible JVC Smart LCD LED TV models. No programming or pairing is required. Simply install the batteries, point the remote at your TV, and begin operation.

OPERATING INSTRUCTIONS

The RM-C3348 remote control provides standard functions for your JVC TV. Below is a general guide to common buttons and their functions:

- **Power Button** (●): Turns the TV on or off.
- **Number Buttons (0-9)**: Directly select channels.
- **Volume Up/Down (+/-)**: Adjusts the TV volume.
- **Channel Up/Down (P ▲/P ▼)**: Changes TV channels sequentially.
- **Mute Button** (⏸): Mutes or unmutes the TV audio.

- **Navigation Buttons (▲ ▼ ◀▶):** Navigate through menus and options.
- **OK Button:** Confirms selections in menus.
- **Back Button (↶):** Returns to the previous screen or menu.
- **Source Button:** Selects input sources (HDMI, AV, etc.).
- **Home Button (🏠):** Accesses the TV's smart home screen or main menu.
- **Netflix Button:** Direct access to the Netflix application.
- **YouTube Button:** Direct access to the YouTube application.
- **Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward):** Controls media playback.

Refer to your JVC TV's user manual for specific functions related to your television model.

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA 1.5V).
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and damage.
- **Environment:** Avoid exposing the remote control to extreme temperatures, direct sunlight, or high humidity. Keep it away from water and other liquids.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control does not work.	<ul style="list-style-type: none"> ◦ Batteries are dead or inserted incorrectly. ◦ Obstruction between remote and TV. ◦ Remote control is too far from the TV. ◦ Infrared sensor on TV is blocked. 	<ul style="list-style-type: none"> ◦ Replace batteries with new ones, ensuring correct polarity. ◦ Remove any objects blocking the line of sight to the TV. ◦ Move closer to the TV (within 33 feet). ◦ Ensure the TV's IR sensor is clear.
Some buttons do not respond.	<ul style="list-style-type: none"> ◦ Batteries are low. ◦ Button is stuck or damaged. ◦ TV model incompatibility for specific advanced functions. 	<ul style="list-style-type: none"> ◦ Replace batteries. ◦ Gently press the button multiple times. If still unresponsive, the remote may be damaged. ◦ Verify your TV model is fully compatible with all remote functions.

If troubleshooting steps do not resolve the issue, please contact customer support.

SPECIFICATIONS

- **Model:** RM-C3348
- **Brand:** PERFASCIN
- **Connectivity Technology:** Infrared (IR)

- **Power Source:** 2 x AAA (LR03) 1.5V Batteries (not included)
- **Maximum Range:** 33 Feet (approximately 10 meters)
- **Color:** Black
- **Item Weight:** 70 Grams
- **Item Dimensions (L x W x H):** 6" x 3" x 0.5" (approximately 15.24 cm x 7.62 cm x 1.27 cm)
- **Special Feature:** No Programming Required
- **Compatible Devices:** JVC Smart LCD LED Televisions

SUPPORT

If you encounter any issues or have questions regarding your PERFASCIN RM-C3348 remote control, please contact our customer support. We are committed to providing satisfactory solutions.

For assistance, please refer to the contact information provided by your retailer or the manufacturer's official website.

