

[Manuals.plus](#) /

› [HADEN](#) /

› Haden Dorchester 4-Slice Toaster Instruction Manual

HADEN 75046

Haden Dorchester 4-Slice Toaster Instruction Manual

Model: 75046 | Brand: HADEN

INTRODUCTION

Thank you for choosing the Haden Dorchester 4-Slice Toaster. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.



Image: The Haden Dorchester 4-Slice Toaster in Stone Blue, showcasing its retro design and four wide slots.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a risk of fire or electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Always unplug the toaster from the outlet before dislodging food.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your Haden Dorchester 4-Slice Toaster:

- **Toasting Slots (4):** Wide slots designed for various bread types, including bagels and thicker slices.
- **Carriage Control Levers (2):** Used to lower and raise bread into the toasting slots.
- **Browning Control Knob:** Adjusts the desired level of toast browning (settings 1-6).
- **Cancel Button:** Stops the toasting cycle at any time.
- **Bagel Button:** Activates the bagel function, toasting only the cut side of bagels.
- **Defrost Button:** Defrosts and toasts frozen bread.
- **Removable Crumb Trays (2):** Located at the bottom for easy cleaning of crumbs.
- **Housing:** The main body of the toaster, featuring a retro design and Stone Blue finish with faux wood trim accents.

DORCHESTER TOASTER



**BPA
Free**



**Browning
Control**



**Bagel & Defrost
Functions**



**4-Slice
Toaster**



**Faux Wood
Trim Accents**



**Crumb
Tray**

Available in:



Image: A visual representation highlighting key features of the Dorchester Toaster, including its 4-slice capacity, browning control, bagel & defrost functions, faux wood trim, and crumb tray.

SETUP

1. **Unpack:** Carefully remove the toaster and all packaging materials.
2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials like curtains or walls. Ensure adequate ventilation around the toaster.
3. **First Use (Burn-in):** Before toasting food for the first time, operate the toaster without bread on the highest browning setting (6) for a few cycles. This will burn off any manufacturing residues and eliminate initial odors. A slight odor or smoke is normal during this process. Ensure the area is well-ventilated.
4. **Power Connection:** Plug the power cord into a standard 120V AC electrical outlet.



Image: The toaster with its dimensions labeled: 11.5 inches (29 cm) wide, 10.5 inches (27 cm) deep, and 8.5 inches (22 cm) high.

OPERATING INSTRUCTIONS

General Toasting

1. **Insert Bread:** Place up to four slices of bread, bagels, or other items into the toasting slots.
2. **Select Browning Level:** Turn the browning control knob to your desired setting. Setting 1 is for light browning, and setting 6 is for dark browning.
3. **Lower Carriage:** Press down the carriage control lever until it locks into place. The toaster will begin toasting. The LCD display will show the selected browning level and a countdown timer.
4. **Completion:** Once the toasting cycle is complete, the bread will automatically pop up.
5. **Cancel:** To stop the toasting cycle at any time, press the **Cancel** button.



Image: A detailed view of the toaster's control panel, showing the browning control knob with its digital display, and the Cancel, Defrost, and Bagel buttons.

Defrost Function

Use this function to toast frozen bread without pre-thawing.

1. Insert frozen bread into the slots.
2. Select your desired browning level.
3. Press down the carriage control lever.
4. Press the **Defrost** button. The indicator light will illuminate. The toaster will automatically adjust the toasting time for frozen items.

Bagel Function

This function toasts the cut side of bagels while gently warming the outer side.

1. Insert bagels with the cut side facing inwards (towards the center heating elements).

2. Select your desired browning level.
3. Press down the carriage control lever.
4. Press the **Bagel** button. The indicator light will illuminate.



Image: Four slices of toasted bread perfectly positioned within the wide slots of the Haden Dorchester Toaster.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your toaster.

1. **Always Unplug:** Before cleaning, ensure the toaster is unplugged from the power outlet and completely cooled down.
2. **Crumb Tray:** Pull out the removable crumb trays from the bottom of the toaster. Dispose of crumbs and wipe the trays clean with a damp cloth. Dry thoroughly before reinserting.
3. **Exterior:** Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads, as they may scratch the surface. For stubborn spots, a mild detergent can be used, followed by wiping with a clean, damp cloth and drying thoroughly.
4. **Interior:** Do not attempt to clean the inside of the toaster with any sharp objects or utensils. If bread becomes jammed, unplug the toaster and carefully remove the bread after it has cooled.

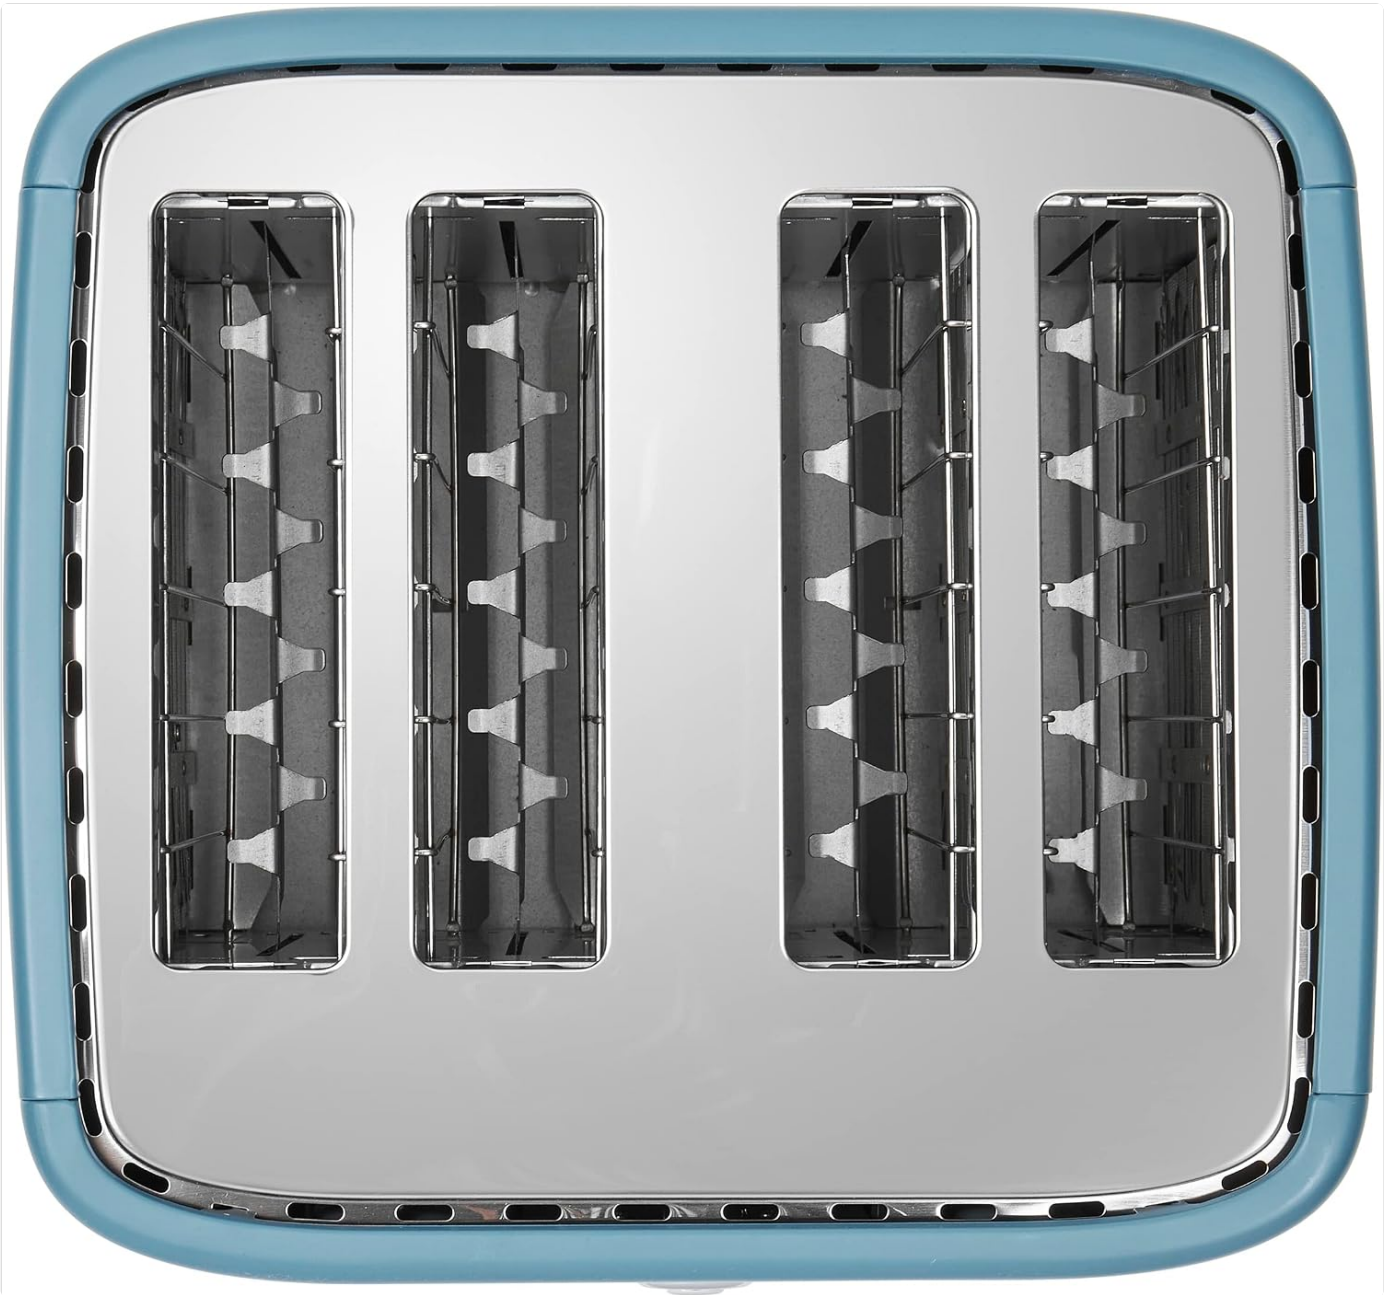


Image: An overhead view showing the four wide toasting slots, designed to accommodate various bread sizes and types.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure toaster is securely plugged in. Check circuit breaker. Try a different outlet.
Bread does not pop up.	Carriage lever not fully depressed; food jammed.	Ensure lever is fully locked down. Unplug and carefully remove jammed food after cooling.
Uneven toasting.	Inconsistent bread thickness; crumb buildup.	Ensure bread slices are uniform. Clean crumb trays regularly.
Smoke coming from toaster.	Crumbs or food stuck inside; food burning.	Immediately press Cancel and unplug. Allow to cool, then clean crumb trays and check for lodged food. Reduce browning setting.

SPECIFICATIONS

- **Brand:** HADEN
- **Model:** 75046
- **Color:** Stone Blue
- **Material:** Stainless Steel
- **Product Dimensions (L x W x H):** 11.5" x 10.5" x 8.5" (29cm x 27cm x 22cm)
- **Number of Slices:** 4
- **Wattage:** 1800 watts
- **Voltage:** 120 Volts
- **Browning Settings:** 6
- **Special Features:** Variable Browning Control, Cancel Function, Bagel Function, Defrost Function, Removable Crumb Tray, LCD Display.
- **Item Weight:** 5.8 Pounds
- **UPC:** 017342750463

WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts, please visit the official HADEN website or contact their customer service. Keep your proof of purchase for any warranty claims.
HADEN Official Website: [Visit the HADEN Store on Amazon](#)

© 2024 HADEN. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

