

[Manuals.plus](#) /

› [Mikikin](#) /

› Mikikin Q3 Portable USB Rechargeable Desk Fan Instruction Manual

Mikikin Q3

Mikikin Q3 Portable USB Rechargeable Desk Fan Instruction Manual

Model: Q3 | Brand: Mikikin

INTRODUCTION

Thank you for purchasing the Mikikin Q3 Portable USB Rechargeable Desk Fan. This manual provides essential information for the safe and efficient operation of your new fan. Please read it thoroughly before use and retain it for future reference.



Image: The Mikikin Q3 Portable USB Rechargeable Desk Fan in black, showcasing its compact design and digital display.

PRODUCT FEATURES

- **Intelligent Battery Power & Speeds Display:** Digital display shows remaining battery power and current speed setting.
- **Lightweight & Portable:** Weighs only 216g with a cordless design for easy transport.
- **180° Foldable:** Features a 180-degree swivel stand for versatile positioning (stand or hang).
- **5 Speeds Adjustable Wind:** Offers five distinct wind speed settings for customized comfort.
- **USB Rechargeable:** Equipped with a 2000mAh battery, rechargeable via USB.

SETUP

1. Unboxing and Initial Charge

1. Carefully remove the fan and all accessories from the packaging.
2. Locate the included USB charging cable.
3. Connect the USB cable to the fan's charging port (USB-C) and to a suitable USB power source (e.g., wall adapter, power bank, laptop, car charger).

4. Allow the fan to fully charge before first use. The digital display will show the charging status and battery percentage. A long red light indicates a fully charged state, while flashing indicates charging.

USB Rechargeable Fan



Wall Charger



Power Bank



Laptop



Car Charger



Tips: Press and hold for 3 seconds to turn on or off

Image: The Mikikin Q3 fan connected to a USB power source for charging, illustrating its versatility with various charging options.

2. Positioning the Fan

- The fan features a 180-degree foldable stand. Adjust the stand to your desired angle for desktop use.
- For hanging, fully extend the stand to form a handle and hang the fan from a suitable hook or surface.

180° Adjustable Head & Various Ways to Use



Hanging Fan



Handheld Fan



Desk Fan

Image: The Mikikin Q3 fan demonstrating its adjustable stand for use as a hanging fan, handheld fan, or desk fan.

OPERATING INSTRUCTIONS

1. Power On/Off

- To turn the fan **ON**, press and hold the power button for 3 seconds.
- To turn the fan **OFF**, press and hold the power button for 3 seconds again.

2. Adjusting Wind Speed

- Once the fan is on, short press the power button to cycle through the 5 available wind speeds.
- The digital display will indicate the current speed setting (1 to 5).
- Speed 1: Sleep Wind (gentle breeze)
- Speed 2: Natural Wind (moderate breeze)
- Speed 3: Refreshing Wind (stronger breeze)
- Speed 4: Strong Wind (powerful airflow)

- Speed 5: Circulating Wind (variable speed for air circulation)



Fifth speed wind One button control

FIVE SPEED WIND SPEED -TAILOR-MADE FOR YOUR

①	②	③	④	⑤
Lake breeze	Forest breeze	Strong wind	Natural	Circulating air
Refreshing experience	zestful	Instant cooling	relief	natural wind
12h	8h	6h	4h	10h

Image: A visual representation of the five wind speed settings and their corresponding descriptions for the Mikikin Q3 fan.

3. Battery Level Display

- The digital display continuously shows the remaining battery percentage.
- Recharge the fan when the battery level is low to ensure continuous operation.

MAINTENANCE

1. Cleaning

- Ensure the fan is turned off and unplugged before cleaning.
- Use a soft, dry cloth to wipe the exterior surfaces of the fan.
- To clean the fan blades, gently wipe them with a soft, slightly damp cloth. Do not use excessive water or harsh cleaning agents.

- Do not immerse the fan in water or any other liquid.

2. Storage

- When not in use for extended periods, store the fan in a cool, dry place.
- Ensure the fan is fully charged before storing to prolong battery life.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on	Low battery; Power button not pressed correctly	Charge the fan fully; Press and hold the power button for 3 seconds
Weak airflow	Low battery; Fan speed set too low; Obstruction	Recharge the fan; Increase fan speed; Clear any obstructions from the fan grille
Fan stops unexpectedly	Battery depleted	Recharge the fan
Digital display not working	Low battery; Malfunction	Charge the fan; Contact customer support if issue persists

SPECIFICATIONS

Feature	Detail
Brand	Mikikin
Model Name	Q3
Power Source	Battery Powered
Battery Capacity	2000mAh
Charging Time	Approx. 2 hours for full charge
Operating Time	Approx. 4.5 hours (depending on speed setting)
Number of Speeds	5
Tilt Adjustment	180°
Product Dimensions	1.57"D x 6.69"W x 5.4"H
Item Weight	9.1 ounces
Control Method	Touch

WARRANTY AND SUPPORT

Mikikin offers a 180-day hassle-free replacement and refund policy for this desktop fan. In case of any problems or for technical assistance, please contact our customer service team. We are committed to replying within 24 hours. For support, please visit the official Mikikin website or refer to the contact information provided with your purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C1VJ37FH>

More documents and user manuals: <https://manuals.plus/>