

N-one Npad Plus

N-ONE Npad Plus Android 12 Tablet User Manual

Model: Npad Plus

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your N-ONE Npad Plus Android 12 Tablet. Please read this manual thoroughly before using the device and keep it for future reference.



Figure 1: N-ONE Npad Plus Android 12 Tablet

2. PRODUCT OVERVIEW

2.1 Package Contents

- N-ONE Npad Plus Tablet

- USB Type-C Cable
- Power Adapter (may vary by region)
- User Manual (this document)

2.2 Device Layout



Figure 2: Npad Plus Device Layout

The Npad Plus features a headphone jack, Micro/SIM card slot, front camera, rear camera, volume buttons, reset button, power switch, Type-C port, and speakers. Familiarize yourself with these components for optimal use.

3. SETUP

3.1 Charging the Battery

Before first use, fully charge the tablet. Connect the provided USB Type-C cable to the tablet's Type-C port and the other end to the power adapter. Plug the adapter into a power outlet. The battery indicator on the screen will show charging status.

高容量バッテリー：実用性と耐久性を両立

Npad-plus は 6600mAh の大容量バッテリーを搭載し、長時間の使用にも支えられます。
多様なシーンで安定した電力供給を実現します。

Type-C ポートを搭載しており、充電操作が簡単で汎用性に優れます。
日常の充電ニーズに柔軟に応え、使い勝手を高めています。

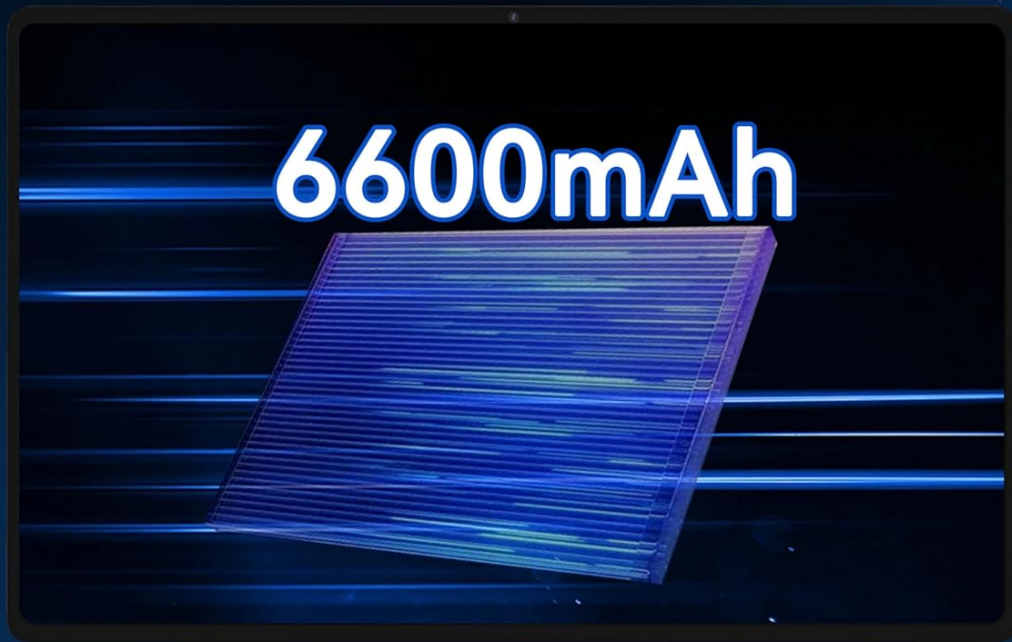 


Figure 3: High Capacity 6600mAh Battery

3.2 Power On/Off

- **To Power On:** Press and hold the Power button until the N-ONE logo appears.
- **To Power Off:** Press and hold the Power button until a power-off menu appears. Select "Power off" and confirm.
- **To Restart:** From the power-off menu, select "Restart".

3.3 Initial Setup Wizard

Upon first power-on, the tablet will guide you through an initial setup process. This includes selecting your language, connecting to a Wi-Fi network, setting up your Google account, and configuring basic security settings.

4. OPERATING INSTRUCTIONS

4.1 Android 12 Features

The Npad Plus runs on Android 12, offering a personalized, safe, and effortless experience. Key features include a redesigned

user interface, enhanced privacy controls, multi-window operation, eye protection mode, parental controls, and dark mode.

Android 12 搭載、GMS 認定を取得。Google Play から多くのアプリが利用でき、使いやすく多機能をスムーズに活用可能です。



Bluetooth 5.0 搭載と WiFi5 (デュアルバンド) 対応に加え FM ラジオ搭載で、安定した接続と高速通信を両立しつつ、ラジオも楽しめます。



WiFi 5 (2.4/5Ghz)

Bluetooth5.0

FM ラジオ

Npad-Plus は 3.5mm イヤホンジャックを搭載。アダプター不要で、あらゆる有線イヤホンやヘッドフォンと簡単接続。音楽鑑賞や動画視聴を、自由自在に楽しめます。



軽さは 439g、薄さは 7.5mm にまで凝縮され Npad Plus。手に取る瞬間の軽やかさと、バッグへの収納のスムーズさを両立させています。



Figure 4: Android 12 Interface and Connectivity

4.2 Display and Visuals

The tablet features a 10.36-inch IPS display with a 2000x1200 2K resolution, providing clear and vibrant visuals. The eye protection mode can be enabled for comfortable viewing during extended use.

10.36インチ大屏・2000×1200高解像度、鮮明視覚を実現

Npad Plusの10.36インチは持ちやすく視認性抜群。

2000×1200解像度が生む鮮やかな色彩は、写真のリアルさや文字の鮮明さを伝える。
仕事から娯楽まで、高精細画面がどの場面でも快適。持ち運びも自在で、高画質をいつでも楽しめる。



10.36インチ



薄型一体



2000×1200 IPS

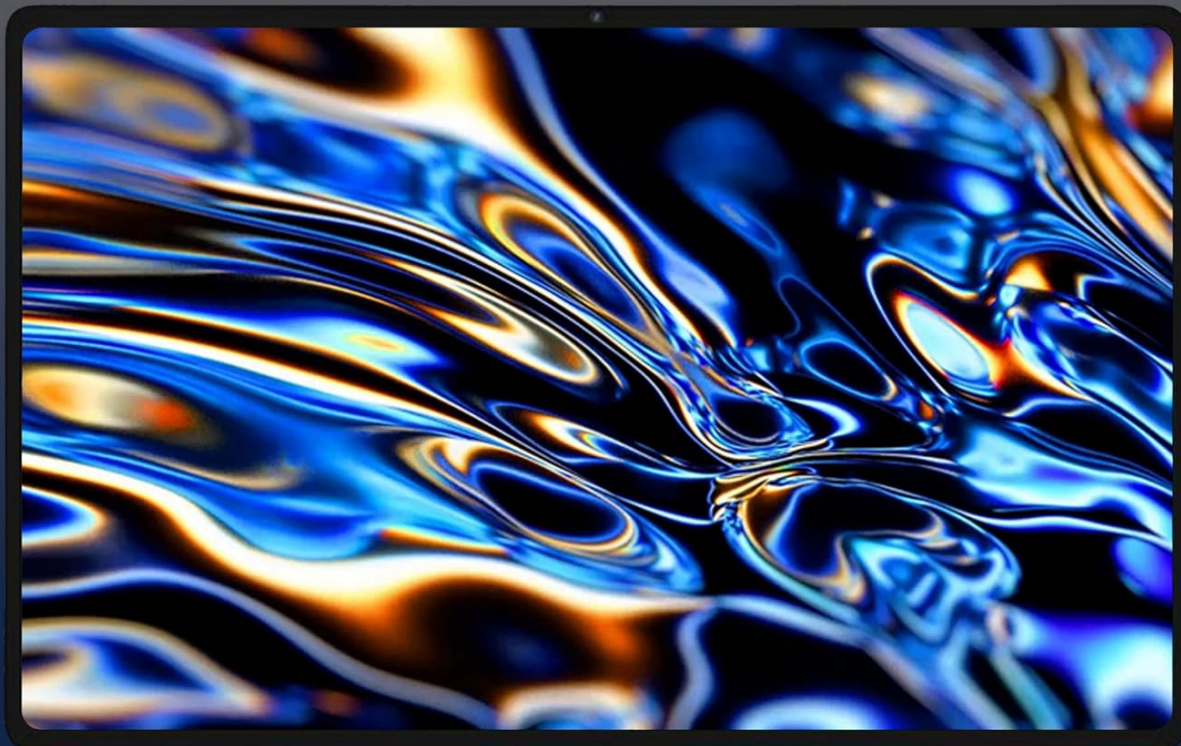 


Figure 5: High-Resolution Display

4.3 Performance and Storage

Equipped with a MediaTek MT8183 8-core high-speed processor and 8GB of RAM, the Npad Plus ensures smooth operation even with multiple applications running. It comes with 128GB of internal storage, expandable up to 1TB via a TF card, providing ample space for your files, apps, and media.

MediaTek 8 コア強芯

 
MediaTek 製 MT 8183 プロセッサを搭載、12nm プロセスで実現した高効率性能と 2.0GHz のクロック周波数によりタブレット操作をさらにスムーズに。アプリ起動から動画再生、複数タスクの同時処理まで滞りなく応答し、Mali-G72 GPU がゲームや高精細動画の描画を力強くサポート。低消費電力設計で長時間使用も可能で、日常の Web 閲覧からエンターテインメントまで最適なパワーを提供します。

MEDIATEK

8コアCPU
MT 8183



TSMC 12nmプロセス

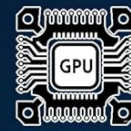

Mali-G72

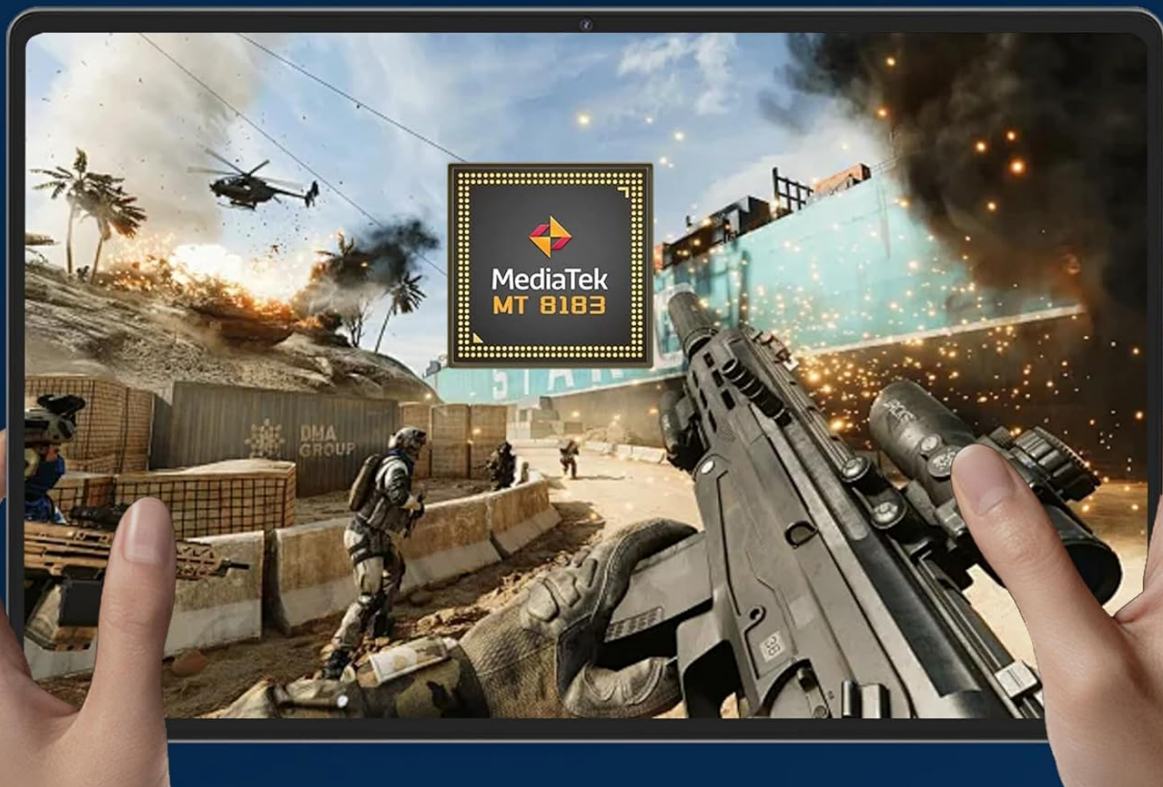 


Figure 6: MediaTek 8-Core CPU

卓越したストレージ構成で多面的なニーズに応える

Npad plus は、優れたタブレット端末で、圧倒的な記憶力でスムーズな操作体験を提供します。

8GB の RAM により、複数のアプリを同時に開いても滞りなく動作し、多忙な日常でも快適な作業や娯楽を楽しめます。

本体には 128GB の大容量ストレージを搭載しており、多数のアプリ、写真、動画を保存するのに十分なスペースを確保。

さらに最大 1TB までの拡張ストレージに対応しているため、大量のデータを保存するニーズにも柔軟に応えられます。

ビデオ編集、ゲーム、ドキュメント管理など、幅広いシーンで安心して使用できる Npad plus のストレージ性能をぜひ体験してみてください。



8GB RAM



128GB ROM



1TB拡張対応



Figure 7: Memory and Storage Configuration

4.4 Camera Usage

The Npad Plus features a 5MP front camera and a 13MP rear camera. These cameras are suitable for capturing photos, video calls, and online learning. The high-resolution rear camera ensures clear and vivid recordings in various lighting conditions.

高解像度のカメラ搭載で、どんなシーンでも鮮明な記録が可能

フロント 5MP カメラは、ビデオ通話や自撮りの際に、肌の質感や表情の細部まで鮮明に映し出します。家族や友人とのリアルタイムコミュニケーションをより親密に楽しめます。

リア 13MP カメラは、日常の風景、美味しい料理、大切な瞬間を高解像度で収めます。明るい環境でも暗い環境でも自然な色彩とクリアな画質を発揮し、毎日の記録を美しく残すことができます。



フロントカメラ 500 万画素



リアカメラ 1300 万画素



Figure 8: Front and Rear Cameras

4.5 Connectivity

The tablet supports 2.4G/5G dual-band Wi-Fi for stable and high-speed internet access. Bluetooth 5.0 allows connection to various Bluetooth devices. Integrated GPS functionality enables navigation with offline maps.

- **Wi-Fi:** Supports 802.11 a/b/g/n/ac for fast and reliable wireless connections.
- **Bluetooth:** Version 5.0 for connecting headphones, speakers, and other peripherals.
- **GPS:** Built-in GPS for location services and navigation.

5. MAINTENANCE

5.1 Cleaning the Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. Do not use abrasive cleaners, alcohol, or chemical solvents, as these may damage the surface. Avoid getting moisture into any openings.

5.2 Battery Care

To prolong battery life, avoid exposing the tablet to extreme temperatures. Do not fully discharge the battery frequently. If storing the tablet for an extended period, charge it to about 50% before storage.

5.3 Storage

Store the tablet in a cool, dry place away from direct sunlight and excessive humidity. Keep it away from strong magnetic fields.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Tablet does not turn on.	Battery is depleted.	Charge the tablet for at least 30 minutes before attempting to power on.
Cannot connect to Wi-Fi.	Incorrect password; router issue; out of range.	Verify password, restart router, move closer to router.
Tablet is slow or unresponsive.	Too many apps running; low storage; software glitch.	Close background apps, clear cache, free up storage, restart tablet.
Screen flickering.	Software issue; hardware defect.	Restart the tablet. If the issue persists, contact customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	N-one
Model Name	Npad Plus
Operating System	Android 12
CPU	MediaTek MT8183 8-Core
RAM	8 GB
Storage	128 GB ROM (Expandable up to 1TB via TF card)
Display Size	10.36 inches
Display Resolution	2000x1200 IPS
Front Camera	5 MP
Rear Camera	13 MP
Battery Capacity	6600 mAh
Connectivity	Wi-Fi (2.4G/5G), Bluetooth 5.0, GPS
Ports	Type-C, 3.5mm Headphone Jack, Micro/SIM slot
Dimensions	34 x 20.1 x 3.7 cm

Feature	Detail
Weight	830 g

8. WARRANTY AND SUPPORT

N-ONE provides a 12-month warranty for the Npad Plus tablet, along with a 30-day return and refund policy. If you encounter any quality issues with the product after purchase, please contact customer support via your Amazon purchase history. We are committed to providing a satisfactory resolution.

For further assistance or inquiries, please refer to the contact information provided with your purchase or visit the official N-ONE support website.

© 2023 N-ONE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I reset the N-one Npad Plus Android 12 Tablet?

Based on the device layout for the N-one Npad Plus Android 12 Tablet, the device features a dedicated physical reset button located on the body of the tablet alongside the volume buttons and power...

[Read full answer](#)

