

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [AOSKY](#) /

› [AOSKY Cordless Blackout Roller Shades Instruction Manual \(Model 68e7d586-d248-4e47-8702-631bae52d088\)](#)

AOSKY 68e7d586-d248-4e47-8702-631bae52d088

AOSKY Cordless Blackout Roller Shades Instruction Manual

Model: 68e7d586-d248-4e47-8702-631bae52d088

INTRODUCTION



Image: The AOSKY Cordless Blackout Roller Shade in black, providing a general view of the product.

This manual provides detailed instructions for the installation, operation, and maintenance of your AOSKY Cordless Blackout Roller Shades. These shades are designed to block 100% of sunlight and UV rays, offer thermal insulation, and feature a safe, cordless spring system for ease of use.

PRODUCT FEATURES

- **Excellent Material:** Made of 100% polyester fabric with a reinforced thermal insulated coating. Soft, smooth, wear-resistant, and easy to clean.
- **100% Blackout:** Blocks all sunlight and UV rays, providing complete room darkening.
- **Thermal Insulation:** Reduces heat loss in winter and keeps rooms cool in summer, contributing to energy efficiency.
- **New Innovative Cordless Design:** Safer for children and pets, eliminating tangled cords.
- **Robust Spring-Loaded Mechanism:** Tested for over 5,000 operations, allowing smooth stopping at any desired

height.

- **Convenient Operation:** Gently pull the buckle to automatically close the roller blind.
- **Easy Installation:** Comes with an installation package including instructions, screws, and metal brackets.

CHOOSING THE CORRECT SIZE

Accurate measurement is crucial for proper fit and function. Consider whether you will be using an inside mount or an outside mount.

- **Outside Mount:** To ensure full window coverage, the shade width should be at least 4 inches wider than the window's width. For example, if your window is 30 inches wide, an order size of 34 inches or more is recommended. There is no specific requirement for window depth.
- **Inside Mount:** The order width should be the exact window width or slightly less (0-1 inch less) for internal installation. A minimum of 2 inches of frame depth is required. Note that the fabric width will be approximately 1 inch narrower than the total shade width.
- **Height:** The shade height is adjustable from 0 to 72 inches, accommodating various window heights.



FABRIC COMPOSITION

Fabric Layer
Shading

Black Coating
Anti-UV

Color Coating
Thermal Insulation


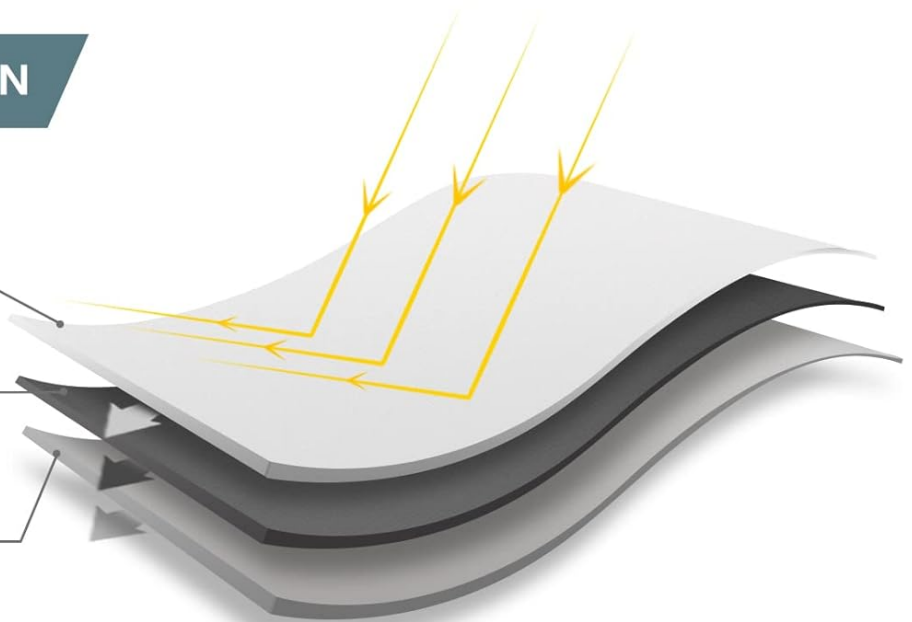


Image: Measurement guide for roller shades, detailing blind width, fabric width, and height. The fabric width is 1 inch less than the blind width. A table shows corresponding fabric widths for various blind widths.

Example choose a 23" shade

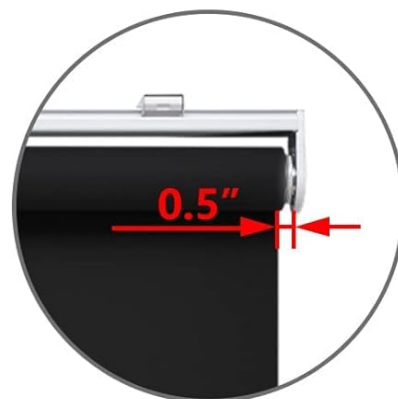

Fabric Width=Blind Width-1 inch

Blind Width	Fabric Width	Height
23"	22"	72"
.....	
47"	46"	
48"	47"	

Note: Tiny light gap will exist on each side. please choose outside mount for 100% blackout.

Image: Visual guide for inside mount and outside mount installations. The outside mount shows the shade extending beyond the window frame, while the inside mount shows it fitting within the frame. Important notes on width and depth requirements are included.

INSTALLATION INSTRUCTIONS

Your AOSKY Cordless Roller Shade comes with all necessary mounting hardware and detailed instructions to facilitate a straightforward installation process. The product width includes the mounting bracket size, and a minimum of 2 inches of frame depth is required for inside mount installations.

Required Tools (Not Included):

- Drill
- Measuring Tape
- Pencil

- Screwdriver

Installation Steps:

1. **Measure and Mark:** Carefully measure your window according to the "Choosing the Correct Size" section. Mark the positions for the mounting brackets with a pencil.
2. **Install Brackets:** Using a drill, create pilot holes at the marked positions. Secure the metal brackets using the provided screws. Ensure brackets are level and securely fastened.
3. **Attach Shade:** Align the roller shade with the installed brackets and snap it into place. Ensure it is firmly seated.
4. **Test Operation:** Gently pull down and push up the shade to ensure smooth operation and proper installation.



Image: A visual representation of the roller shade components and a step-by-step guide for installation, including mounting brackets and how the shade attaches.


OPERATING INSTRUCTIONS

Your AOSKY Cordless Roller Shade features a user-friendly spring system for smooth and quiet operation.

- **To Lower the Shade:** Gently pull the bottom rod downwards to the desired position. The shade will stop smoothly wherever you release it.
- **To Raise the Shade:** Gently pull the bottom rod downwards slightly, then release it. The shade will automatically retract upwards. Guide it with your hand for controlled retraction.
- **Cordless Handle:** The integrated cordless handle ensures safety for children and pets by eliminating loose cords.


Adjusting Location and Speed:

The shade's stopping location and retraction speed can be adjusted. Open the left end cap to access the location regulator and the right end cap to access the speed regulator. Refer to the detailed product images for visual guidance.




OUR ADVANTAGE


VS

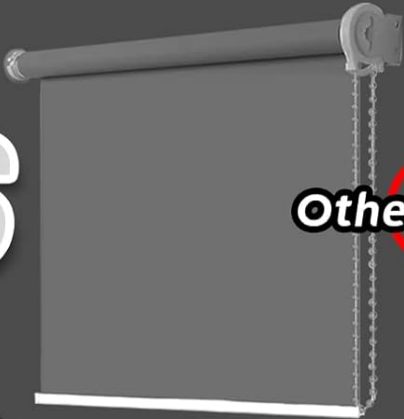



Other


- Quick installation with fewer parts



- Cordless handle : light
 - Easy to install



- Easy to pull with one hand
 - Noiseless



- Smooth and light bottom rod

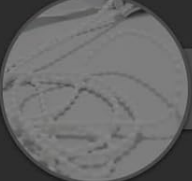

- 

- More parts are tedious to install
- 

- Longer pulling beads
 - Easy to tangle
- 

- Two-handed pulling of the bead
 - Noisy
- 

- The bottom bar is bulky

Image: A comparison illustrating the benefits of AOSKY's cordless design, including quick installation, a light cordless handle, easy one-hand pulling, noiseless operation, and a smooth bottom rod, contrasted with traditional corded blinds.

PRODUCT DETAILS



 
Waterproof Same-Color Back



Cordless Handle Keep Children Safe



Rote location Regulator

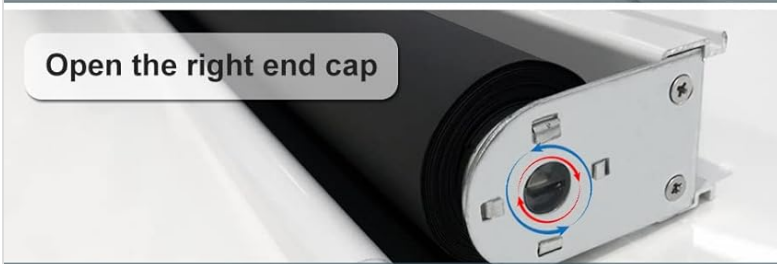

Rote Speed Regulator



Sturdy Texture Fabric and Hardware

Image: Detailed views of the product, showing the waterproof backing, the cordless handle for child safety, and the internal mechanisms for adjusting the shade's stopping location and retraction speed.

MAINTENANCE

To maintain the appearance and functionality of your AOSKY Cordless Blackout Roller Shades, follow these simple care instructions:

- **Cleaning:** Spot clean only. Use a soft, damp cloth with mild soap and water to gently clean any soiled areas. Avoid harsh chemicals or abrasive cleaners.
- **Dusting:** Regularly dust the shade with a soft cloth or a vacuum cleaner with a brush attachment to prevent dust buildup.
- **Avoid Immersion:** Do not immerse the shade in water.

TROUBLESHOOTING

If you encounter any issues with your AOSKY Cordless Blackout Roller Shades, please refer to the following common solutions or contact customer support.

- **Shade not retracting/extending smoothly:** Check for any obstructions in the window frame or along the shade's path. Ensure the shade is properly seated in its brackets. The retraction speed can be adjusted using the regulator on the right end cap.
- **Shade not stopping at desired height:** The stopping location can be adjusted using the regulator on the left end cap.
- **Missing accessories:** If any parts are missing from your package, please contact AOSKY customer service immediately for assistance.

SPECIFICATIONS

Feature	Detail
Brand	AOSKY
Model Number	68e7d586-d248-4e47-8702-631bae52d088
Material	100% Polyester
Product Dimensions	72"L x 26"W (for this specific variant)
Color	Black (for this specific variant)
Opacity	Room Darkening (100% Blackout)
Operation Mode	Manual, Cordless Spring System
Special Features	Thermal Insulation, UV Protection
Included Components	Roller blind, mounting hardware (installation instructions, screws, metal brackets)
Product Care	Spot Clean Only
Mounting Type	Inside Mount, Outside Mount
Item Weight	2.89 pounds (1.32 Kilograms)

WARRANTY AND SUPPORT

AOSKY is committed to providing quality products and customer satisfaction. If you encounter any issues, such as missing accessories or product defects, please contact our customer service team. We aim to provide a satisfactory solution within 24 hours.

For support, please refer to the contact information provided with your purchase or visit the official AOSKY store on Amazon: [AOSKY Store](#)



