

## Satisure B-S

# Satisure Wireless Outdoor Doorbell Instruction Manual

Model: B-S

## INTRODUCTION

---

Thank you for choosing the Satisure Wireless Outdoor Doorbell. This manual provides detailed instructions for the proper installation, operation, and maintenance of your doorbell system. Please read this manual carefully before use and retain it for future reference.

This system includes 4 receivers and 2 transmitters, offering a wide wireless range and multiple customization options for your home or office.

## KEY FEATURES

---

- **Extended Wireless Coverage:** Up to 400 meters (1300 feet) stable wireless range, designed to penetrate obstacles effectively without interference.
- **Customizable Melodies & Volume:** Choose from 58 distinct melodies and 5 adjustable volume levels, with a maximum volume of 110 dB, suitable for all users, including those with hearing impairments.
- **Durable Outdoor Transmitter:** IP55 waterproof rating ensures reliable operation in temperatures from -5°C to 70°C (23°F to 158°F), with an ultra-low power consumption battery lasting up to 3 years.
- **Visual Notification:** In addition to the audible chime, a blue LED light flashes when the doorbell is pressed, providing a visual alert, especially useful in dark environments or for the hearing impaired.
- **Easy Installation:** Multiple installation options including double-sided adhesive or screw mounting.



*Image: Satisure Wireless Doorbell Receiver highlighting 58 melodies, 5 volume levels, 0-110dB range, and LED notification.*

## PACKAGE CONTENTS

---

Your Satisure Wireless Outdoor Doorbell package should include:

- 4 x Plug-in Receivers
- 2 x Wireless Transmitters (Doorbell Buttons)
- Mounting Hardware (screws, anchors, double-sided adhesive tape)
- User Manual (this document)
- 1 x Lithium Ion Battery (pre-installed in transmitter)

## SETUP AND INSTALLATION

---

### Transmitter (Doorbell Button) Installation

The transmitter is designed for outdoor use and is IP55 waterproof. Ensure the battery is correctly installed before mounting.

1. **Choose a Location:** Select a flat, vertical surface near your door, ensuring it is easily accessible to visitors.

2. **Method A: Double-Sided Adhesive Installation**

- Clean the mounting surface thoroughly to ensure it is dry and free of dust or grease.
- Peel off one side of the double-sided adhesive tape and apply it firmly to the back of the transmitter.
- Peel off the other side of the adhesive tape and press the transmitter firmly onto the desired surface for at least 30 seconds.

3. **Method B: Screw Installation**

- Open the back cover of the transmitter.
- Mark the positions for drilling holes using the transmitter's back plate as a template.
- Drill two holes and insert the provided anchors.
- Secure the back plate to the wall with the provided screws.
- Attach the transmitter to the secured back plate.

# YOU CAN USE OUR DOORBELL ANYTIME



Musical alarm for children



Caller for pregnant women



Doorbells for visitors



Practical pager for old

*Image: Step-by-step guide for transmitter installation using either double-sided adhesive or screws.*

## Receiver (Chime Unit) Installation

The receivers are plug-in units. Simply plug them into any standard electrical outlet indoors.

1. Plug each receiver into a power outlet in your desired locations around your home or office.
2. Ensure the outlets are within the wireless range of the transmitter.



Botón de volumen

Botón de música



### Paso 1

Conecte el receptor al enchufe, pulse brevemente el botón Arriba o Abajo del receptor para seleccionar su tono de llamada favorito.

### Paso 2

Mantenga pulsado el botón de volumen durante 5 segundos, el receptor emite un pitido y parpadea una vez, está en modo de emparejamiento.

### Paso 3

Pulse el botón, el timbre sonará y parpadeará.

*Image: Illustration of connecting the receiver to a power outlet and pairing it with the transmitter.*

## OPERATING INSTRUCTIONS

### Pairing Transmitters with Receivers

Your doorbell system usually comes pre-paired. If re-pairing is needed or you add new components:

1. Plug the receiver into a power outlet.
2. Press and hold the **Volume Button** on the receiver for approximately 5 seconds until it emits a "ding" sound and the LED indicator flashes. This indicates it is in pairing mode.
3. Immediately press the transmitter (doorbell button). The receiver will chime, confirming successful pairing.
4. If you have multiple transmitters, repeat step 2 and 3 for each transmitter.
5. To pair multiple receivers, repeat the entire process for each receiver.

### Changing Melodies

The receiver offers 58 different melodies.

- Briefly press the **Music Selection Button** (usually indicated by a music note icon) on the receiver to cycle through the available melodies.
- Once you hear a melody you like, stop pressing the button. The selected melody will be saved.

### Adjusting Volume

There are 5 adjustable volume levels, from 0 dB (mute) to 110 dB.

- Briefly press the **Volume Button** on the receiver to cycle through the 5 volume levels.
- Select the desired volume.
- **Mute Mode:** If you select the 0 dB volume level, the receiver will be in mute mode. The LED indicator will still flash when the doorbell is pressed, providing a silent visual alert. This is ideal for not disturbing sleeping babies or quiet environments.

# 1300 FEET STABLE WIRELESS RANGE

## Ultra-long Wireless Range



*Image: Mute mode feature, where the LED flashes without sound, suitable for not disturbing a sleeping baby.*


## MAINTENANCE

### Transmitter Battery Replacement

The transmitter uses a Lithium Ion battery with an expected life of up to 3 years. When the doorbell button stops working or the signal weakens, it's time to replace the battery.

1. Carefully open the transmitter casing using a small screwdriver or by prying it open from the side notch.
2. Remove the old battery.
3. Insert a new Lithium Ion battery, ensuring correct polarity (+/-).
4. Close the casing securely.

### A Cambiar la batería

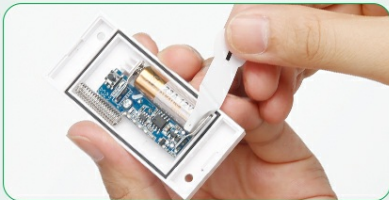

### B Utilizar Cinta Adhesiva Doble Cara



### C Utilice tornillos y anclajes



Image: Instructions for changing the transmitter battery and alternative installation methods.

## Cleaning

- Wipe the doorbell units with a soft, dry cloth.
- Do not use abrasive cleaners or solvents, as these may damage the surface.
- Ensure the transmitter remains free of excessive dirt or debris to maintain its IP55 rating.

## TROUBLESHOOTING

| Problem                                              | Possible Cause                                                                                                                                                                                                                            | Solution                                                                                                                                                                                                                                                                                                                                                  |
|------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Receiver does not chime when transmitter is pressed. | <ul style="list-style-type: none"><li>◦ Receiver is not plugged in or powered.</li><li>◦ Transmitter battery is dead.</li><li>◦ Units are not paired.</li><li>◦ Units are out of range.</li><li>◦ Volume is set to mute (0 dB).</li></ul> | <ul style="list-style-type: none"><li>◦ Ensure receiver is securely plugged into a working outlet.</li><li>◦ Replace transmitter battery.</li><li>◦ Re-pair the transmitter and receiver (see "Pairing Transmitters with Receivers" section).</li><li>◦ Move receiver closer to the transmitter.</li><li>◦ Adjust volume level on the receiver.</li></ul> |
| Doorbell range is shorter than expected.             | <ul style="list-style-type: none"><li>◦ Thick walls or metal structures interfering with signal.</li><li>◦ Low transmitter battery.</li><li>◦ Interference from other wireless devices.</li></ul>                                         | <ul style="list-style-type: none"><li>◦ Try repositioning receivers or transmitters to minimize obstructions.</li><li>◦ Replace transmitter battery.</li><li>◦ Ensure other wireless devices are not too close to the doorbell units.</li></ul>                                                                                                           |
| Receiver LED flashes but no sound.                   | <ul style="list-style-type: none"><li>◦ Volume is set to mute (0 dB).</li></ul>                                                                                                                                                           | <ul style="list-style-type: none"><li>◦ Press the Volume Button on the receiver to increase the volume.</li></ul>                                                                                                                                                                                                                                         |

## SPECIFICATIONS

|               |     |
|---------------|-----|
| Model Number: | B-S |
|---------------|-----|

|                                |                                                  |
|--------------------------------|--------------------------------------------------|
| Wireless Range:                | Up to 400m / 1300ft (open air)                   |
| Melodies:                      | 58                                               |
| Volume Levels:                 | 5 (0-110 dB)                                     |
| Transmitter Waterproof Rating: | IP55                                             |
| Operating Temperature:         | -5°C to 70°C (23°F to 158°F)                     |
| Transmitter Battery Type:      | Lithium Ion (included)                           |
| Product Dimensions:            | 10 x 8 x 10 cm (approximate, for entire package) |
| Product Weight:                | 460 g (approximate, for entire package)          |

## WARRANTY AND SUPPORT

Satisure provides customer service for its products. If you have any questions or require assistance with your Satisure Wireless Outdoor Doorbell, please do not hesitate to contact Satisure Direct. We offer 24/7 customer support to ensure your satisfaction. For contact information, please refer to the packaging or the official Satisure website.

© 2026 Satisure. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

