

Easytry17957

Generic Remote Control Instruction Manual

FOR REAL FLAME ELECTRIC FIREPLACES

Compatible Models: 5010E-GRY, 4199, 4099, 1290E-W, G1200E-W, G1200E-B, 7100E-BW, 4130E-W, 5910E-W

1. SETUP AND BATTERY INSTALLATION

The remote control requires one CR2025 3V coin cell battery. A battery may be included with your remote. Please ensure proper installation for functionality.



Image: Back of the remote control, illustrating the battery compartment. The label indicates it uses a CR2025 3V battery and provides instructions to push and slide to open the compartment for battery replacement.

1. Locate the battery compartment on the back of the remote control.
2. Press the small tab labeled "PUSH" and slide the battery tray out in the direction of the arrow labeled "OPEN".
3. Insert one CR2025 3V coin cell battery with the positive (+) side facing up.

4. Slide the battery tray back into the compartment until it clicks securely into place.

2. OPERATING INSTRUCTIONS

This remote control operates via infrared (IR) signals. For optimal performance, point the remote directly at the IR receiver on your electric fireplace. Ensure there are no obstructions between the remote and the fireplace.



Image: Front view of the black remote control, displaying eight circular buttons with red outlines. These buttons control various functions such as power, light, flame effects, temperature adjustment, and timer settings.

Button Functions:

- **Power Button ()**: Turns the fireplace ON or OFF.
- **Light Button ()**: Adjusts the brightness or intensity of the flame effect.
- **Flame Effect Button ()**: Cycles through different flame patterns or colors.
- **Color Cycle Button ()**: Changes the color of the flame or ember bed.
- **Temperature Up/Down Buttons (▲/▼)**: Increases or decreases the heat output temperature.
- **Heater Button ()**: Activates or deactivates the heating function.
- **Timer Button ()**: Sets the operating timer for the fireplace.

3. MAINTENANCE

Battery Replacement:

If the remote control's range decreases or it stops responding, the battery may need to be replaced. Follow the battery installation steps in Section 1 to replace the CR2025 3V coin cell battery.

Cleaning:

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the remote's surface or internal components.

4. TROUBLESHOOTING

- **Remote not responding:**

- Ensure the battery is correctly installed and not depleted. Replace if necessary.
- Verify that there is a clear line of sight between the remote control and the fireplace's IR receiver.
- Confirm that the remote control is compatible with your specific fireplace model. Refer to the list of compatible models in the header.

- **Intermittent operation:**

- Check for any potential interference from other electronic devices.
- Ensure the battery is not low.

5. SPECIFICATIONS

Feature	Detail
Model Number	Easytry17957
Brand	Generic
Compatible Devices	Real Flame Electric Fireplace Heaters
Power Source	1 x CR2025 3V Battery
Color	Black
Item Weight	1.6 ounces
Package Dimensions	3 x 1 x 1 inches
Max Number of Supported Devices	1

6. SUPPORT

For any questions, concerns, or further assistance regarding this remote control, please contact the seller directly through the platform where the purchase was made. Please ensure your fireplace model is listed as compatible before contacting support.