

[manuals.plus](#) /

› [GOWENIC](#) /

› [GOWENIC 48MP 1080P Digital Camera \(Model GOWENICxs5ewhky70-12\) User Manual](#)

GOWENIC GOWENICxs5ewhky70-12

GOWENIC 48MP 1080P Digital Camera User Manual

Model: GOWENICxs5ewhky70-12

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your GOWENIC 48MP 1080P Digital Camera. Please read this manual thoroughly before using the camera to ensure optimal performance and longevity.

2. WHAT'S INCLUDED

Verify that all items listed below are present in your package:

- Digital Camera
- Instruction Manual (this document)
- Charging Plug
- Charging Cable
- Storage Bag
- Wrist Strap
- Cleaning Cloth
- Battery



Figure 2.1: Included accessories with the GOWENIC Digital Camera. This image shows the camera, charging plug, charging cable, storage bag, wrist strap, cleaning cloth, and battery.

3. SETUP

3.1. Battery and Memory Card Installation

Before first use, ensure the battery is fully charged. Insert the battery and a compatible SD memory card (up to 128GB, not included) into the camera.

Your browser does not support the video tag.

Video 3.1: This video demonstrates the correct procedure for installing the battery and memory card into the GOWENIC Digital Camera. It shows opening the battery compartment, inserting the battery, and then inserting the memory card before closing the compartment.

3.2. Charging the Battery

Connect the camera to the charging plug using the provided charging cable. The charging indicator will illuminate. Once fully charged, disconnect the camera.

4. OPERATING THE CAMERA

4.1. Power On/Off

Press and hold the power button located on the top of the camera to turn it on or off.

4.2. Mode Selection

The camera supports various modes including Photo mode, Video mode, and Playback mode. Use the mode button (often labeled 'M' or a dedicated switch) to cycle through these options.

One click to produce the film
Support automatic sensitive, adaptive shooting mode
Electronic anti shaking
Get started easily



Figure 4.1: Front view of the camera, highlighting the lens and flash. The camera features a 48.0 Megapixel sensor and 16x powerful zoom.

4.3. Taking Photos

In Photo mode, frame your shot using the 2.4-inch display. The camera features automatic light sensitivity and adaptive shooting mode. Press the shutter button firmly to capture an image. The camera supports 48 megapixel photos and 16x digital zoom.



Figure 4.2: Rear view of the camera display, indicating 48MP resolution and 16X digital zoom capabilities. The display is a 2.4-inch IPS screen.

For distant subjects, utilize the 16x digital zoom. Adjust zoom using the W/T buttons (Wide/Telephoto) typically located near the shutter button.



HD 16x zoom lens

From far to close, high definition record every detail



Figure 4.3: This image illustrates the camera's 16x digital zoom, showing how it can capture details from a distance.

4.4. Recording Videos

Switch to Video mode. Press the shutter button to start recording. Press it again to stop. The camera records 1080P video output with electronic stabilization.



Figure 4.4: The camera display indicating Ultra HD video recording and stunning picture quality. This highlights the camera's video capabilities.

4.5. Playback Mode

In Playback mode, you can review your photos and videos. Use the directional buttons to navigate through your media. Press the OK button to play videos.

4.6. Menu Navigation

Press the Menu button to access camera settings. Use the directional buttons to navigate and the OK button to select options. Settings include ISO, white balance, and scene modes.

5. MAINTENANCE

5.1. Cleaning the Camera

Use the provided cleaning cloth to gently wipe the camera body and screen. For the lens, use a specialized lens cleaning solution and cloth to avoid scratches. Do not use harsh chemicals or abrasive materials.

5.2. Storage

When not in use, store the camera in the provided storage bag in a cool, dry place away from direct sunlight and extreme temperatures. Remove the battery if storing for extended periods.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Battery is depleted or incorrectly inserted.	Charge the battery fully. Ensure the battery is inserted correctly with the contacts aligned.
Images are blurry.	Insufficient light, camera shake, or dirty lens.	Ensure adequate lighting. Hold the camera steady or use a tripod. Clean the lens with a soft cloth.
Memory card error.	Card is full, corrupted, or incompatible.	Delete unnecessary files or use a new card. Format the card (this will erase all data). Ensure the card is up to 128GB and correctly inserted.
Video recording stops unexpectedly.	Memory card speed is too slow or card is full.	Use a higher-speed memory card (Class 10 or higher recommended). Ensure sufficient space on the card.

7. SPECIFICATIONS

Feature	Detail
Brand	GOWENIC
Model Name	GOWENICxs5ewhky70-12
Effective Still Resolution	48 MP
Video Resolution	1080p
Digital Zoom	16x
Screen Size	2.4 Inches
Display Type	LCD
Image Stabilization	Digital
Supported File Format	JPEG (Photo), AVI (Video)
Memory Storage Capacity	Up to 128 GB (SD Card)
Battery Type	Lithium Ion (700 Milliamp Hours)
Battery Average Life	150 minutes
Connectivity Technology	USB
Color	Star Black

8. WARRANTY AND SUPPORT

Your GOWENIC Digital Camera is covered by a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, service, or warranty claims, please contact GOWENIC customer service through their official website or the retailer where the product was purchased.

Keep your purchase receipt as proof of purchase for warranty purposes.

© 2026 GOWENIC. All rights reserved.