



[Manuals.plus](#) /

› [PJGCWB](#) /

› PJGCWB PD-702 Portable DVD Player User Manual

## PJGCWB PD-702

# PJGCWB Portable DVD Player User Manual

Model: PD-702

## INTRODUCTION

Thank you for choosing the PJGCWB PD-702 Portable DVD Player. This manual provides detailed instructions for the proper setup, operation, and maintenance of your device. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.



Image: The PJGCWB PD-702 Portable DVD Player with its screen open, displaying a scenic landscape.

## PACKAGE CONTENTS

Please check the package contents carefully upon unboxing. If any items are missing or damaged, contact customer support.

- 1 x DVD Player (PD-702)
- 1 x Remote Control
- 1 x Car Charger
- 1 x AC Power Adaptor
- 1 x 3-in-1 AV cable (male)
- 1 x User Manual

## Package Content

- DVD Player
- Remote control
- Use Manual
- Car Charger
- AC Adapter
- AV cable



Image: All items included in the PJGCWB PD-702 package, neatly laid out: the DVD player, remote control, car charger, AC power adapter, AV cable, and user manual.

## PRODUCT FEATURES

### Excellent Visual Experience

The PD-702 features a 7.5-inch eye protection screen with a resolution of 800\*480. The screen can rotate 270° and flip 180°, providing flexible viewing angles for various situations, including car use or personal viewing.

## Easily Swivel Screen



Image: A series of illustrations demonstrating the 270-degree rotation and 180-degree flip capabilities of the 7.5-inch swivel display screen.

### High Capacity Built-in Battery

Equipped with a high-quality rechargeable lithium battery, the player offers approximately 5 hours of continuous playback. It supports three power supply methods: battery power, car charger, and AC power adapter, allowing for versatile use anywhere.

### Supports Wide Range of Multimedia Formats

The PD-702 supports direct playback of various disc formats including CD, DVD, CD-R/RW, DVD-R/+R, DVD+RW/-RW, VCD, and SVCD. It is region-free. Additionally, it supports video formats like VOB, AVI, MPEG1, MPEG2, XVID; audio formats such as MP3, WMA, WAV; and image formats like JPG, JPEG via USB and SD card.

# Multiple DVD Formats



## DVD Formats:

DVD, DVD+R, DVD-R, DVD+RW, DVD-RW, CD, CD+R, CD-R, CD+RW, VCD, SVCD (Blu-Ray not Support)



## Video Formats:

VOB, AVI, MPEG1, MPEG2, XVID



## Audio Formats:

MP3, MWA



## Image Formats:

JPG, JPEG



Image: The portable DVD player surrounded by film strips and icons, illustrating its compatibility with multiple DVD, video, audio, and image formats.

## Easy Operation and Connectivity

The control panel features clear, easy-to-tap keys for volume, track navigation, and playback controls. It includes a built-in break-point memory function, resuming playback from where you left off. The player also offers USB, SD/MMC card slots, AUX out, AV out, AV in, and DC 9-12V input ports for extensive connectivity.

# Easy Operation

Turn on/off the player when press ON/OFF switch at right side



Image: A close-up view of the side of the PJGCWB PD-702, highlighting the USB port, SD/MMC card slot, AUX out, AV out, AV in, ON/OFF switch, and DC 9-12V input port.

## SETUP GUIDE

### Initial Charging

1. Before first use, fully charge the portable DVD player using the provided AC power adapter. Connect the adapter to the DC IN port on the player and plug it into a standard wall outlet.
2. The charging indicator light will typically show the charging status and turn off or change color when fully charged.

### Inserting a Disc

1. Gently open the disc cover.
2. Place the DVD or CD onto the spindle with the label side facing up. Ensure the disc is securely seated.
3. Close the disc cover firmly until it clicks.

## Connecting to External Devices (TV/Projector)

You can connect the PD-702 to a larger screen like a TV or projector using the included 3-in-1 AV cable.

1. Connect the yellow plug of the AV cable to the AV OUT (Video) port on the DVD player.
2. Connect the red and white plugs of the AV cable to the AV OUT (Audio R and L) ports on the DVD player.
3. Connect the corresponding yellow, red, and white RCA input ports on your TV or projector.
4. Select the correct AV input source on your TV or projector.

## Sync Playback to Larger TV

Enjoy the Time with Your Family by Connecting with RCA AV cable(Included)



Image: The portable DVD player connected to a large television screen via an RCA AV cable, showing the same video content on both screens, with a family watching.

## OPERATING INSTRUCTIONS

### Power On/Off

- To turn on the player, slide the ON/OFF switch located on the right side of the device to the 'ON' position.

- To turn off the player, slide the ON/OFF switch to the 'OFF' position.

## Basic Playback Controls

Use the control panel buttons or the remote control for playback functions:

- **Play/Pause:** Press the Play/Pause button to start or pause playback.
- **Stop:** Press the Stop button to stop playback.
- **Previous/Next:** Press the Previous or Next buttons to skip to the previous or next track/chapter.
- **Fast Forward/Rewind:** Press and hold the Fast Forward or Rewind buttons to scan through the content.

## Volume Control

Adjust the volume using the Volume Up (+) and Volume Down (-) buttons on the control panel or remote control.

## Using USB/SD Card

1. Insert a USB flash drive into the USB port or an SD/MMC card into the SD/MMC card slot.
2. The player will automatically detect the media and display the file browser.
3. Navigate through your files using the directional buttons and press Play/Enter to select and play content.

## Break-point Memory Function

The player features a break-point memory function. If you stop playback and turn off the device, it will resume from the last played position when turned on again.

## Using the Remote Control

The included remote control provides full functionality for operating the DVD player from a distance. Ensure the remote control has working batteries and is pointed towards the player's IR receiver.

## MAINTENANCE

### Cleaning

- Wipe the exterior of the player with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- For the disc lens, use a specialized DVD lens cleaner disc.

### Battery Care

- To prolong battery life, avoid fully discharging the battery frequently.
- If storing the player for an extended period, charge the battery to about 50% and recharge every few months.
- Do not expose the player to extreme temperatures.

### Storage

Store the player in a cool, dry place away from direct sunlight and excessive dust.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Player does not power on.	Battery is drained; Power adapter not connected or faulty; Power switch is OFF.	Charge the battery; Ensure power adapter is securely connected and working; Slide power switch to ON.
No disc playback.	Disc inserted incorrectly; Disc is dirty or scratched; Unsupported disc format.	Reinsert disc correctly; Clean or replace disc; Refer to supported formats.
No sound.	Volume is too low or muted; AV cable not connected properly.	Increase volume; Check AV cable connections.
No picture on external TV.	AV cable not connected properly; Incorrect input source selected on TV.	Check AV cable connections; Select correct AV input on TV.
Remote control not working.	Batteries are dead or inserted incorrectly; Obstruction between remote and player.	Replace batteries; Ensure correct polarity; Remove obstructions.

## SPECIFICATIONS

Feature	Detail
Model Number	PD-702
Screen Size	7.5 Inches (visible diagonal 8" / 20 cm)
Display Type	LCD
Screen Resolution	800*480
Swivel Angle	270° Rotation, 180° Flip
Battery Life	Approx. 5 hours
Supported Disc Formats	CD, DVD, CD-R/RW, DVD-R/+R, DVD+RW/-RW, VCD, SVCD (Not Blu-ray)
Supported Media Types	DVD, DVD-R/+R, DVD-RW/DVD+RW, SVCD, VCD, CD, CD-R/+R, CD-RW/+RW, MP3/WMA/WAV, JPEG
Connectivity	USB, SD/MMC Card, AUX out, AV out, AV in, DC 9-12V
Product Dimensions	11.54 x 8.82 x 2.83 inches
Item Weight	2.25 pounds
Manufacturer	PJGCWB
Country of Origin	China

## WARRANTY AND SUPPORT

PJGCWB provides a 12-month warranty for the PD-702 Portable DVD Player. This warranty covers manufacturing defects and issues arising from normal use.

For any questions, technical support, or warranty claims, please contact PJGCWB customer service. You can typically reach support through the Amazon message system or the after-sales mailbox provided with your purchase documentation. Our team is available 24/7 to assist you and ensure a satisfied buying experience.