

ThruNite Archer Pro V2 Red CW

ThruNite Archer Pro V2 EDC Flashlight User Manual

Model: Archer Pro V2 Red CW

INTRODUCTION

Thank you for choosing the ThruNite Archer Pro V2 EDC Flashlight. This compact and powerful penlight is designed for everyday carry, offering high performance and convenient USB-C recharging. It is ideal for camping, outdoor activities, emergencies, and general utility. Please read this manual carefully before use to ensure proper operation and maintenance.

WHAT'S IN THE BOX

- Archer Pro Cool White Flashlight x 1
- USB-C Charging Cable x 1
- Pocket Clip x 1
- Battery (included)

Archer Pro V2 VS Archer Pro



Figure 1: Package Contents - ThruNite Archer Pro V2 Flashlight, USB-C Charging Cable, and User Manual.

SETUP

Initial Charge

Before first use, fully charge the flashlight. The Archer Pro V2 features an integrated Type-C charging interface.

1. Locate the USB-C charging port by screwing the head of the flashlight forward.
2. Connect the provided USB-C charging cable to the flashlight and a compatible USB power source (e.g., wall adapter, power bank, computer USB port).
3. The indicator light will show charging status (refer to the flashlight's specific indicator behavior for full details, typically red for charging, green for full).
4. Once fully charged, disconnect the cable and screw the head back down to seal the port.

USB-C Charging Cable



Figure 2: USB-C Charging - Connect the cable to the flashlight's hidden port for convenient recharging.

Attaching the Pocket Clip

The Archer Pro V2 comes with an upgraded dual-direction pocket clip for versatile carrying options.

- Slide the pocket clip onto the flashlight body in your preferred orientation (e.g., for hat brim, backpack strap, or pocket carry).
- Ensure the clip is securely seated in the designated groove.



High Performance CW LED



Stepless Dimming



Figure 3: Dual-Direction Pocket Clip - Easily attach the flashlight to various items for convenient access.

OPERATING INSTRUCTIONS

Basic Operation (Tail Switch)

The Archer Pro V2 utilizes a single tail switch for all operations.

- **Turn ON/OFF:** Click the tail switch to turn the light on or off.
- **Change Modes:** When the light is unlocked and off, press and hold the tail switch to enter Firefly mode. From Firefly mode, press and hold again to re-enter lockout mode. When the light is on, press and hold the tail switch to cycle through brightness levels (Infinity Low to Infinity High). Release the switch at your desired brightness.
- **Direct Turbo:** Double-click the tail switch from any mode (on or off) to instantly activate Turbo mode.
- **Direct Strobe:** Triple-click the tail switch from any mode (on or off) to activate Strobe mode.

TACTICAL TAIL SWITCH



Figure 4: Tactical Tail Switch - Easy access to Turbo and Strobe modes with simple clicks.

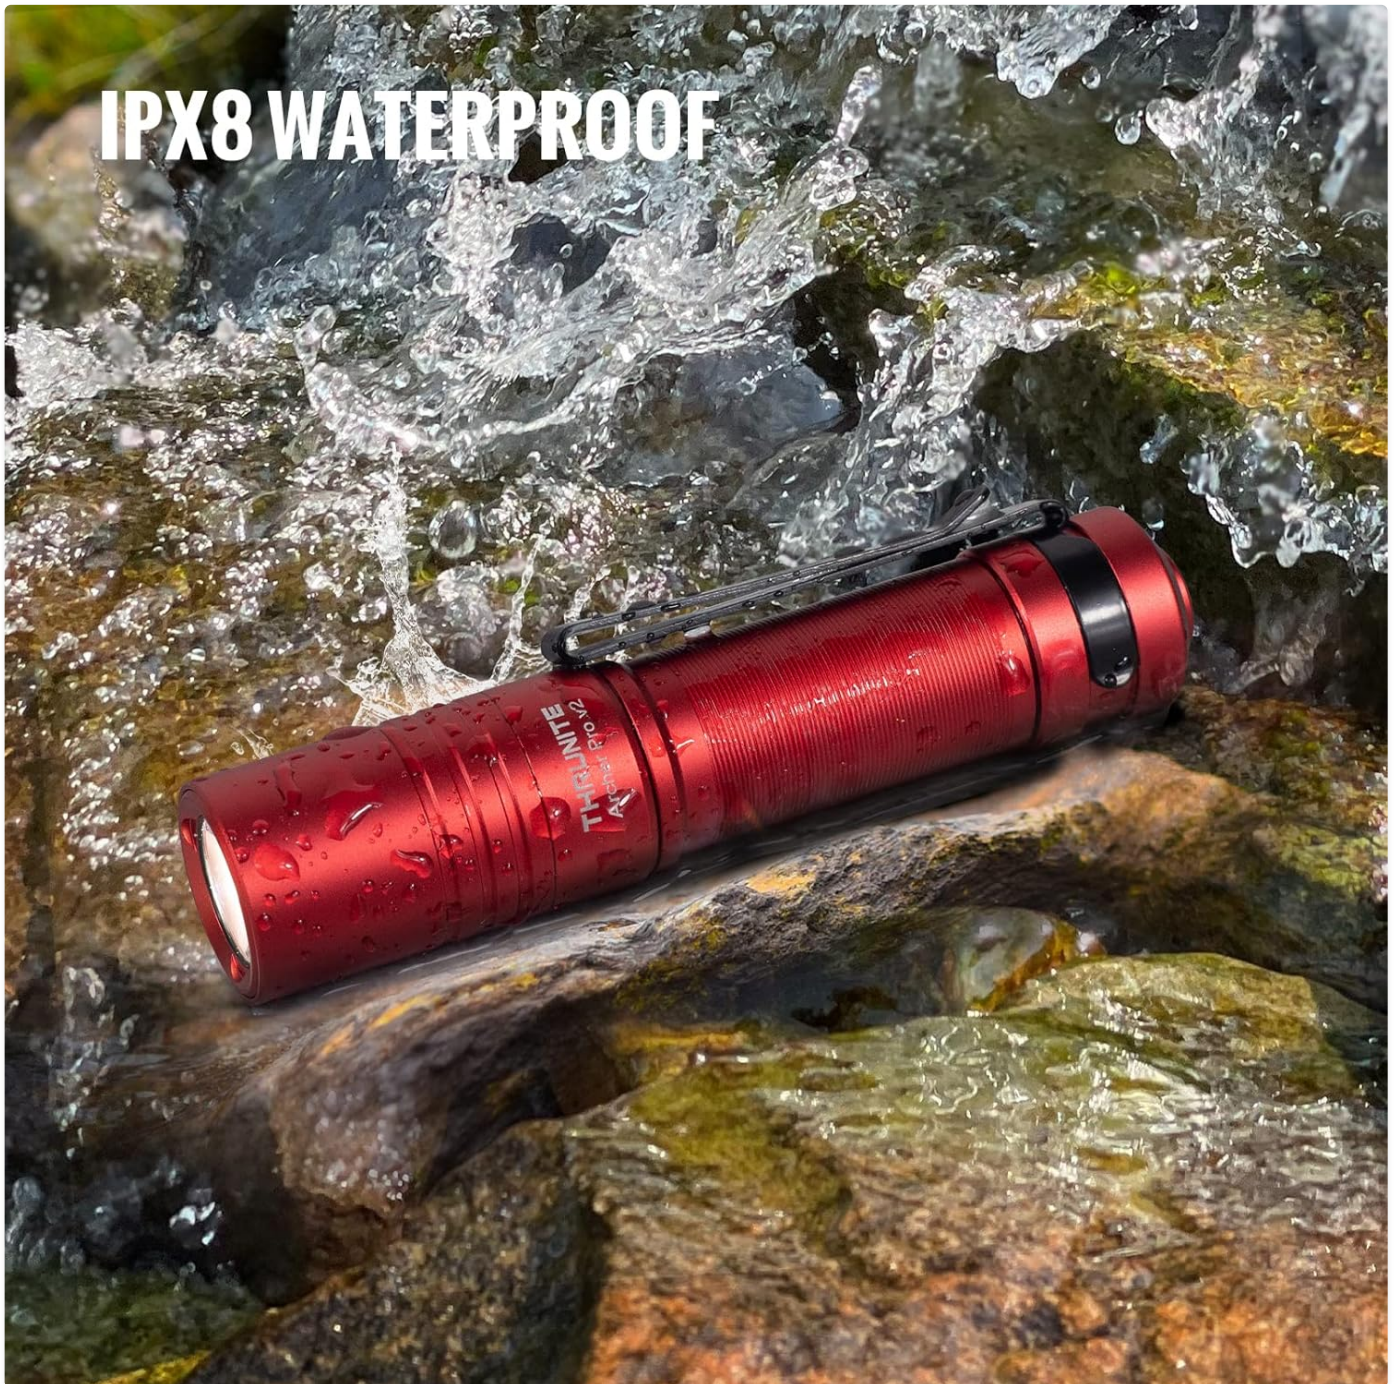


Figure 5: Stepless Dimming - Adjust brightness smoothly to suit your needs.

Lock/Unlock Mode

The lockout mode prevents accidental activation, conserving battery and preventing unintended light emission.

- **To Enter Lockout:** With the light off, press and hold the tail switch until the light enters Firefly mode, then continue holding until it flashes twice very dimly. Release the switch. The flashlight is now in lockout mode. A click of the tail switch will result in a flash to indicate it's locked.
- **To Exit Lockout:** Press and hold the tail switch until it flashes once dimly. Release the switch. Then, press and release the button again to turn it off. Finally, press the button again to turn the light on and exit lockout mode.

MAINTENANCE

- Keep the flashlight clean, especially the lens and charging port area. Use a soft, clean cloth.
- Avoid dropping the flashlight or subjecting it to severe impacts.
- Store the flashlight in a cool, dry place when not in use for extended periods.

- Regularly charge the battery to maintain its health, even if not frequently used.



Figure 6: IPX8 Waterproof - The flashlight is designed to withstand immersion in water, but proper maintenance is still recommended.

TROUBLESHOOTING

Light Not Turning On

- Ensure the battery is charged. Connect the flashlight to a USB-C charger and check the indicator light.
- Check if the flashlight is in lockout mode. Refer to the "Lock/Unlock Mode" section for instructions on exiting lockout.
- Verify that the head of the flashlight is screwed down tightly to ensure proper electrical contact.

Inconsistent Brightness or Flickering

- This may indicate a low battery. Recharge the flashlight fully.
- Ensure the tail switch is clean and free of debris.

If problems persist, please refer to the Warranty & Support section for contact information.

SPECIFICATIONS

Feature	Value
Brand	ThruNite
Model	Archer Pro V2 Red CW
Max Lumens	950 Lumens
Beam Distance	Up to 187 Meters
Power Source	Battery Powered (1 Lithium Ion battery included)
Charging Interface	USB-C
Material	Aluminum Alloy
Item Weight	2.29 Ounces
Product Dimensions	0.79"D x 0.79"W x 3.67"H
Water Resistance Level	IPX8 Waterproof
Special Features	High Power, Adjustable Light Modes, Impact Resistant, Non Slip Grip, Rechargeable



Figure 7: Product Specifications Comparison - Key features and dimensions of the Archer Pro V2.



Figure 8: Performance Data - Detailed output and runtime specifications for various modes.

WARRANTY & SUPPORT

ThruNite is committed to providing high-quality products and excellent customer service. If you encounter any issues or have questions regarding your Archer Pro V2 flashlight, please do not hesitate to contact ThruNite customer support. For support, please visit the official ThruNite website or contact their customer service directly. Contact information can typically be found on the product packaging or their official website.

Note: As per product information, if any problems arise, please contact the seller directly for assistance.

