

[Manuals.plus](#) /

> [VanSmaGo](#) /

> VanSmaGo Portable Handheld Mini Fan Instruction Manual

VanSmaGo F33

VanSmaGo Portable Handheld Mini Fan

Model: F33

1. INTRODUCTION

Thank you for choosing the VanSmaGo Portable Handheld Mini Fan. This compact and versatile fan is designed to provide personal cooling wherever you go, whether for travel, camping, outdoor activities, home, or office use. Its lightweight design, adjustable speeds, and rechargeable battery make it an ideal companion for staying cool.



Figure 1.1: VanSmaGo F33 Portable Handheld Mini Fans (Blue, Purple, Powder)

2. PRODUCT FEATURES

- **Adjustable Airflow:** Features 3 distinct speed settings (Sleeping, Natural, Strong wind) to suit various cooling needs.
- **Long-lasting Battery:** Equipped with a high-performance battery, allowing use while charging for extended cooling.
- **Quiet Operation:** Operates at a low noise level of 15-40 decibels, ensuring minimal disturbance during use.
- **Compact and Portable:** Measures H13*W6*D4 cm (5.2*2.5*1.6 inches) and weighs only 86 grams (0.2 pounds), making it easy to carry in a bag or pocket.
- **Versatile Design:** Features a 180° adjustable head and can be used as a handheld or neck fan with the included lanyard.
- **Simple Control:** Operated by a single push button for ease of use.



Figure 2.1: Fan Speed Settings and Quiet Operation

3. PACKAGE CONTENTS

Please verify that all items are present in your package:

- VanSmaGo F33 Fan Body
- Lanyard
- USB Charging Cable



Figure 3.1: Package Contents

4. SETUP

Before first use, it is recommended to fully charge the fan's battery.

1. **Charge the Fan:** Connect the provided USB charging cable to the fan's charging port and a suitable USB power source (e.g., computer, wall adapter). The charging indicator light will show the charging status.
2. **Attach Lanyard (Optional):** If desired, attach the lanyard to the designated loop on the fan for convenient neck-wearing.

5. OPERATING INSTRUCTIONS

The VanSmaGo F33 Mini Fan is operated using a single button.

1. **Power On/Adjust Speed:** Press the power button once to turn on the fan at the lowest speed (Sleeping wind). Each subsequent press will cycle through the speed settings: Natural wind, Strong wind.
2. **Power Off:** After the Strong wind setting, pressing the button again will turn the fan off. Alternatively, press and hold the button for a few seconds to turn off the fan from any speed setting.
3. **Adjust Head Angle:** The fan head can be manually adjusted up to 180 degrees to direct airflow as needed.



Figure 5.1: Fan Control Button and Airflow Design

6. CHARGING INSTRUCTIONS

The fan features a high-performance rechargeable battery.

- **Charging Time:** A full charge from 0% to 100% takes approximately 90 minutes.
- **Charging Indicator:** Observe the indicator light near the charging port for charging status. (Specific light behavior not provided, assume standard red/green or blinking/solid).
- **Use While Charging:** The fan can be used while it is connected to a power source and charging.

7. MAINTENANCE

To ensure the longevity and optimal performance of your VanSmaGo Mini Fan, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the exterior of the fan. Do not use harsh chemicals or abrasive materials. Ensure the fan is turned off before cleaning.
- **Storage:** When not in use for extended periods, store the fan in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To maintain battery health, avoid fully discharging the battery frequently. Charge the fan regularly, even if not in constant use.

8. TROUBLESHOOTING

If you encounter any issues with your VanSmaGo Mini Fan, please refer to the following common solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted.	Charge the fan using the provided USB cable.
Fan does not charge.	Charging cable or power source issue.	Ensure the USB cable is securely connected. Try a different USB port or power adapter.
Weak airflow.	Fan is on a low speed setting.	Press the power button to cycle to a higher speed setting.

Problem	Possible Cause	Solution
Unusual noise during operation.	Obstruction in fan blades or internal issue.	Turn off the fan and check for any visible obstructions. If the issue persists, contact customer support.

If the problem persists after trying these solutions, please contact VanSmaGo customer support for further assistance.

9. SPECIFICATIONS

Detailed technical specifications for the VanSmaGo F33 Portable Handheld Mini Fan:

Feature	Specification
Model Name	F33 (Folding handheld fan)
Dimensions (D x W x H)	2.5"D x 1.6"W x 5.2"H (6.35cm D x 4.06cm W x 13.2cm H)
Item Weight	3.2 ounces (86 grams)
Power Source	Battery Powered (1 Lithium Ion battery included)
Wattage	3 watts
Voltage	5 Volts
Number of Power Levels	3 (Sleeping, Natural, Strong)
Noise Level	20 dB (typical)
Speed	Up to 4500 RPM
Switch Type	Push Button
Reusability	Rechargeable
Indoor/Outdoor Usage	Outdoor
UPC	749799977024



Figure 9.1: Product Dimensions

10. WARRANTY AND SUPPORT

VanSmaGo is committed to providing high-quality products. While specific warranty details are not provided in this manual, please retain your proof of purchase for any potential warranty claims or support inquiries.

For technical support, troubleshooting assistance, or any questions regarding your VanSmaGo Portable Handheld Mini Fan, please contact VanSmaGo customer service through the retailer where you purchased the product or visit the official VanSmaGo store page on Amazon: [VanSmaGo Store](#).