

iseevy 8ch HDMI 1080P H.265 H.264 Video Encoder

ISEEVY 8ch HDMI 1080P H.265 H.264 Video Encoder User Manual

Model: 8ch HDMI 1080P H.265 H.264 Video Encoder | Brand: iseevy

1. INTRODUCTION

This user manual provides detailed instructions for the installation, operation, and maintenance of the ISEEVY 8ch HDMI 1080P H.265 H.264 Video Encoder. This device is designed to convert HDMI video signals into IP streams, supporting various protocols for live streaming, IPTV, and broadcast applications. Please read this manual thoroughly before using the product to ensure proper functionality and to prevent damage.

2. PRODUCT OVERVIEW

2.1 Key Features

- Supports 8 channels of 1080P HDMI video input.
- Advanced H.265 and H.264 video encoding (high/main/baseline profile).
- AAC/MP3 audio encoding.
- Supports multiple streaming protocols: RTMP, RTMPS, RTSP, UDP, RTP, HTTP, FLV, HLS, TS, Multicast, Unicast, SRT.
- Each channel supports up to 2 streams, with resolutions up to 1920x1080P at 60fps.
- Customizable logo, text, or fly text watermark for each channel.

2.2 Product Appearance



Figure 2.2.1: Front view of the ISEEVY 8ch HDMI Video Encoder, showing the 'Full HD Video Encoder' label and the HDMI input ports.

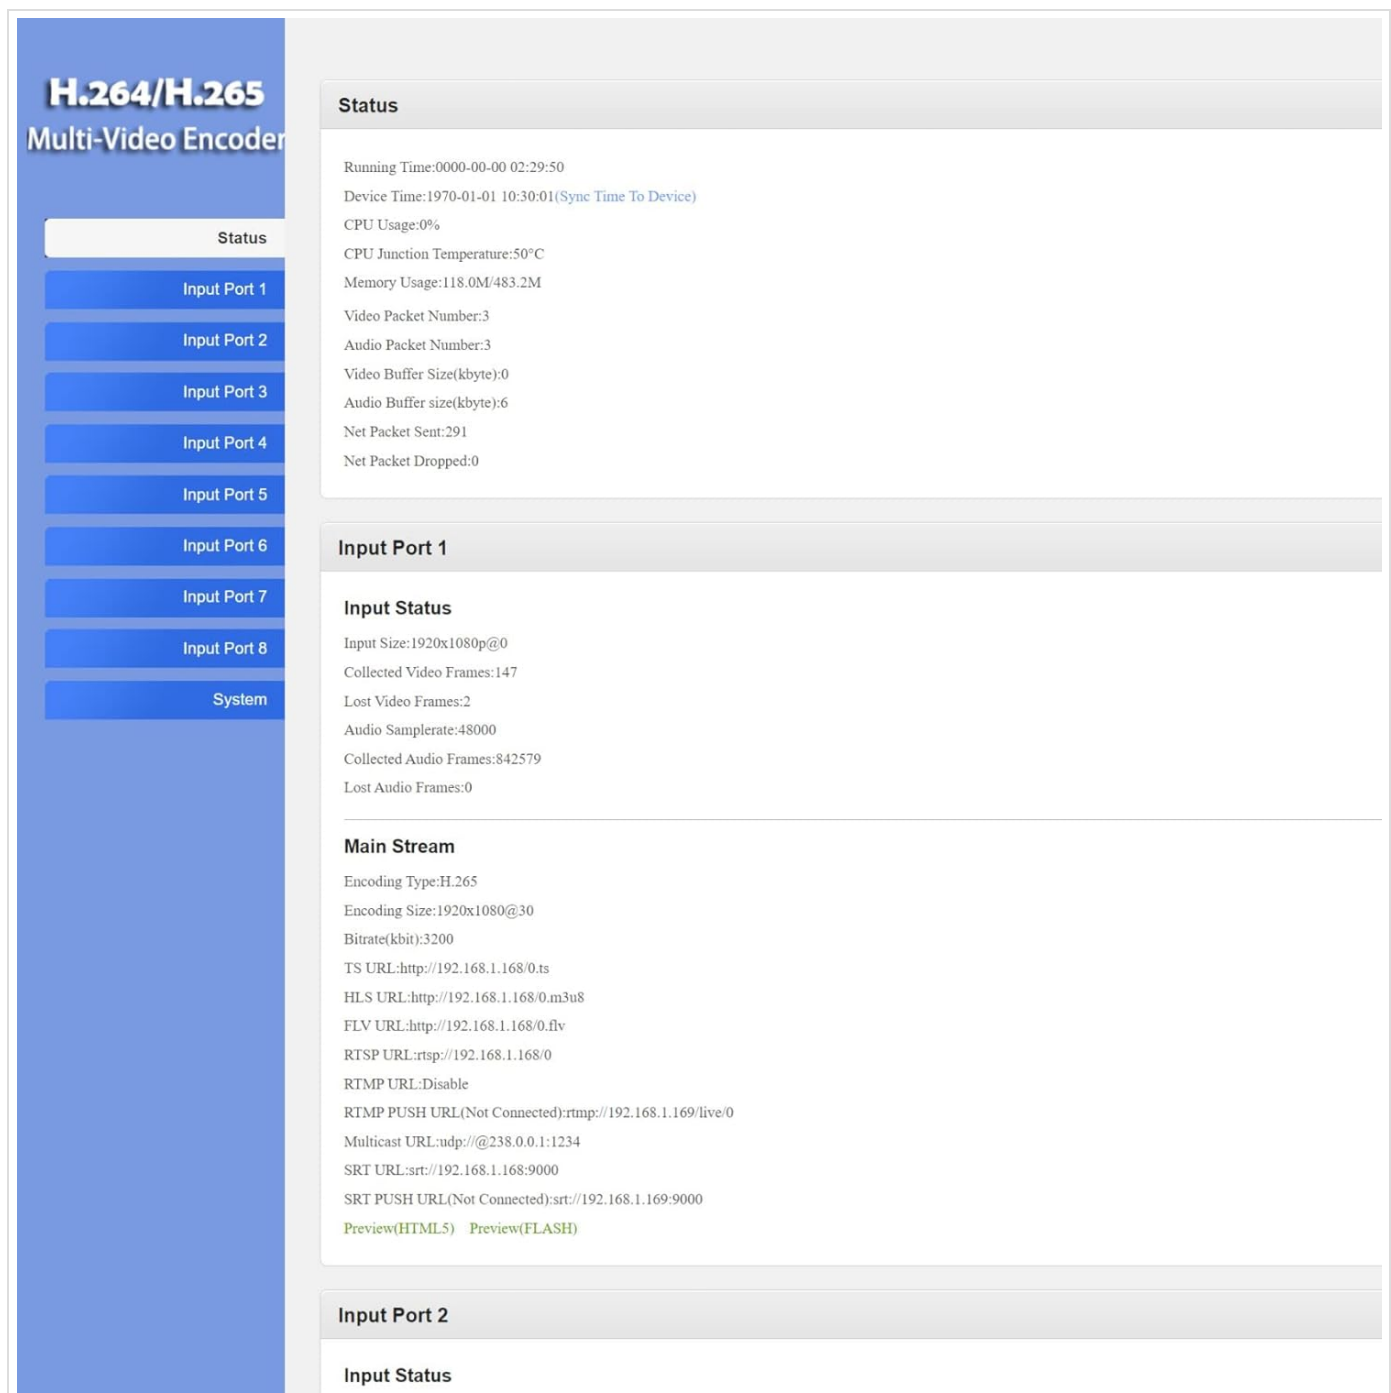


Figure 2.2.2: Rear view of the ISEEVY 8ch HDMI Video Encoder, displaying eight HDMI input ports, a LAN port, and a DC 12V power input.

2.3 Package Contents

- ISEEVY 8ch HDMI Video Encoder Unit
- Power Adapter (DC 12V)
- User Manual (this document)
- Ethernet Cable

3. SETUP

3.1 Physical Connections

1. **Connect HDMI Sources:** Connect up to eight HDMI video sources (e.g., cameras, DVD players, computers) to the HDMI input ports on the rear of the encoder using standard HDMI cables.
2. **Connect to Network:** Connect the encoder's LAN port to your network router or switch using the provided Ethernet cable.

Ensure your network provides DHCP or assign a static IP address later.

3. **Connect Power:** Plug the DC 12V power adapter into the encoder's DC 12V input port and then into a power outlet. The device will power on automatically.

3.2 Network Configuration Overview

The encoder requires a network connection to stream video. It can obtain an IP address automatically via DHCP or be configured with a static IP. For initial setup, it is recommended to connect it to a network with DHCP enabled.

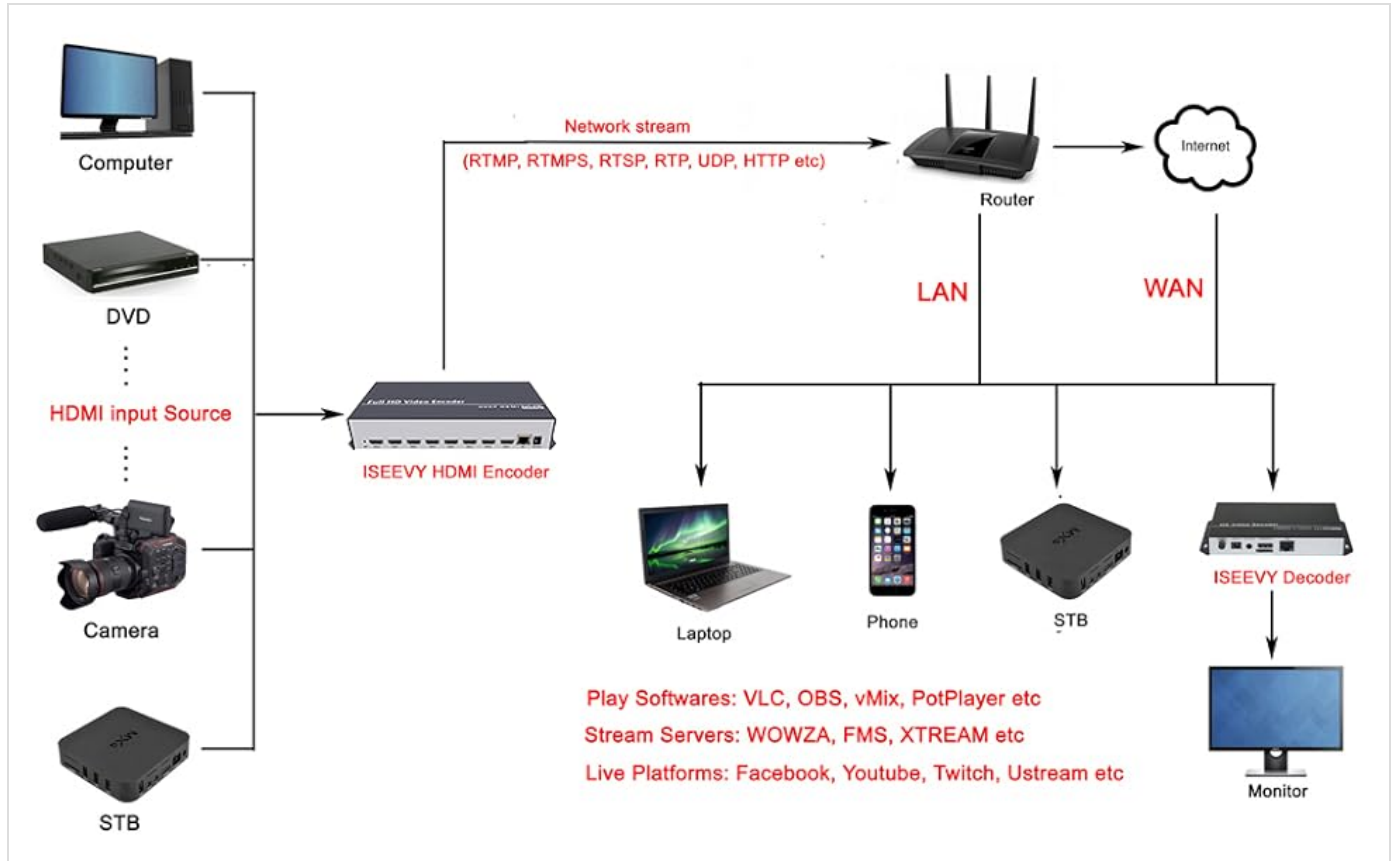


Figure 3.2.1: Typical network setup for the ISEEVY HDMI Encoder, illustrating its connection to a router and various playback devices and platforms.

4. OPERATING INSTRUCTIONS

4.1 Web Interface Access

1. **Find IP Address:** If your network has DHCP, the encoder will automatically obtain an IP address. You can find this IP address using an IP scanner tool on your network or by checking your router's connected devices list. The default IP address is often 192.168.1.169 if DHCP is not available.
2. **Access Web Interface:** Open a web browser (e.g., Chrome, Firefox) on a computer connected to the same network as the encoder. Enter the encoder's IP address into the browser's address bar and press Enter.
3. **Login:** The default username is **admin** and the default password is **admin**. It is highly recommended to change the password after the first login for security.

4.2 Configuring Input and Stream Settings

Once logged into the web interface, you can configure each HDMI input and its corresponding output streams.

H.264/H.265

Multi-Video Encoder

Status

Input Port 1

Encoder

Main stream

Substream

OSD

Main stream

Substream

LOGO upload

Video

Audio

Input Port 2

Input Port 3

Input Port 4

Input Port 5

Input Port 6

Input Port 7

Input Port 8

System

Main stream

Encoding Type: H.265

FPS: 30 [5-60]

GOP: 30 [5-300]

Bitrate(kbit): 3200 [32-32000]

Image Quality Range: Lower~Best

Encoded size: same as the input

Bitrate control: vbr

TS URL: /0.ts Enable

HLS URL: /0.m3u8 Enable

FLV URL: /0.flv Enable

RTSP URL: /0 Enable

RTMP URL: /0 Disable

RTMP(S)/RTSP PUSH URL: rtmp://192.168.1.169/live/0 Enable

Multicast IP: 238.0.0.1 Enable

Multicast port: 1234 [1-65535]

SRT URL Port: 9000 Enable

SRT PUSH URL: srt://192.168.1.169:9000 Enable

SRT Encryption Password: 0123456789 Disable

Apply

Figure 4.2.1: Web interface 'Status' page for Input Port 1, displaying current input resolution, frame rate, and stream URLs.

- Select Input:** On the left navigation panel, select the desired input port (e.g., "Input Port 1").
- Encoder Settings:** Navigate to the "Encoder" or "Main stream" section for the selected input. Here you can adjust:
 - Encoding Type:** H.265 or H.264.
 - FPS (Frames Per Second):** Typically 30 or 60.
 - Bitrate (kbit/s):** Adjust based on desired quality and network bandwidth.
 - Resolution:** Output resolution for the stream.
 - Protocol URLs:** Configure RTMP, RTSP, HLS, FLV, TS, and SRT URLs for streaming.

H.264/H.265

Multi-Video Encoder

Status

Input Port 1

Input Port 2

Input Port 3

Input Port 4

Input Port 5

Input Port 6

Input Port 7

Input Port 8

System

Network

Advanced

Change Password

Upgrade and Backup

Reboot

Schedule Reboot

Reset

Language: English

Advanced

EDID: 0.Default(1080P60)

Video Only: Disable

Audio Only: Disable

Deinterlaced: Bottom Only

Hls Splitter Time(s): 10 [3-20]

Hls Number: 5 [3-20]

SRT Latency(ms): 150 [1-10000]

SRT Bandwidth(KByte, 0-nolimit): 0 [0-102400]

TS muxer: Compatible with FFmpeg

Net Drop Threshold: 5000 [50-50000]

TS once pack: 7 [3-128]

ts_transport_stream_id: 101 [1-65535]

ts_pmt_start_pid: 480 [16-7936]

ts_start_pid: 481 [32-3840]

ts_tables_version: 6 [0-31]

ts_service_name: Live

ts_service_provider: Encoder

TS Empty Packet: No Insert

TS/RTSP password enable: Disable

HTTP No Password: Disable

Telnet Service: Enable

Onvif Service: Enable

RTSP Default Stream: Main Stream

Vmix Compatible: Disable

TS OVER RTSP: ES

Multicast type: UDP

Enable SAP: Enable

UDP TTL: 64 [1-254]

UDP SOCKET_BUF_SIZE: 20971520 [0-20971520]

Slice split enable: Disable

Slice size: 1024 [128-65535]

MIN_QP: 5 [1-35]

MAX_QP: 42 [MIN_QP-50]

SAR(H.264 Only): Disable

Contrast improve: 8 [0-63]

Image enhance: 8 [0-16]

Y space filter: 0 [0-255]

Y time filter: 0 [0-63]

C space filter: 0 [0-255]

C time filter: 0 [0-32]

Apply

Figure 4.2.2: Web interface 'Main stream' configuration page, allowing adjustment of encoding parameters like FPS, Bitrate, and various protocol URLs.

- Audio Settings:** Navigate to the "Audio" section to configure audio input, sampling rate, encoder type (AAC/MP3), and bitrate.
- OSD (On-Screen Display):** In the "OSD" section, you can enable and configure text or image overlays (watermarks) for your streams.
- Advanced Settings:** The "System" > "Advanced" section provides fine-tuning options for video processing, network settings, and more.

H.264/H.265

Multi-Video Encoder

Status

Input Port 1

Encoder

Main stream

Substream

OSD

Main stream

Substream

LOGO upload

Video

Audio

Input Port 2

Input Port 3

Input Port 4

Input Port 5

Input Port 6

Input Port 7

Input Port 8

System

Audio

Audio Input: HDMI

Sampling Rate: Same as input sample rate

Encoder: AAC

Audio Channel: L+R

Bitrate: 128000 [48000~320000]

Digital Volume: 0 [-50~50]

G711A Over UTP: Enable

ONVIF Audio

G711A Over RTSP: Disable

G711: G711A

Apply

Figure 4.2.3: Web interface 'Advanced' settings page, offering detailed configuration options for video, network, and system parameters.

4.3 Live Streaming Platforms and Software Compatibility

The encoder supports various protocols, making it compatible with a wide range of streaming platforms and playback software.



Figure 4.3.1: Examples of compatible live streaming platforms, including Twitch, Facebook Live, YouTube, and Vimeo.



Figure 4.3.2: Examples of compatible playback and streaming software, such as OBS, VLC Player, and FFmpeg.

5. MAINTENANCE

5.1 Cleaning

- Ensure the device is powered off and unplugged before cleaning.
- Use a soft, dry cloth to wipe the exterior of the encoder.
- Do not use liquid cleaners, aerosols, or solvents, as they may damage the device.

5.2 Firmware Updates

Periodically check the manufacturer's website for firmware updates. Firmware updates can provide new features, performance improvements, and bug fixes. Follow the instructions provided with the firmware update package carefully to avoid damaging the device.

5.3 Storage

When not in use for extended periods, store the encoder in a cool, dry place away from direct sunlight and extreme temperatures. Keep it in its original packaging or a protective case to prevent dust accumulation and physical damage.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with the ISEEVY 8ch HDMI Video Encoder.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No video output/stream	No HDMI input signal	Check HDMI cable connections and ensure the source device is powered on and outputting video.
No video output/stream	Incorrect stream settings	Verify encoding type, resolution, and bitrate settings in the web interface. Ensure protocol URLs are correct.
Cannot access web interface	Incorrect IP address or network issue	Ensure the encoder is connected to the network. Verify the IP address using an IP scanner. Check network cable. Try resetting the encoder.
Stream buffering or poor quality	Insufficient network bandwidth or high bitrate	Reduce the stream bitrate in the web interface. Check your network's upload speed. Ensure no other devices are saturating the network.
Audio issues (no audio, distorted audio)	Incorrect audio settings or source issue	Verify audio input and encoding settings in the web interface. Ensure the HDMI source is providing audio.

7. SPECIFICATIONS


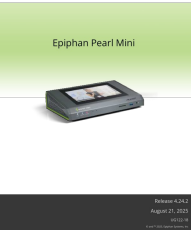




Detailed technical specifications for the ISEEVY 8ch HDMI Video Encoder.

Feature	Detail
Brand	iseevy
Model	8ch HDMI 1080P H.265 H.264 Video Encoder
Input	8 x HDMI (1080P)
Video Encoding	H.265, H.264 (High/Main/Baseline Profile)
Audio Encoding	AAC, MP3
Output Resolution	Up to 1920x1080P @ 60fps
Streaming Protocols	RTMP, RTMPS, RTSP, UDP, RTP, HTTP, FLV, HLS, TS, Multicast, Unicast, SRT
Network Interface	1 x RJ45 Ethernet Port
Power Supply	DC 12V
Product Dimensions	9.06 x 5.91 x 1.73 inches (23 x 15 x 4.4 cm)
Weight	1.72 Pounds (0.78 kg)
Manufacturer	ISEEVY Limited

8. WARRANTY AND SUPPORT

ISEEVY products are designed for reliability and performance. For warranty information and technical support, please refer to the official ISEEVY website or contact your authorized reseller. Keep your purchase receipt as proof of purchase for warranty claims. For the latest drivers, firmware, and support resources, please visit the official ISEEVY support page.

Related Documents - 8ch HDMI 1080P H.265 H.264 Video Encoder

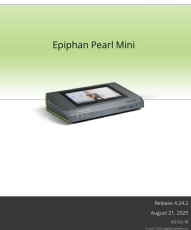 <p>User manual</p> <p>Version 1.0 (2023)</p>	<p>CORAL HEH Encoder User Manual and Configuration Guide</p> <p>Comprehensive user manual for the CORAL HEH encoder, detailing connection, network configuration, encoder functions, protocols, RTMP setup, system settings, and extended features. Includes troubleshooting and FAQ.</p>
 <p>epiphan video User Guide</p> <p>Epiphan Pearl Mini</p> <p>Release 1.0.1 August 21, 2023</p>	<p>Epiphan Pearl Mini User Guide</p> <p>Comprehensive user guide for the Epiphan Pearl Mini, a versatile live video production device. This guide covers setup, configuration, interfaces, features like streaming, recording, and integration with CMS platforms, as well as troubleshooting and maintenance.</p>
 <p>The HED-4KW User Manual</p> <p>Version 1.0 (2023)</p>	<p>HED-4KW Wireless HDMI Encoder User Manual DDMALL</p> <p>Comprehensive user manual for the DDMALL HED-4KW, a mini UHD 4K wireless HDMI encoder. Learn about its features, setup, network settings, streaming protocols (SRT, RTMP, HLS, RTSP, UDP), and troubleshooting for live broadcasting.</p>
 <p>epiphan video User Guide</p> <p>Epiphan Pearl Mini</p> <p>Release 1.0.1 August 21, 2023</p>	<p>Epiphan Pearl Mini User Guide - Setup, Features, and Specifications</p> <p>Comprehensive user guide for the Epiphan Pearl Mini, covering setup, configuration, streaming, recording, integration with CMS platforms, and technical specifications. Learn how to use its advanced video production features.</p>
 <p>epiphan video User Guide</p> <p>Epiphan Pearl Mini</p> <p>Release 1.0.1 August 21, 2023</p>	<p>Epiphan Pearl Mini User Guide Live Video Production and Streaming</p> <p>Comprehensive user guide for the Epiphan Pearl Mini, detailing its features for live video production, streaming, recording, and integration with content management systems. Covers setup, operation, technical specifications, and troubleshooting.</p>
 <p>epiphan video User Guide</p> <p>Epiphan Pearl Nexus</p> <p>Release 1.0.1 August 21, 2023</p>	<p>Epiphan Pearl Nexus User Guide: Comprehensive Guide to Live Video Production</p> <p>Detailed user guide for the Epiphan Pearl Nexus, covering setup, configuration, operation, integration with CMS platforms, and troubleshooting for professional live video production, streaming, and recording. Learn about its features, interfaces, and specifications.</p>

