

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [GIANTEX](#) /

› [GIANTEX 4-Panel Rolling Room Divider \(Model MY43056\) User Manual](#)

## GIANTEX MY43056

# GIANTEX 4-Panel Rolling Room Divider User Manual

Model: **MY43056** | Brand: **GIANTEX**

## INTRODUCTION

---

This manual provides instructions for the assembly, operation, and maintenance of your GIANTEX 4-Panel Rolling Room Divider, Model MY43056. This product is designed to offer flexible space division and privacy in various indoor environments. Please read these instructions carefully before assembly and use to ensure safe and proper operation.

## SAFETY INSTRUCTIONS

---

- Ensure all parts are present and undamaged before assembly. Do not use if any parts are missing or broken.
- Assemble the room divider on a soft, clean surface to prevent scratches.
- Keep children and pets away during assembly. Small parts may pose a choking hazard.
- Do not climb on or hang from the room divider. This product is not designed to support human weight.
- Always lock the wheels when the divider is in its desired position to prevent accidental movement.
- Avoid placing the divider in high-traffic areas where it could be easily knocked over.
- Do not expose the product to extreme temperatures or direct sunlight for prolonged periods, as this may damage the fabric or frame.

## PACKAGE CONTENTS

---

Please verify that all components listed below are included in your package:

- 4 x Fabric Panels

- Metal Frame Components (Vertical and Horizontal bars)
- 10 x Universal Wheels (with brakes)
- Connecting Buckles (for panel articulation)
- Assembly Hardware (screws, wrench)
- Instruction Manual

## ASSEMBLY INSTRUCTIONS

---

Follow these steps to assemble your GIANTEX 4-Panel Rolling Room Divider:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Identify each component using the parts list.
2. **Assemble Panel Frames:** For each panel, connect the vertical and horizontal metal frame components. Ensure all connections are secure.
3. **Attach Fabric Panels:** Slide the polyester fabric panels onto the assembled frames. Ensure the fabric is taut and evenly distributed.
4. **Connect Panels:** Use the provided connecting buckles to join the individual panels. These buckles allow for 360-degree rotation, offering flexible arrangement options.
5. **Install Wheels:** Attach the 10 universal wheels to the bottom of the frame bases. Ensure all wheels are securely fastened. Each wheel is equipped with a brake mechanism.



Figure 1: Detail of the 360-degree rotating connect buckle and folding options.

## 4-panel Rolling Room Divider



Figure 2: The room divider with its 10 lockable casters.

### OPERATING INSTRUCTIONS

- **Moving the Divider:** To move the room divider, unlock all 10 wheels by flipping their brake levers to the 'unlocked' position. Gently push or pull the divider to its desired location.
- **Securing the Divider:** Once the divider is in place, lock all 10 wheels by flipping their brake levers to the 'locked' position. This prevents unintended movement and ensures stability.
- **Folding and Configuration:** The panels are connected with 360-degree rotating buckles, allowing for various configurations such as L-shape, W-shape, or C-shape. To fold for storage, simply collapse the panels together.

### MAINTENANCE

- **Cleaning the Fabric:** The polyester fabric can be spot cleaned with a damp cloth and mild detergent. Avoid harsh chemicals or abrasive cleaners. Allow to air dry completely.
- **Cleaning the Frame:** Wipe the metal frame with a soft, damp cloth. Dry immediately to prevent rust.

- **Regular Inspection:** Periodically check all screws and connections to ensure they are tight. Re-tighten if necessary, especially after frequent movement.



Figure 3: Details of the durable polyester fabric, reinforced metal frame, and stable bottom base.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Divider is unstable or wobbly.	Loose screws or uneven floor surface.	Check and tighten all assembly screws. Ensure the divider is on a flat, level surface.
Difficulty moving the divider.	Wheels are locked or obstructed.	Ensure all wheel brakes are in the 'unlocked' position. Check for any debris obstructing the wheels.
Panels do not fold smoothly.	Connecting buckles are stiff or misaligned.	Gently manipulate the buckles to ensure they rotate freely. Apply a small amount of silicone spray if necessary (avoiding fabric).

## SPECIFICATIONS

---

- **Model:** MY43056
- **Brand:** GIANTEX
- **Dimensions (Fully Extended):** Approximately 225 cm (Length) x 173 cm (Height) x 0.03 cm (Panel Thickness)
- **Weight:** 8.86 kg
- **Number of Panels:** 4
- **Material:** Powder-coated Metal Frame, Polyester Fabric
- **Features:** Foldable, Rollable, 360-degree Rotating Connecting Buckles, 10 Lockable Universal Wheels
- **Color:** Beige



Figure 4: Dimensional overview of the room divider.

## WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the documentation included with your

purchase or contact GIANTEX customer service directly. Contact details can typically be found on the product packaging or the official GIANTEX website.

© 2026 GIANTEX. All rights reserved.  
This manual is subject to change without notice.