

[Manuals.plus](#) /

> [AECOJOY](#) /

> AECOJOY Outdoor Chaise Lounge Chairs (Model 19013) - Instruction Manual

AECOJOY 19013

AECOJOY Outdoor Chaise Lounge Chairs - Instruction Manual

Model: 19013
Brand: AECOJOY

INTRODUCTION

This instruction manual provides essential information for the safe assembly, operation, and maintenance of your AECOJOY Outdoor Chaise Lounge Chairs, Model 19013. Please read this manual thoroughly before assembly and use to ensure proper function and longevity of your product. Keep this manual for future reference.



Image: A pair of AECOJOY outdoor chaise lounge chairs with cushions, positioned by a poolside with a small side table. This image provides an overview of the product in an outdoor setting.

SAFETY INFORMATION

Please observe the following safety precautions to prevent injury and damage to the product:

- Ensure all parts are present and undamaged before beginning assembly. Do not use if any parts are missing or damaged.
- Assemble the chairs on a soft, clean surface to prevent scratches.
- Tighten all bolts and screws securely. Periodically check and re-tighten fasteners to ensure stability.
- Do not exceed the maximum weight capacity of **350 pounds** per chair.
- Keep children and pets away from the assembly area.
- Use caution when adjusting the backrest to avoid pinching fingers or other body parts.
- Place the chairs on a stable, level surface to prevent tipping.
- For prolonged outdoor use, especially in harsh weather, consider using a protective cover to extend the product's lifespan.

PACKAGE CONTENTS

Before assembly, verify that all components listed below are included in your package. If any parts are missing or damaged, please contact customer support.

Part	Description	Quantity (per chair)
Chair Frame Sections	Main structural components (backrest, seat, legs)	Various (as per assembly diagram)
Cushions	Padded cushions for seat and backrest	1 set
Hardware Kit	Bolts, washers, nuts, Allen wrench	1 set
Casters (Wheels)	Wheels for mobility	2

SETUP AND ASSEMBLY INSTRUCTIONS

Assembly is required for these chaise lounge chairs. It is recommended to have two people for easier assembly. Please follow the steps carefully.

1. **Unpack and Identify Parts:** Carefully remove all components from the packaging. Lay them out on a soft, clean surface to prevent damage. Refer to the parts list to ensure all items are present.
2. **Attach Main Frame Sections:** Begin by connecting the main frame sections as indicated in the assembly diagram. Ensure that bolt holes align correctly. *Note: Some holes may require slight force or adjustment to align perfectly.*
3. **Secure Armrests:** Attach the armrests to the main frame. Ensure all bolts are inserted and tightened.
4. **Install Casters (Wheels):** Attach the casters to the designated leg sections of the chair frame.
5. **Tighten All Fasteners:** Once all sections are loosely assembled, go back and securely tighten all bolts and screws using the provided Allen wrench. Do not overtighten.
6. **Place Cushions:** Position the padded cushions onto the chair frame. The cushions feature ties to secure them to the frame, preventing slippage.



Image: An exploded view diagram illustrating the components and assembly steps for the chaise lounge chair.

OPERATING INSTRUCTIONS

Your AECOJOY chaise lounge chairs are designed for comfort and versatility.

- **Adjusting the Backrest:** The backrest can be adjusted to **5 different positions**, from a high upright position to a flat reclining position. To adjust, lift the backrest slightly, then move it to the desired notch on the support bar. Ensure it is securely locked into place before use.
- **Cushion Usage:** The chairs come with thick padded cushions for enhanced comfort. These cushions can be easily removed if you prefer to use the chair without them, or for cleaning. Use the attached ties to secure the cushions to the chair frame.
- **Mobility:** The chairs are equipped with casters (wheels) on one end, allowing for easier movement and repositioning. Lift the opposite end of the chair and roll it to your desired location.

Why Choose AECOJOY Sunloungers?

OURS



- 100% Hand-woven Rattan



- Thick Iron Pipe Construction



- Enhanced Durability

VS

OTHERS



- No Seat Cushion



- Thin Gauge Conduit



- Poor Quality

Image: A detailed view of the adjustable backrest, showing the mechanism for selecting one of the five reclining positions.


MAINTENANCE

Proper maintenance will help preserve the appearance and extend the life of your chaise lounge chairs.

- **Frame Cleaning:** The PE rattan wicker and metal frame are weather-resistant. Clean regularly with a soft cloth, mild soap, and water. Rinse thoroughly and dry completely to prevent water spots and residue buildup. Avoid harsh chemicals or abrasive cleaners.
- **Cushion Care:** The cushion covers are removable and washable. Follow the care instructions on the cushion label. For general cleaning, spot clean with a mild soap solution and air dry. Store cushions indoors during inclement weather or when not in use for extended periods to prevent fading and mold.
- **Rust Prevention:** The metal frame has a galvanized protective layer to resist rust. To further prevent rust, especially in humid or coastal environments, ensure the frame is kept dry and consider applying a rust-inhibiting spray periodically.
- **Seasonal Storage:** During off-seasons or prolonged periods of non-use, store the chairs in a dry, protected area. Using a protective outdoor furniture cover is highly recommended.

MORE DETAILS ABOUT WORKMANSHIP

A Closer Look at Excellence

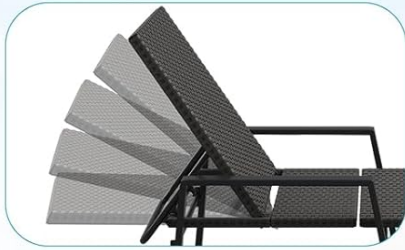

5 Adjustable Position to meet your different needs



Excellent Weight-bearing Capacity to ensure absolute safety



High-quality Material for stability and durability



Image: A close-up view highlighting the texture of the hand-woven rattan and the thickness of the cushion, demonstrating the material quality.

TROUBLESHOOTING

Refer to this section for solutions to common issues.

Problem	Possible Cause	Solution
Difficulty during assembly (holes not aligning)	Minor manufacturing variations or incorrect part orientation.	Apply gentle force to align holes. Ensure parts are oriented correctly as per the diagram. Loosely assemble all parts before fully tightening any bolts. If alignment is severely off, contact customer support.

Problem	Possible Cause	Solution
Chair feels unstable or wobbly	Loose fasteners or uneven placement.	Check and tighten all bolts and screws. Ensure the chair is placed on a flat, level surface.
Cushions fading or showing mold	Prolonged exposure to direct sunlight or moisture.	Store cushions indoors or under a protective cover when not in use or during harsh weather. Clean mold promptly with a mild bleach solution (test on an inconspicuous area first) or specialized fabric cleaner, then rinse and dry thoroughly.
Rust spots appearing on frame	Damage to protective layer or prolonged exposure to moisture.	Clean rust spots with a wire brush and apply a rust-inhibiting primer and paint. Keep the frame dry and use a protective cover.

SPECIFICATIONS

Feature	Detail
Brand	AECOJOY
Model Number	19013
Material	PE Rattan Wicker, Metal Frame
Product Dimensions (L x W x H)	76.8" x 26.6" x 38.2"
Weight Capacity	350 lbs (per chair)
Adjustable Positions	5
Included Components	Cushions, Casters (Wheels)
Indoor/Outdoor Usage	Outdoor
Assembly Required	Yes



Image: A detailed diagram illustrating the product dimensions and weight capacity of the chaise lounge chair.

WARRANTY AND CUSTOMER SUPPORT

AECOJOY provides a comprehensive **1-Year Warranty** covering defects in materials and workmanship for your chaise lounge chairs. This warranty begins from the date of purchase.

For any questions, concerns, or assistance with assembly, usage, or warranty claims, please contact our dedicated customer service team. We offer **24/7 Customer Support** to ensure a seamless experience.

Please have your model number (19013) and proof of purchase ready when contacting support.

Contact Information: support@aecojoy.com (Example - actual contact method may vary)

