



Manuals.plus /

› SoundPEATS /

› SoundPEATS Mini HS Wireless Earbuds Instruction Manual

SoundPEATS Mini HS

SoundPEATS Mini HS Wireless Earbuds Instruction Manual

Model: Mini HS

Brand: SoundPEATS

INTRODUCTION

Thank you for choosing SoundPEATS Mini HS Wireless Earbuds. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your new earbuds. Please read it carefully to ensure optimal performance and longevity of your device.



Image: SoundPEATS Mini HS Wireless Earbuds in their charging case.

SETUP

1. Charging

Before first use, fully charge both the earbuds and the charging case. The earbuds offer up to 8 hours of playtime on a single charge, and the charging case provides an additional 36 hours of playtime. The charging time for the case is approximately 2 hours.

- Place the earbuds into the charging case.
- Connect the charging case to a power source using a USB-C cable.
- The indicator lights on the case will show the charging status.

2. Pairing

The SoundPEATS Mini HS earbuds utilize Bluetooth 5.3 for a stable connection.

1. Open the charging case. The earbuds will automatically enter pairing mode.
2. On your device (smartphone, tablet, computer), enable Bluetooth.

3. Search for "SoundPEATS Mini HS" in the list of available Bluetooth devices.
4. Select it to connect. You will hear an audible confirmation once paired successfully.

3. Proper Fit

For optimal sound quality and comfort, especially for side sleepers, ensure the earbuds are inserted correctly. The earbuds are designed to fit snugly and flatly in the ear. Insert the earbud so that the main body is almost like a 'U' shape, with the ear tip entering the ear canal and the rubber stopper fitting comfortably into the curve of your ear to secure it in place.

OPERATING

1. Touch Controls

The SoundPEATS Mini HS earbuds feature intuitive touch controls. Specific functions can be customized via the SoundPEATS app.

- **Play/Pause:** Single tap on either earbud.
- **Volume Up/Down:** Tap and hold on the right/left earbud respectively.
- **Next/Previous Track:** Double tap on the right/left earbud respectively.
- **Answer/End Call:** Double tap on either earbud.
- **Reject Call:** Tap and hold on either earbud.
- **Activate Voice Assistant:** Triple tap on either earbud.

2. Special Features

- **Hi-Res Audio & LDAC Codec:** Experience enhanced audio detail and clarity with LDAC adaptive bitrate technology, supporting up to 96kHz sampling rate and 24-bit depth.
- **AI Noise Cancelling Algorithm:** The intelligent AI call noise cancellation algorithm analyzes speech signals to remove noise, ensuring clear communication in various environments.
- **Multipoint Connection:** Connect to two devices simultaneously and switch between them easily without re-pairing.
- **60ms Game Mode:** Reduce audio latency to as low as 60ms for a more immersive gaming and video playback experience.

3. SoundPEATS App

Download the customized SoundPEATS APP to fine-tune sound quality with custom EQ settings and access convenient features such as one-click reset, volume adjustment, disabling touch control, game mode switching, battery level checking, and software updates.

MAINTENANCE

To ensure the longevity and performance of your SoundPEATS Mini HS earbuds, follow these maintenance guidelines:

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- **Water Resistance:** The earbuds have an IPX4 water resistance rating, meaning they are resistant to splashing water from any direction. They are not designed for submersion in water. Avoid exposing them to heavy rain or swimming.
- **Storage:** Store the earbuds in their charging case when not in use to protect them and keep them charged. Avoid extreme temperatures.
- **Charging:** Use the provided USB-C cable for charging. Do not use damaged cables or chargers.

TROUBLESHOOTING

If you encounter issues with your SoundPEATS Mini HS earbuds, try the following solutions:

- **Earbuds not pairing/connecting:**
 - Ensure both earbuds are charged.
 - Place both earbuds back into the charging case, close the lid, then open it again to re-initiate pairing mode.
 - Forget "SoundPEATS Mini HS" from your device's Bluetooth list and attempt to re-pair.
 - Perform a one-click reset via the SoundPEATS app.
- **Poor sound quality:**
 - Ensure earbuds are properly seated in your ears for a good seal.
 - Clean ear tips and speaker mesh to remove any debris.
 - Adjust EQ settings in the SoundPEATS app.
- **Earbuds falling out:**
 - Ensure you are wearing them with the 'U' shape orientation as described in the Setup section for a secure fit.
- **Touch controls too sensitive/unresponsive:**
 - Adjust touch control sensitivity or disable specific functions via the SoundPEATS app.

SPECIFICATIONS

Feature	Specification
Model Name	Mini HS
Connectivity Technology	Wireless (Bluetooth 5.3)
Audio Codec	LDAC (Hi-Res Audio)
Noise Control	AI Noise Cancelling Mic
Battery Life (Earbuds)	Up to 8 hours
Battery Life (with Charging Case)	Up to 36 hours
Charging Time	2 Hours
Water Resistance Level	IPX4 (Water Resistant)
Control Type	Touch Control
Game Mode Latency	60 Milliseconds
Audio Driver Type	Dynamic Driver
Audio Driver Size	10 Millimeters
Bluetooth Range	10 Meters
Item Weight	4.6 ounces
Included Components	Charging case, SoundPEATS Mini HS Earbuds, User manual

WARRANTY & SUPPORT

SoundPEATS offers a 12-month warranty for its products. If you have any questions or require assistance with your SoundPEATS Mini HS earbuds, please contact SoundPEATS Customer Service.

How to Reach Us:

- Navigate to "Account Service" on the platform where you purchased the product.
- Go to "Order History".
- Find your order for the SoundPEATS Mini HS earbuds.
- Click on "Sold By" and then "Ask Question" to contact customer support directly.