

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› THOMSON /

› THOMSON THVC94BC User Manual

THOMSON THVC94BC

THOMSON THVC94BC User Manual

Comprehensive instructions for setup, operation, and maintenance.

1. INTRODUCTION

Thank you for choosing the THOMSON THVC94BC. This manual provides essential information for the safe and efficient use of your new video game accessory. Please read this manual thoroughly before using the device and keep it for future reference.

The THOMSON THVC94BC is designed to enhance your gaming experience. For optimal performance, follow the instructions carefully.

2. SAFETY INFORMATION

WARNING: To prevent fire or electric shock, do not expose this appliance to rain or moisture.

- Keep the device away from water and moisture.
- Do not attempt to disassemble or modify the device. This may result in damage, electric shock, or injury.
- Use only accessories specified by the manufacturer.
- Avoid exposing the device to extreme temperatures, direct sunlight, or excessive dust.
- Ensure proper ventilation around the device during use.
- If the device malfunctions, disconnect it immediately and contact customer support.

3. PACKAGE CONTENTS

Please check that all items are present in the package:

- THOMSON THVC94BC Unit
- User Manual (this document)
- *(Additional accessories may vary by region or specific product variant. Refer to product packaging for details.)*

4. PRODUCT OVERVIEW

The THOMSON THVC94BC is a versatile video game accessory designed for seamless integration with your gaming setup. Its ergonomic design ensures comfort during extended play sessions.

Key Features:

- Ergonomic design for comfortable use.
- Durable construction for long-lasting performance.
- Easy connectivity to compatible gaming systems.



Figure 1: Front view of the THOMSON THVC94BC unit. This image shows the general shape and primary controls of the device.

5. SETUP

Follow these steps to set up your THOMSON THVC94BC:

1. **Unpack the Device:** Carefully remove the THVC94BC from its packaging. Retain the packaging for future storage or transport.
2. **Connect to Gaming System:** Locate the appropriate port on your gaming console or PC. Connect the THVC94BC using the provided cable (if applicable) or follow wireless pairing instructions.
3. **Power On:** If the device requires external power, connect the power adapter to the device and then to a power outlet. Press the power button (if present) to turn on the device.
4. **System Recognition:** Your gaming system should automatically detect the THVC94BC. If not, refer to your gaming system's manual for accessory setup.

6. OPERATING INSTRUCTIONS

Once the THVC94BC is set up, you can begin using it with your compatible games.

6.1 Basic Operation

- **Button Functions:** Familiarize yourself with the buttons and controls on the THVC94BC. Their functions will typically be mapped within your game.
- **Movement/Input:** Use the primary input mechanisms (e.g., joystick, D-pad, motion sensors) to control in-game actions.
- **Feedback:** The device may provide haptic feedback or visual indicators during gameplay.

6.2 Advanced Features (if applicable)

Some games or systems may offer advanced customization for the THVC94BC. Refer to your game's settings or system preferences to configure:

- Button remapping
- Sensitivity adjustments
- Calibration (for motion-sensing devices)

7. MAINTENANCE

Proper care will ensure the longevity of your THOMSON THVC94BC.

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the device. Do not use liquid cleaners, aerosols, or solvents.
- **Storage:** When not in use, store the device in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Cable Care:** If applicable, avoid bending or twisting cables excessively. Disconnect by pulling the plug, not the cable itself.

8. TROUBLESHOOTING

If you encounter issues with your THVC94BC, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device not recognized by system.	Loose connection, incorrect port, driver issue.	<ul style="list-style-type: none"> • Ensure all cables are securely connected. • Try a different USB port or connection method. • Restart your gaming system. • Check for system updates or accessory drivers.
Buttons or controls unresponsive.	Game settings, calibration needed, internal fault.	<ul style="list-style-type: none"> • Verify game control settings. • Recalibrate the device if it supports calibration. • Test with another game or application.
Intermittent connection.	Interference, weak signal (wireless), faulty cable.	<ul style="list-style-type: none"> • Move closer to the receiver (for wireless). • Remove potential sources of interference. • Inspect cables for damage.

If the problem persists after trying these solutions, please contact THOMSON customer support.

9. SPECIFICATIONS

Feature	Detail
Model	THVC94BC
Brand	THOMSON
Dimensions (L x W x H)	50 x 50 x 28 cm
Weight	190 grams

Feature	Detail
ASIN	B0C25V8CLL
Release Date	June 1, 2019
Spare Parts Availability	Information not available

10. WARRANTY AND SUPPORT

THOMSON products are manufactured to the highest quality standards. For information regarding warranty coverage, please refer to the warranty card included with your product or visit the official THOMSON website. For technical support, troubleshooting assistance, or to inquire about spare parts, please contact THOMSON customer service. Contact details can typically be found on the product packaging or the official THOMSON website. Please have your product model (THVC94BC) and ASIN (B0C25V8CLL) ready when contacting support.

© 2024 THOMSON. All rights reserved.
This manual is subject to change without notice.