

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [SMETA](#) /

› [SMETA 13.8 Cu.Ft. Convertible Upright Freezer/Refrigerator \(Model: Upright freezer 507E\) Instruction Manual](#)

SMETA Upright freezer 507E

SMETA 13.8 Cu.Ft. Convertible Upright Freezer/Refrigerator Instruction Manual

Model: Upright freezer 507E

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your SMETA 13.8 Cu.Ft. Convertible Upright Freezer/Refrigerator. Please read these instructions thoroughly before installation and use, and retain them for future reference. This appliance offers the flexibility to function as either a freezer or a refrigerator, adapting to your storage needs.

13.8 Cu.Ft Freezer|Refrigerator

Compact Size & Large storage



Image: The SMETA 13.8 Cu.Ft. Convertible Upright Freezer/Refrigerator in a kitchen, highlighting its dimensions and internal storage capacity.



Image: A white SMETA 13.8 Cu.Ft. Upright Freezer in a kitchen environment, illustrating its aesthetic integration.

2. IMPORTANT SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury when using your appliance, follow these basic precautions:

- Read all instructions before using the appliance.
- Connect to a properly grounded outlet only.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in this manual.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Unplug the appliance before cleaning or performing any maintenance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

3. SETUP AND INSTALLATION

3.1 Unpacking and Initial Placement

Carefully remove all packaging materials. It is recommended to let the appliance stand upright for at least two hours before connecting it to power. This allows the refrigerant to settle, ensuring proper operation.

3.2 Location Requirements

Place the appliance on a flat, stable surface away from direct sunlight and heat sources (e.g., stove, heater). Ensure adequate air circulation around the unit. The dimensions are approximately 27.9" W x 29.5" D x 61.8" H. This model is designed to be garage-ready, meaning it can operate effectively in a wider range of ambient temperatures.

Garage Ready Freezer

Flexibility to switch between freezer and refrigerator depending on your needs



Image: The SMETA Upright Freezer positioned in a garage, illustrating its suitability for such environments.



Image: A split view showing the freezer in a garage and its illuminated interior, emphasizing its garage-ready design and internal lighting.

3.3 Leveling the Appliance

The appliance is equipped with adjustable feet. Use a level to ensure the unit is perfectly balanced. Proper leveling is crucial for efficient operation and to prevent excessive noise.



Adjustable Feet

Adapt to uneven ground



Removable Shelves

Organize space as needed



LED Soft Light

Easy to find things in the dark



Air-tight Seal

Ensure a constant temperature

Image: Close-up views of the adjustable feet, removable glass shelves, LED interior lighting, and the air-tight door seal.

3.4 Electrical Connection

Connect the appliance to a dedicated, grounded 110 Volt AC outlet. Do not use extension cords or adapter plugs. Ensure the power cord is not pinched or damaged.

3.5 Door Reversal

The door hinges are reversible, allowing you to change the door swing direction to suit your installation space. Refer to the detailed diagrams in the separate door reversal guide (if provided) for step-by-step instructions. This process typically involves removing the top hinge, transferring the door, and reattaching hinges on the opposite side.

4. OPERATING INSTRUCTIONS

4.1 Control Panel and Display

Your appliance features an intuitive LED temperature display and control buttons located on the door. This panel allows you to adjust settings and monitor the internal temperature.

Dual Mode Convertible

Easy to adjust and switch



Fruits & vegetables mode

Refrigerator: 35°F to 46°F



Meat

Freezer: -11°F to 10°F

Image: The digital control panel displaying temperature settings and options for switching between freezer and refrigerator modes.



Image: A detailed view of the temperature control zone on the freezer door, indicating various temperature settings.

4.2 Converting Modes (Freezer/Refrigerator)

This appliance offers dual convertible modes:

- **Freezer Mode:** Temperature range is -11°F to 10°F (-24°C to -12°C). Ideal for long-term storage of frozen foods.
- **Refrigerator Mode:** Temperature range is 35°F to 46°F (2°C to 8°C). Suitable for fresh foods, fruits, and vegetables.

To switch between modes, use the designated button on the control panel. Allow several hours for the appliance to reach the new desired temperature after conversion.

4.3 Temperature Adjustment

Use the up and down arrows on the control panel to set your desired temperature within the operating range of the selected mode. The LED display will show the current internal temperature.

4.4 Quick Freeze Mode

Activate the "Quick Freeze" mode to rapidly lower the internal temperature. This is useful when adding a large quantity of unfrozen food to the freezer, helping to preserve food quality. The mode will typically deactivate automatically after a set period or when the target temperature is reached.

4.5 Lock Control Button

The control panel features a lock button to prevent accidental changes to settings. Press and hold the lock button for a few seconds to activate or deactivate the lock function.



Image: Icons representing the door open warning alarm and the control panel lock feature.

4.6 Door Open Warning Alarm

An audible alarm will sound if the door is left open for an extended period, helping to prevent temperature fluctuations and energy waste.

4.7 Interior Lighting

The appliance is equipped with soft LED interior lighting, which illuminates automatically when the door is opened, making it easy to locate items.



Image: Icons illustrating the soft interior lighting and the powerful compressor cooling system.

5. MAINTENANCE

5.1 Frost-Free Operation

This appliance features a frost-free design, eliminating the need for manual defrosting. The automatic defrost system prevents ice buildup on the interior walls and evaporator coils.

Air-cooled & Frost-free

⊗ Frost

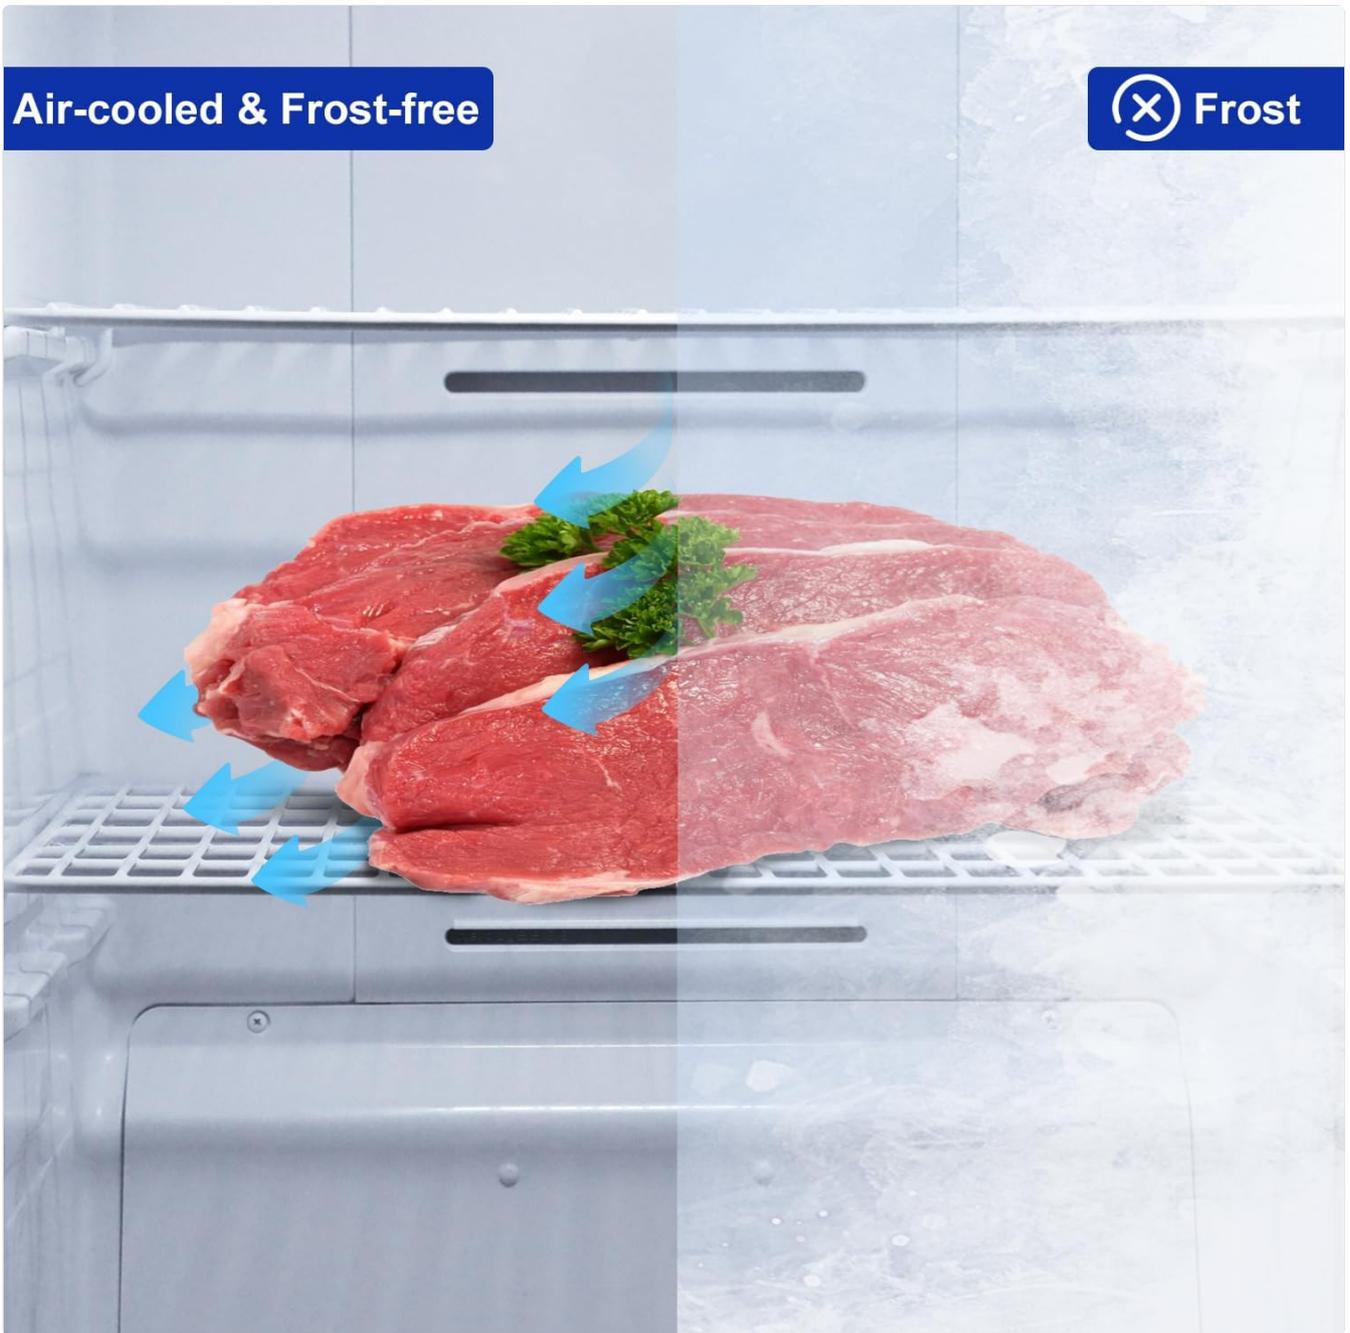


Image: A visual representation of the air-cooled and frost-free interior, showing how air circulates to prevent ice formation.



Image: Icons representing efficient air flow and the frost-free functionality.

5.2 Cleaning the Interior

Before cleaning, unplug the appliance. Clean the interior regularly with a solution of mild soap and warm water. Wipe dry thoroughly. Do not use abrasive cleaners, harsh chemicals, or scouring pads, as these can damage surfaces.

5.3 Cleaning the Exterior

Wipe the exterior surfaces with a soft cloth dampened with mild soap and water. For stainless steel surfaces (if applicable),

use a specialized stainless steel cleaner. Keep the door gasket clean to ensure a proper seal.

5.4 Power Outage Considerations

In case of a power outage, keep the door closed to maintain the internal temperature for as long as possible. Avoid opening the door unnecessarily. If the outage is prolonged, consider transferring perishable items to another cold storage unit.

6. TROUBLESHOOTING

Before contacting customer service, review the following common issues and solutions:

Problem	Possible Cause	Solution
Appliance does not operate	Not plugged in; circuit breaker tripped; power outage.	Ensure plug is secure; check circuit breaker; verify power supply.
Temperature is not cold enough	Door opened too frequently; warm food added; temperature setting too high; poor ventilation.	Minimize door openings; allow hot food to cool before storing; adjust temperature setting lower; ensure adequate space around unit.
Excessive noise	Appliance not level; objects vibrating against unit; normal compressor operation.	Adjust leveling feet; move objects away from unit; some operational noise is normal.
Door does not close properly	Appliance not level; door gasket dirty or damaged; food packages obstructing.	Level the appliance; clean or replace gasket; rearrange contents.

7. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	SMETA
Model Info	Upright freezer 507E
Item Weight	152.7 pounds
Product Dimensions	29.5"D x 27.9"W x 61.8"H
Capacity	13.8 Cubic Feet
Installation Type	Freestanding
Color	White
Voltage	110 Volts
Defrost System	Automatic (Frost-Free)
Door Hinges	Reversible
Door Material Type	Stainless Steel
Shelves	4 (Glass)
Certification	UL Certified

Feature	Detail
Noise Level	≤45dB
Refrigerant	R600A

8. WARRANTY AND SUPPORT

8.1 Limited Warranty

This SMETA appliance comes with a **12-month warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accident, alteration, neglect, improper installation, or unauthorized repair.

Please retain your proof of purchase for warranty claims.

8.2 Customer Support

For any questions, concerns, or warranty claims regarding your SMETA appliance, please contact our customer service team. Refer to your purchase documentation or the SMETA official website for the most current contact information.

When contacting support, please have your model number (Upright freezer 507E) and purchase date readily available.