

## Xufeng SH-797

# Xufeng SH-797 Digital Sports Watch User Manual

Model: SH-797

## INTRODUCTION

---

Thank you for choosing the Xufeng SH-797 Digital Sports Watch. This watch is designed for durability and functionality, featuring a robust rubber construction and water resistance. It includes essential functions such as time display, date, daily alarm, stopwatch, and backlight. Please read this manual carefully to understand how to operate and maintain your watch.



Image: The Xufeng SH-797 Digital Sports Watch worn on a wrist, displaying the current time and date.

## SETUP

---

### Initial Inspection

Upon unboxing, inspect the watch for any visible damage. Ensure all buttons are responsive. The watch comes with a pre-installed battery.

### Button Functions

The Xufeng SH-797 watch typically features four buttons. Their functions are generally as follows:

- **LIGHT:** Activates the backlight for visibility in low light conditions.
- **MODE/SEARCH:** Cycles through different modes (Time, Alarm, Stopwatch) and can be used to select settings.
- **START/+:** Starts/stops the stopwatch, or increases values during setting.
- **RESET/-:** Resets the stopwatch, or decreases values during setting.



Image: Side view of the watch, highlighting the control buttons for various functions.

## OPERATING INSTRUCTIONS

---

### Setting Time and Date

1. From the normal time display, press the **MODE/SEARCH** button repeatedly until the time setting mode is activated (usually indicated by flashing digits).
2. Use the **START/+** and **RESET/-** buttons to adjust the flashing digit (hours, minutes, year, month, day).
3. Press **MODE/SEARCH** again to move to the next setting.
4. Once all settings are complete, press **MODE/SEARCH** to exit the setting mode.

### Using the Alarm Function

1. Press the **MODE/SEARCH** button until you reach the Alarm mode.
2. Press and hold **MODE/SEARCH** to enter alarm setting mode (digits will flash).
3. Use **START/+** and **RESET/-** to set the desired alarm time.
4. Press **MODE/SEARCH** to confirm and exit.
5. To turn the alarm on/off, press **START/+** while in Alarm mode.

### Using the Stopwatch

1. Press the **MODE/SEARCH** button until you reach the Stopwatch mode.
2. Press **START/+** to begin timing.
3. Press **START/+** again to pause timing.
4. Press **RESET/-** to reset the stopwatch to zero.

## Backlight Operation

Press the **LIGHT** button to illuminate the display for a few seconds. This is useful in dark environments.

## Water Resistance Guidelines

The Xufeng SH-797 watch is water-resistant up to 25 meters. This means it is suitable for splashes, rain, and brief immersion in water. However, it is important to note the following:

- **Do not press buttons while the watch is submerged in water.** This can compromise the water seal.
- **Avoid exposure to hot water or steam.** Do not wear the watch during hot showers, baths, or in saunas, as steam can damage the internal protection and seals.
- After exposure to saltwater, rinse the watch with fresh water and dry it thoroughly.



Image: The watch submerged in water, demonstrating its water-resistant capability. The digital display remains clear.

## MAINTENANCE

---

### Cleaning Your Watch

To keep your watch in good condition, wipe it regularly with a soft, dry cloth. For stubborn dirt, use a slightly damp cloth and mild soap, then wipe dry immediately. Avoid using harsh chemicals or abrasive cleaners.

### Storage

When not in use, store your watch in a cool, dry place away from direct sunlight and extreme temperatures.

### Battery Replacement

When the display becomes dim or the watch stops functioning, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure the water resistance seal is maintained.



Image: A full view of the watch, including its soft rubber strap and buckle, illustrating its overall design for cleaning and care.

## TROUBLESHOOTING

---

- **Watch not displaying time:** Check if the battery needs replacement.

- **Buttons not responding:** Ensure the watch is not in a locked mode (if applicable) or that no debris is obstructing the buttons. If submerged, ensure buttons are not pressed underwater.
- **Display is dim:** The battery may be low and requires replacement.
- **Condensation inside the watch:** This indicates a breach in the water resistance. Avoid further water exposure and seek professional repair.

## SPECIFICATIONS

---

<b>Brand:</b>	Xufeng
<b>Model:</b>	SH-797
<b>Display Type:</b>	Digital
<b>Display Format:</b>	12/24 Hour
<b>Case Material:</b>	ABS
<b>Strap Material:</b>	Soft Rubber
<b>Water Resistance:</b>	25 meters
<b>Daily Alarm:</b>	Yes
<b>Backlight:</b>	Yes
<b>Stopwatch:</b>	Yes
<b>Case Dimensions:</b>	4.0 cm x 4.0 cm
<b>Strap Length:</b>	27 cm

## WARRANTY AND SUPPORT

---

For information regarding warranty coverage and customer support, please refer to the documentation provided at the time of purchase or contact your retailer. Specific warranty terms may vary by region and seller.