

EGO Power+ BCA1220

EGO Power+ BCA1220 12-inch Brush Cutter Attachment Instruction Manual

1. INTRODUCTION

This manual provides essential information for the safe and effective operation, maintenance, and setup of your EGO Power+ BCA1220 12-inch Brush Cutter Attachment. This attachment is designed for use with EGO POWER+ Multi-Head System Power Heads (PH1400 and PH1420, sold separately) to clear thick, overgrown areas. The BCA1220 features a 3-tooth steel blade, providing a 12-inch cutting width suitable for clearing overgrown brush, thick stalky vegetation, and saplings up to 1-inch thick. It is constructed with a durable carbon fiber shaft and is IPX4-rated for weather resistance.

2. SAFETY INFORMATION

WARNING: Always read and understand all safety warnings and instructions before operating this product. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

When operating the EGO Power+ BCA1220 Brush Cutter Attachment, always wear appropriate personal protective equipment. This includes safety glasses, gloves, and sturdy shoes. Be aware of flying debris during operation. Ensure children and pets are kept at a safe distance from the operating area.


3. COMPONENTS

- EGO Power+ BCA1220 Brush Cutter Attachment
- 3-tooth steel blade (pre-installed)
- Blade guard
- Carbon fiber shaft

Note: The EGO POWER+ Multi-Head System Power Head (PH1400 or PH1420) and battery are sold separately and are required for operation.



Figure 3.1: EGO Power+ BCA1220 12-inch Brush Cutter Attachment.

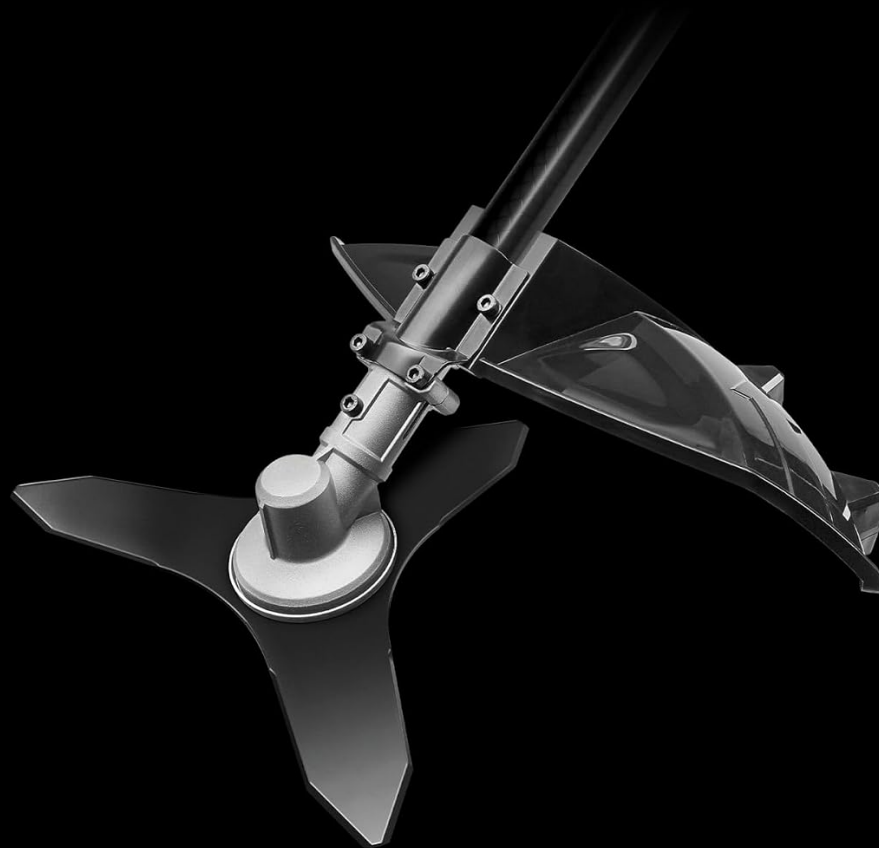


3-TOOTH STEEL BLADE WITH 12" CUTTING WIDTH

Figure 3.2: Close-up view of the 3-tooth steel blade, which provides a 12-inch cutting width.

4. SETUP AND ASSEMBLY

The EGO Power+ BCA1220 Brush Cutter Attachment is designed for quick and easy connection to your EGO POWER+ Multi-Head System Power Head.

1. **Prepare the Power Head:** Ensure the power head is turned off and the battery is removed before attaching or detaching any accessories.
2. **Align the Attachment:** Locate the coupling on the power head and the shaft of the brush cutter attachment. Align the arrow on the attachment shaft with the arrow on the power head coupling.
3. **Insert and Secure:** Push the attachment shaft into the power head coupling until it clicks into place. Rotate the locking knob on the power head clockwise to securely fasten the attachment. Ensure the attachment is firmly seated and does not wobble.
4. **Verify Connection:** Gently pull on the attachment to confirm it is securely locked to the power head.

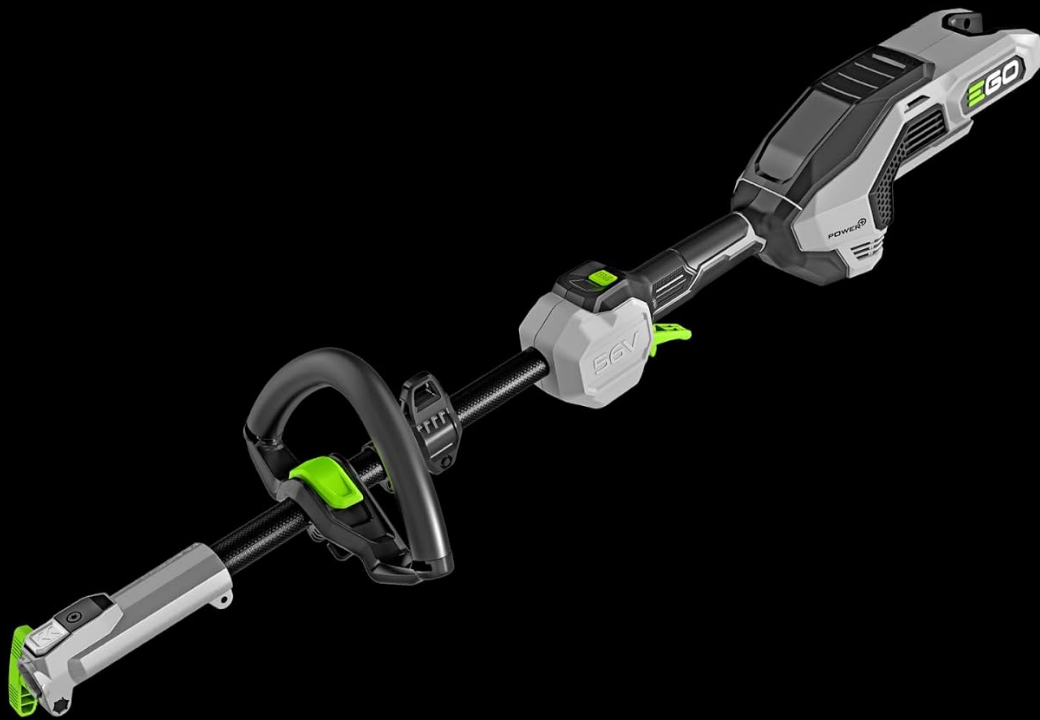

**EXCLUSIVELY COMPATIBLE WITH
POWER+ POWER HEAD PH1420
NOT INCLUDED, AVAILABLE SEPARATELY**

Figure 4.1: The BCA1220 Brush Cutter Attachment shown connected to a compatible EGO Power+ Multi-Head System Power Head (PH1420).

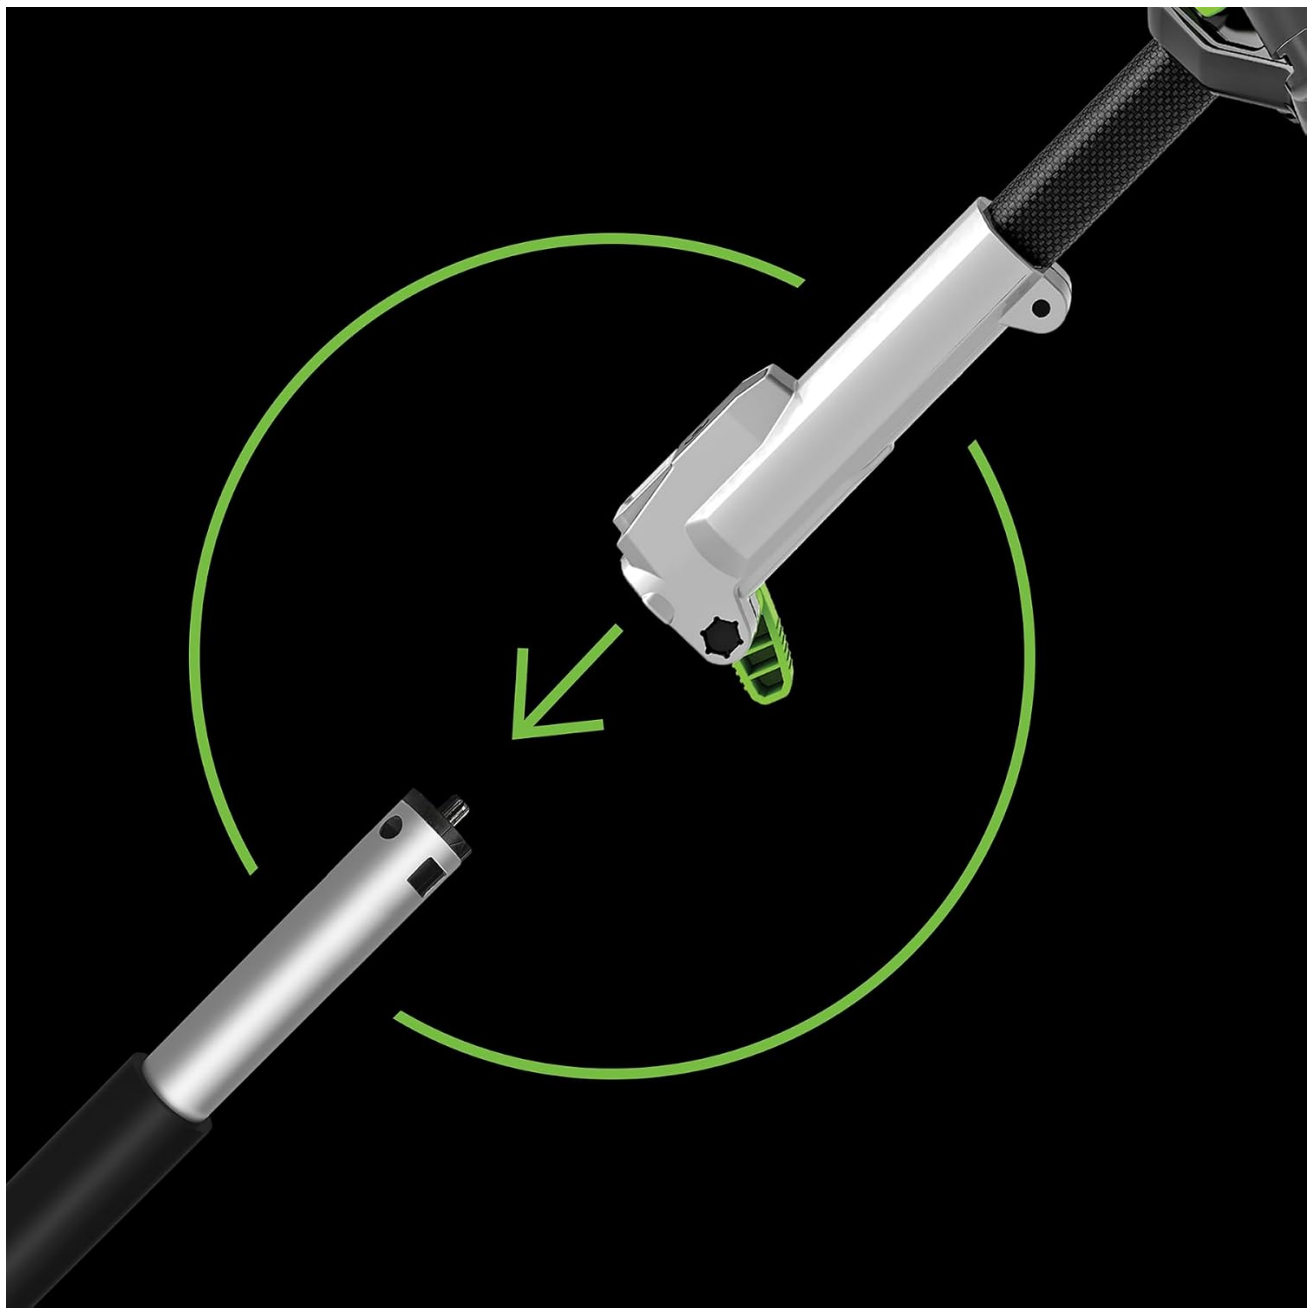


Figure 4.2: Visual guide for attaching the brush cutter to the power head, highlighting the alignment and locking mechanism.

5. OPERATING INSTRUCTIONS

Once the brush cutter attachment is securely connected to the power head and a charged battery is installed, you are ready to operate the tool.

1. **Starting the Tool:** Press the safety lock-off button and then squeeze the trigger to start the motor. The blade will begin to rotate.
2. **Cutting Technique:** Hold the tool firmly with both hands. Position the blade parallel to the ground or at a slight angle, depending on the vegetation. Use a sweeping motion to cut through brush. For thicker vegetation, approach slowly and allow the blade to reach full speed before engaging.
3. **Clearing Thick Brush:** The 3-tooth steel blade is effective for clearing overgrown brush, thick stalky vegetation, and saplings up to 1-inch in diameter. Do not force the blade through excessively thick material; allow the tool to work at its own pace.
4. **Stopping the Tool:** Release the trigger to stop the motor and blade rotation. The blade will coast to a stop.

Always maintain a balanced stance and be aware of your surroundings. Avoid cutting near obstacles that could

cause kickback or damage the blade.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your brush cutter attachment.

- **Blade Inspection:** Before each use, inspect the blade for sharpness, cracks, or damage. A dull or damaged blade can reduce cutting efficiency and increase the risk of injury. Replace damaged blades immediately.
- **Blade Sharpening:** The 3-tooth steel blade can be sharpened as needed. Refer to a qualified service technician or use appropriate sharpening tools and techniques. Always remove the battery and wear protective gloves when handling the blade.
- **Cleaning:** After each use, clean the blade and blade guard of any debris, sap, or dirt. Use a stiff brush and a damp cloth. Do not use solvents that could damage plastic parts.
- **Storage:** Store the attachment in a dry, secure location, out of reach of children. Detach it from the power head for compact storage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Attachment vibrates excessively	Blade not centered or securely tightened; damaged blade.	Ensure the blade is perfectly centered and the retaining nut is tightened. Inspect the blade for damage and replace if necessary.
Poor cutting performance	Dull or damaged blade; attempting to cut material too thick.	Sharpen or replace the blade. Reduce the thickness of the material being cut.
Attachment does not connect securely to power head	Improper alignment; locking knob not fully tightened.	Re-align the arrows and push firmly until it clicks. Ensure the locking knob is fully tightened clockwise.

8. SPECIFICATIONS

- **Model Number:** BCA1220
- **Cutting Width:** 12 inches
- **Maximum Speed:** 6000 rpm
- **Item Weight:** 2.2 pounds
- **Shaft Material:** Carbon Fiber
- **Weather Resistance:** IPX4-rated
- **Compatibility:** EGO POWER+ Multi-Head System Power Heads (PH1400, PH1420)

9. WARRANTY AND SUPPORT

The EGO Power+ BCA1220 Brush Cutter Attachment comes with a lifetime warranty on its carbon fiber shaft, ensuring long-term durability and performance. For specific warranty details and terms, please refer to the warranty card included with your product or visit the official EGO Power+ website.

For technical support, replacement parts, or further assistance, please contact EGO Power+ customer service or

visit the [EGO Power+ Store on Amazon](#).

© 2026 EGO Power+. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question