

Natec Cabassu G2

Natec Cabassu G2 Midi Tower PC Case User Manual

Model: Cabassu G2 (S5624687)

INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your Natec Cabassu G2 Midi Tower PC Case. Please read this manual thoroughly before beginning installation to ensure proper setup and optimal performance.



Figure 1: Natec Cabassu G2 Midi Tower PC Case. This image shows the front and left side of the black PC case, highlighting its sleek design and front panel layout.

SAFETY INFORMATION

- Always disconnect the power supply from the wall outlet before installing or removing any components.
- Handle components with care to prevent damage from static electricity.
- Keep the case away from water, moisture, and extreme temperatures.
- Ensure proper ventilation to prevent overheating.
- Do not attempt to open the power supply unit.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Natec Cabassu G2 Midi Tower PC Case
- Accessory kit (screws, standoffs, cable ties)
- User Manual (this document)

SETUP AND COMPONENT INSTALLATION

1. Preparing the Case

1. Place the case on a flat, stable surface.
2. Remove the side panels by unscrewing the thumbscrews at the rear and sliding the panels backward.



Figure 2: Interior view of the Natec Cabassu G2 case with the side panel removed, illustrating the internal layout for component installation.

2. Motherboard Installation

1. Install the I/O shield into the rear opening of the case.
2. Align the motherboard with the pre-installed standoffs. The Cabassu G2 supports Mini ITX, Micro ATX, and ATX motherboards.
3. Secure the motherboard with the provided screws.

3. Power Supply Installation

1. The power supply mounts at the bottom of the case.
2. Slide the power supply into its designated bay from the rear of the case.
3. Secure it with screws from the rear.

4. Storage Drive Installation

- **2.5" Drives (SSDs/HDDs):** The case features 3 x 2.5" drive bays. Mount drives using the provided screws in the designated locations.
- **3.5" Drives (HDDs):** The case also supports 3.5" drives.

5. Expansion Card Installation

1. Remove the necessary expansion slot covers from the rear of the case (7 expansion slots available).
2. Insert your graphics card or other expansion cards into the motherboard's PCIe slots.
3. Secure the cards with screws.



Figure 3: Rear view of the Natec Cabassu G2 case, detailing the I/O shield cutout, power supply opening, and seven expansion slots.

6. Cable Management

Route cables behind the motherboard tray where possible to improve airflow and aesthetics. Use the included cable ties to secure bundles.

7. Connecting Front Panel Cables

Connect the front panel cables (USB 2.0, USB 3.0, audio, power switch, reset switch, HDD LED, power LED) to the corresponding headers on your motherboard. Refer to your motherboard manual for exact pin assignments.



Figure 4: Close-up of the Natec Cabassu G2 front panel, showing 2x USB 2.0 ports, 2x USB 3.0 ports, audio jacks, and power/reset buttons.

OPERATING INSTRUCTIONS

Powering On/Off

- **Power On:** Press the power button located on the front panel.
- **Power Off:** Initiate shutdown through your operating system. For a forced shutdown, press and hold the power button for several seconds.
- **Reset:** Press the reset button on the front panel to restart the system.

Using Front Panel Ports

The front panel provides convenient access to:

- 2 x USB 2.0 ports
- 2 x USB 3.0 ports
- Audio input (microphone) and output (headphone) jacks

Connect compatible devices to these ports as needed.

MAINTENANCE

Cleaning

- Regularly clean the exterior of the case with a soft, damp cloth. Avoid abrasive cleaners.
- Use compressed air to remove dust from fan filters and internal components. Ensure the system is powered off and unplugged before cleaning.

Dust Filters

The case may include removable dust filters. Periodically remove and clean these filters to maintain optimal airflow and cooling performance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
System does not power on.	Power cables not connected properly. Faulty power supply.	Check all power connections (motherboard, CPU, GPU, power supply to wall). Ensure power supply switch is ON.
Front panel USB ports not working.	Front panel USB cables not connected to motherboard.	Verify that the USB 2.0 and USB 3.0 headers are correctly connected to the motherboard.
Excessive fan noise.	Dust accumulation. Loose fan.	Clean dust from fans and filters. Ensure all fans are securely mounted.

SPECIFICATIONS

Feature	Detail
Model Name	Cabassu G2
Item Model Number	S5624687
Case Type	Midi Tower
Dimensions (LxWxH)	19.69 x 19.69 x 11.02 inches (50 x 50 x 28 cm)
Weight	7.04 pounds (3.19 kg)
Material	Acrylonitrile Butadiene Styrene (ABS), Alloy Steel
Motherboard Compatibility	Mini ITX, Micro ATX, ATX
2.5" Drive Bays	3
Expansion Slots	7
Front I/O Ports	2 x USB 2.0, 2 x USB 3.0, Audio In/Out
Fan Support	120mm (rear, pre-installed if applicable)
Cooling Method	Air
Power Supply Mounting	Bottom Mount

WARRANTY INFORMATION

Natec products are covered by a manufacturer's warranty. Specific warranty terms and conditions may vary by region and retailer. Please refer to the warranty card included with your product or visit the official Natec website for detailed information regarding warranty coverage and claims.

SUPPORT

For technical assistance, troubleshooting, or further inquiries, please visit the official Natec support website or contact their customer service department. Contact information can typically be found on the product packaging or the official brand website.

Website: www.natec-zone.com (Example link, actual link may vary)

